


 

$U_P = 5V \pm 5\%$   
(max. 150 mA)

$U_P = 10 \dots 30V$   
(max. 150 mA)




EN 50 178/4.98; 5.2.9.5  
IEC 364-4-41: 1992; 411(PELV/SELV)





(siehe, see, voir, vedi, véase  
HEIDENHAIN D 231 929)

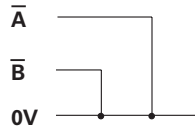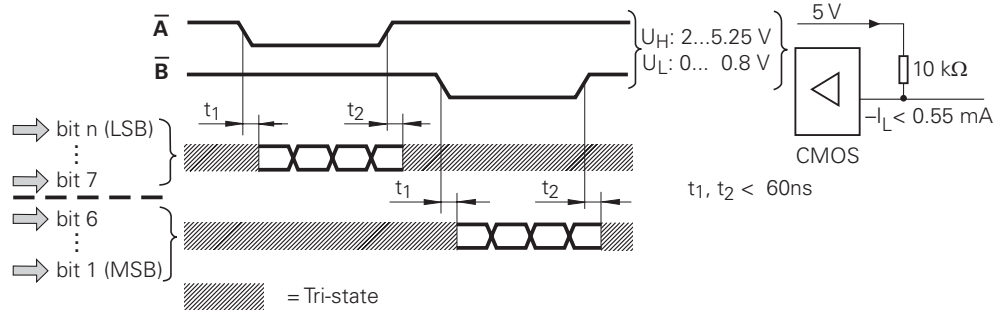

**TTL**

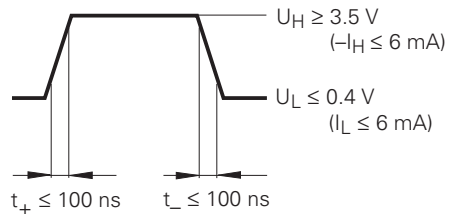

**HTL**

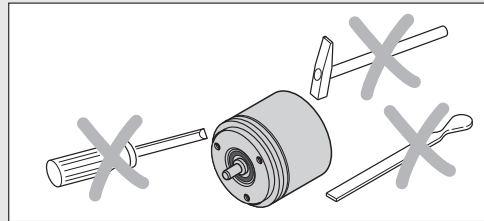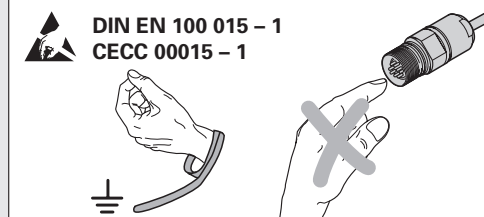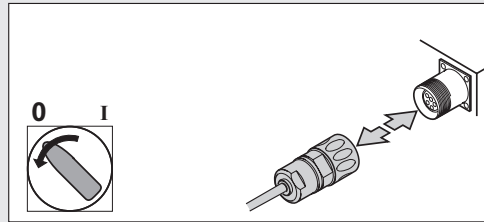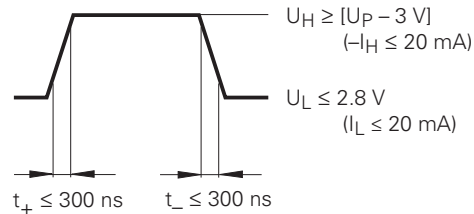

# HEIDENHAIN

Montageanleitung  
*Mounting Instructions*  
Instructions de montage  
*Istruzioni di montaggio*  
Instrucciones de montaje

parallel output:

**ROC 411**  
**ROC 412**  
**ROC 413**  
**ROC 414**

4/98

## DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 (86 69) 31-0

FAX +49 (86 69) 50 61

E-Mail: info@heidenhain.de

**Technical support** ☎ +49 (86 69) 32-1000

**Measuring systems** ☎ +49 (86 69) 31-31 04

E-Mail: service.ms-support@heidenhain.de

**TNC support** ☎ +49 (86 69) 31-31 01

E-Mail: service.nc-support@heidenhain.de

**NC programming** ☎ +49 (86 69) 31-31 03

E-Mail: service.nc-pgm@heidenhain.de

**PLC programming** ☎ +49 (86 69) 31-31 02

E-Mail: service.plc@heidenhain.de

**Lathe controls** ☎ +49 (86 69) 31-31 05

E-Mail: service.lathe-support@heidenhain.de

[www.heidenhain.de](http://www.heidenhain.de)



Ve 00

263 796-93 · 3 · 12/2007 · H · Printed in Germany · Änderungen vorbehalten

Subject to change without notice · Sous réserve de modifications · Con riserva di modifiche · Sujeto a modificaciones

