



HEIDENHAIN



User's Manual

PROFINET

Interface for Encoders

English (en)
05/2019

Content

List of tables	6
List of figures	8
1 Introduction	10
1.1 About absolute encoders	10
1.2 About encoder gateway	10
1.3 About PROFINET technology.....	11
1.4 Encoder Profiles	13
1.5 References	14
1.6 Abbreviations	15
2 Installation.....	16
2.1 Installation Checklist.....	16
2.2 Cables and standards.....	17
2.3 Connectors and pin configuration.....	18
2.4 Connectors and pin configuration for PROFINET gateway.....	19
2.5 Shielding concept of the device.....	21
2.6 MAC-address.....	21
2.7 LED indication.....	22
3 Configuration example with SIMOTION Scout	23
3.1 Device description file installation (GSDML)	23
3.2 Setting encoder configuration.....	25
3.3 Setting encoder device name	28
3.4 Setting encoder parameters	32
3.5 Isochronous real time settings (RT Class 3)	35
4 Configuration example with TIA-portal.....	39
4.1 Installation of GSDML files	39
4.2 Setting encoder configuration.....	41
4.3 Assign the device to the IO controller	43
4.4 Setting encoder IP address and encoder device name	44
4.5 Assigning Device name.....	45
4.6 Setting encoder parameters	47

5 PROFINET IO data description	49
5.1 Encoder profile overview, PNO order no.3.162	49
5.2 Application Class definition	50
5.3 Standard and manufacturer specific signals	51
5.4 Standard telegrams	52
5.5 Standard Telegram 81	53
5.6 Standard Telegram 82	54
5.7 Standard Telegram 83	55
5.8 Standard Telegram 84	56
5.9 Standard Telegram 86	57
5.10 Standard Telegram 87	57
5.11 Standard Telegram 88	58
5.12 Standard Telegram 89	59
5.13 Manufacturer telegram 59000	60
5.14 Manufacturer telegram 59001	62
5.15 Format of G1 XIST1 and G1 XIST2	63
5.16 Format of G1 XIST3	64
5.17 Sensor preset control word (G1 XIST1 PRESET B)	64
5.18 Sensor preset control word (G1 XIST1 PRESET B1)	65
5.19 Sensor preset control word (G1 XIST1 PRESET C)	65
5.20 Control word 2 (STW2 ENC)	66
5.21 Status word 2 (ZSW2 ENC)	67
5.22 Control word (G1 STW)	69
5.23 Status word (G1 ZSW)	70
5.24 Real time communication	71
6 Alarms and warnings.....	73
6.1 Diagnostics and Alarms	73
6.2 Channel diagnostics	73
6.2.1 Extended channel diagnostics	74
6.3 Error codes in G1 XIST 2	75

Content

7 Acyclic Parameter Data.....	76
7.1 Acyclic data exchange	76
7.2 Identification and Maintenance (I&M functions)	76
7.3 Base mode parameter access	77
7.3.1 General characteristics	77
7.3.2 Parameter requests and responses.....	77
7.3.3 Changing the preset value	77
7.3.4 Reading the preset value.....	78
7.4 Supported parameters	79
7.4.1 Parameter 922, read only	79
7.4.2 Parameter 925, read/write	79
7.4.3 Parameter 964, read only	79
7.4.4 Parameter 965, read only	79
7.4.5 Parameter 971, read/write	79
7.4.6 Parameter 972, read/write	79
7.4.7 Parameter 974, read only.....	79
7.4.8 Parameter 975, read only	80
7.4.9 Parameter 979, read only	80
7.4.10 Parameter 980, read only	80
7.4.11 Parameter 60000, read/vwrite	81
7.4.12 Parameter 60001, read/vwrite	81
7.4.13 Parameter 61000, read/vwrite	81
7.4.14 Parameter 61001, read only	81
7.4.15 Parameter 61002, read only	81
7.4.16 Parameter 61003, read only	81
7.4.17 Parameter 61004, read only	82
7.4.18 Parameter 65000, read/write	82
7.4.19 Parameter 65001, read only	82
7.4.20 Parameter 65002, read/write	83
7.4.21 Parameter 65003, read only	83
7.4.22 Parameter 65004, read/write	83
7.4.23 Parameter 65005, read/write	84
7.4.24 Parameter 65006, read/write	84
7.4.25 Parameter 65007, read/write	84
7.4.26 Parameter 65008, read/write	84
7.4.27 Parameter 65009, read/write	84
7.5 Example of reading and writing to a parameter	85
7.5.1 Used blocs	86

8 Functional description of the device	94
8.1 Code sequence	96
8.2 Class 4 functionality	97
8.3 G1 XIST1 – Preset control	97
8.4 Scaling function control	98
8.5 Alarm channel control (Profile V3)	98
8.6 Encoder profile V3.1 Compatibility	99
8.7 Encoder profile	100
8.8 Encoder type	100
8.9 Preset value	101
8.10 Scaling function parameters	103
8.10.1 Measuring units per revolution	103
8.10.2 Total measuring range	104
8.11 Velocity reference value	109
8.12 Maximum Master Sign-of-Life failures	109
8.13 Velocity measuring units	110
8.14 Encoder profile version.....	112
8.15 Operating time.....	113
8.16 Offset value	113
8.17 Acyclic data.....	114
8.17.1 PROFIdrive parameters	114
8.17.2 Device parameter numbers	115
8.17.3 Parameter 65000 and 65002– Preset value	117
8.17.4 Parameter 65001 – Operating status	118
8.17.5 Parameter 65003 – Operating status 64 bit.....	121
8.17.6 Parameter 65004 – Function control.....	122
8.17.7 Parameter 65005 – Parameter control.....	123
8.17.8 Parameter 65006-65009 – Scaling function	125
8.17.9 Identification & Maintenance functions	126
9 Firmware upgrade.....	127
10 Device replacement using LLDP	128
11 Encoder state description	134
11.1 Normal Operation state.....	134
11.1.1 Profile version 4.x	134
11.1.2 Profile version 3.x	134
11.1.3 Profile version 3.x and 4.x	134
11.2 Parking state	134
11.3 Set/shift home position (Preset).....	134
11.3.1 Preset depending on different telegrams	135
11.3.2 Absolute preset with negative value.....	135
11.4 Error state	135
11.5 Error acknowledgement.....	135
11.6 Start up	135
12 Frequently asked questions FAQ	136

List of tables

Table 1	Bus Connection	18
Table 2	Power supply connection	18
Table 3	Power supply connection gateway	19
Table 4	EnDat connection	20
Table 5	Led indication	22
Table 6	GSDML files	23
Table 7	GSDML file	39
Table 8	Standard signals.....	51
Table 9	Supported telegram.....	52
Table 10	Output data Telegram 81	53
Table 11	Input data Telegram 81	53
Table 12	Output data Telegram 82	54
Table 13	Input data Telegram 82	54
Table 14	Output data Telegram 83	55
Table 15	Input data Telegram 83	55
Table 16	Output data Telegram 84	56
Table 17	Input data Telegram 84	56
Table 18	Output data Telegram 86	57
Table 19	Input data Telegram 86	57
Table 20	Output data Telegram 87	57
Table 21	Input data Telegram 87	57
Table 22	Output data Telegram 88	58
Table 23	Input data Telegram 88	58
Table 24	Output data Telegram 89	59
Table 25	Input data Telegram 89	59
Table 26	Output data Telegram 59000.....	60
Table 27	Input data Telegram 59000.....	61
Table 28	Output data Telegram 59001	62
Table 29	Input data Telegram 59001	62
Table 30	Format of G1_XIST3	64
Table 31	G1 XIST1 PRESET B	64
Table 32	G1 XIST1 PRESET B1	65
Table 33	G1 XIST1 PRESET C	65
Table 34	Control word 2 (STW2 ENC)	66
Table 35	Detailed assignment of control word 2 (STW2 ENC).....	66
Table 36	Status word 2 (ZSW2 ENC).....	67
Table 37	Detailed assignment of status word 2 (ZSW2 ENC)	68
Table 38	Control word (G1 STW)	69
Table 39	Status word (G1 ZSW).....	70
Table 40	Channel diagnostics.....	73
Table 41	Manufacturer specific error types	74
Table 42	Error codes in G1 XIST 2	75
Table 43	Changing the preset value.....	77
Table 44	Reading the preset value (request)	78
Table 45	Reading the preset value (response)	78
Table 46	Hardware components.....	85

Table 47	Software components	85
Table 48	Parameters of SFB52	89
Table 49	Parameters of SFB53	90
Table 50	Supported functions	95
Table 51	Code sequence	96
Table 52	Class 4 functionality	97
Table 53	G1 XIST1 – Preset control	97
Table 54	Scaling function control	98
Table 55	Alarm channel control	98
Table 56	Profile V3.1 compatibility mode	99
Table 57	Compatibility mode overview	99
Table 58	Encoder profile	100
Table 59	Encoder type	100
Table 60	Measuring units per revolution	103
Table 61	Maximum master Sign of life failures	109
Table 62	Velocity measuring units for encoders	110
Table 63	Velocity measuring units for gateways	111
Table 64	Max permitted rotational speed	111
Table 65	Encoder profile	112
Table 66	Operating time	113
Table 67	Offset value	113
Table 68	Supported PROFdrive parameters	114
Table 69	Device specific parameter	116
Table 70	Parameter 65000, Preset value	117
Table 71	Parameter 65002, Preset value 64 bit	117
Table 72	Parameter 65001, Operating status	118
Table 73	Parameter 65001, Sub index	119
Table 74	Parameter 65001, Sub index 1	120
Table 75	Parameter 65003, Operating status 64 bit	121
Table 76	Parameter 65003	121
Table 77	Parameter 65004, Function control	122
Table 78	Parameter 65004, Bit definition	122
Table 79	Parameter 65005, Parameter control	123
Table 80	Parameter 65005, Bit definition	123
Table 81	Parameter 65005, Detailed bit definition	124
Table 82	Parameters 65006-9, Scaling function	125
Table 83	Identification & Maintenance	126

List of figures

Figure 1	Encoder Port 1 and 2	18
Figure 2	Encoder power supply.....	18
Figure 3	Gateway connectors.....	19
Figure 4	Installation of GSDML file	24
Figure 5	Encoder configuration.....	25
Figure 6	Example of connected encoder	26
Figure 7	Telegram selection.....	27
Figure 8	Selected telegram	27
Figure 9	How to set encoder device name.....	28
Figure 10	Device name.....	28
Figure 11	Assign device name	29
Figure 12	Assign name	30
Figure 13	How to verify device name	30
Figure 14	Verify device name	31
Figure 15	Parameter Access Point (slot 1.1).....	32
Figure 16	Example of parameter data.....	33
Figure 17	Save and compile.....	34
Figure 18	Download settings.....	34
Figure 19	Open interface properties	35
Figure 20	RT Class option	35
Figure 21	Interface properties	36
Figure 22	IO Cycle properties	36
Figure 23	Port settings	37
Figure 24	Topology settings	37
Figure 25	Domain management.....	38
Figure 26	GSDML installation.....	40
Figure 27	Encoder configuration.....	41
Figure 28	Telegram selection.....	42
Figure 29	Assign IO controller	43
Figure 30	IP address and device name settings	44
Figure 31	Assigning Device name.....	45
Figure 32	Assign name	46
Figure 33	Assign name OK.....	46
Figure 34	Setting encoder parameters.....	47
Figure 35	Example of parameter data.....	47
Figure 36	Compile.....	48
Figure 37	Download settings.....	48
Figure 38	Overview of encoder profiles.....	49
Figure 39	Absolute value in G1 XIST1	63
Figure 40	Absolute value in G1 XIST2	63
Figure 41	Real time communication	71
Figure 42	Request data block, DB1	86
Figure 43	Response data block, DB2	86
Figure 44	Instance data block, DB3.....	87
Figure 45	Instance data block, DB4.....	87
Figure 46	Organization block, OB1	88

Figure 47	Diagnostic address of slot 1	91
Figure 48	Variable table	92
Figure 49	Cyclic operation.....	105
Figure 50	Non cyclic operation, preset control enabled.....	106
Figure 51	Non cyclic operation, preset control disabled.....	107
Figure 52	Firmware upgrade PC software	127
Figure 53	LLDP Properties.....	128
Figure 54	LLDP Port configuration.....	129
Figure 55	LLDP Partner port settings	130
Figure 56	Open Topology editor.....	131
Figure 57	Topology editor.....	131
Figure 58	Edit Ethernet node.....	132
Figure 59	Factory reset.....	133
Figure 60	Factory set configuration.....	133

1 Introduction

1.1 About absolute encoders

With an absolute encoder each angular position is assigned a coded position value generated by a code disc equipped with several parallel fine graduations tracks which are scanned individually. On singleturn encoders, i.e. an encoder producing absolute positions within one revolution, the absolute position information repeats itself with every revolution. So called multiturn encoders can also distinguish between revolutions. The numbers of unique revolutions is determined by the resolution of the multiturn scanning and repeats itself after the total resolution is reached. A major benefit of absolute encoder type is that if the encoder loses power, the encoder is able to keep track of its position also if the shaft is turned during the power loss. This is due to the genuine absolute scanning principle.

An absolute encoder can also be used to calculate a digital speed value. By internally dividing the difference in position with a small delta time an accurate speed value can be calculated and transmitted to the subsequent electronics for closed loop control.

1.2 About encoder gateway

The advantages of the gateway concept is that it allows the use of small and very robust EnDat encoders, which make the encoder gateway solution suitable in applications where very high ambient temperature is a limiting factor. Another benefit with the gateway solution is that in case of an encoder error occurs, the EnDat encoder can easily be replaced without the need to disconnect the PROFINET bus. The encoder gateway supports singleturn encoders with up to 31 bit resolution and multiturn encoders with up to 37 bits resolution with the limitations described in this manual. The encoder gateway also supports EnDat linear scales with up to 48 bit resolution. Only encoders with order designation "EnDat22" may be used.

1.3 About PROFINET technology

PROFINET is the open industrial Ethernet standard of PROFIBUS & PROFINET International (PI) for automation. PROFINET uses TCP/IP and IT standards, and is in effect, real-time Ethernet. The PROFINET concept features a modular structure so that users can select the cascading functions themselves. They differ essentially because of the type of data exchange to fulfill the partly very high requirements of speed.

In conjunction with PROFINET, the two perspectives PROFINET CBA and PROFINET IO exist. PROFINET CBA is suitable for the component-based communication via TCP/IP and the real-time communication for real-time requirements in modular systems engineering. Both communication options can be used in parallel.

PROFINET IO was developed for real time (RT) and isochronous real time (IRT) communication with the de-centralized periphery. The designations RT and IRT merely describe the real-time properties for the communication within PROFINET IO.

To achieve these functions, three different protocol levels are defined:

- TCP/IP for PROFINET CBA and the commissioning of a plant with reaction times in the range of 100ms
- RT (Real-Time) protocol for PROFINET CBA and PROFINET IO applications with 1 ms cycle time.
- IRT (Isochronous Real-Time) for PROFINET IO applications in drive systems with cycles times of 1ms.

Interfacing the peripherals devices such as encoders is implemented by PROFINET IO. Its basis is a cascading real-time concept. PROFINET IO defines the entire data exchange between controllers (devices with "master functionality") and the devices (devices with "slave functionality"), as well as parameter setting and diagnosis.

PROFINET IO is designed for the fast data exchange between Ethernet-based field devices and follows the provider-consumer model. The configuration of an IO-System has been kept nearly identical to the "look and feel" of PROFIBUS.

A PROFINET IO system consists of the following devices:

- The IO Controller, which contains the automation program and controls the automation task.
- The IO Device, which is a field device such as an encoder, monitored and controlled by an IO Controller.
- The IO Supervisor is software typically based on a PC for setting parameters and diagnosing individual IO Devices.

An application relation (AR) is established between an IO Controller and an IO Device. These ARs are used to define communication relations (CR) with different characteristics for the transfer of parameters, cyclic exchange of data and handling of alarms.

The characteristics of an IO Device are described by the device manufacturer in a General Station Description (GSD) file. The language used for this purpose is the GSDML (GSD Markup Language) - an XML based language. The GSD file provides the supervision software with a basis for planning the configuration of a PROFINET IO system.

Within PROFINET IO, process data and alarms are always transmitted in real time (RT). Real time in PROFINET is based on the definition of IEEE and IEC, which allow for only a limited time for execution of real-time services within a bus cycle. The RT communication represents the basis for the data exchange for PROFINET IO and real-time data are always treated with a higher priority than TCP (UDP)/IP data.

1.4 Encoder Profiles

Profiles are predefined configurations of the functions and features available from PROFINET for use in specific devices or applications such as encoders. They are specified by PI (PROFIBUS & PROFINET International) working groups and published by PI. Profiles are important for openness, interoperability and interchangeability, so that the end user can be sure that similar equipment from different vendors perform in a standardized way.

HEIDENHAIN devices comply with the definitions in the encoder profile 3.162, version 4.2. The encoder device profile describing encoder functionality and additional information about PROFINET can be ordered from PROFIBUS User Organization, PNO.

PROFINET is generally defined by PROFIBUS & PROFINET International (PI) and backed by the INTERBUS Club and, since 2003, is part of the IEC 61158 and IEC 61784 standards.

PROFIBUS User Organization

Haid-und-Neu Straße 7
D 76131 Karlsruhe
Tel: +49 721 96 58 590
Fax: + 49 721 96 58 589
Web: www.profibus.com

1.5 References

Profile Encoders for PROFIBUS and PROFINET V4.1,
Order No. 3.162

Profile Encoders for PROFIBUS and PROFINET V4.2,
Order No. 3.162

Profile Drive Technology, PROFIdrive V4.2,
PROFIBUS International, Order No. 3.172

PROFIBUS Encoder Profile V1.1, PROFIBUS International, Order
No. 3.062

PROFIBUS Guidelines, Part 1: Identification & Maintenance
Functions V1.1, PROFIBUS International, Order No. 3.502

PROFIBUS Guidelines, Part 3: Diagnosis, Alarms and Time
Stamping V1.0, PROFIBUS International, Order No. 3.522

PROFINET Application Layer Service Definition Application Layer
Protocol Specification, Version 2.0,
PROFIBUS International, Order No. 2.332

PROFIBUS Guidelines: PROFIBUS Interconnection Technology
V1.1, PROFIBUS International, Order No. 2.142

PROFINET Guidelines: PROFINET Cabling and Interconnection
Technology V1.99, PROFIBUS International, Order No. 2.252

1.6 Abbreviations

PI	PROFIBUS and PROFINET International
IO	Input/output
DO	Drive Object
DU	Drive Unit
AR	Application Relation
CR	Communication Relation
MLS	Master Sign-Of-Life
RT	Real Time Ethernet
IRT	Isochronous Real Time Ethernet
IsoM	Isochronous Mode
LLDP	Link Layer Discovery Protocol
GSD	General Station Description
GSDML	General Station Description Markup Language
UDP	User Datagram Protocol
TCP	Transmission Control Protocol
IP	Internet Protocol
DHCP	Dynamic Host Configuration Protocol
TFTP	Trivial File Transfer Protocol
MAC	Media Access Control
I&M	Identification & Maintenance
MSW	Most significant Word (upper part of Unsigned64)
LSW	Least Significant Word (Lower part of Unsigned64)
RPM	Revolutions per minute
DCP	Discovery and Configuration protocol

2 Installation

A summary of the PROFINET guideline: PROFINET Cabling and interconnection Technology V 1.99, PROFIBUS International, Order No 2.252 is provided in this section.

2.1 Installation Checklist

This chapter contains a simplified checklist for installation and setup of the device.

- Setup the hardware and connect the cabling according to the mounting instruction. Always use shielded cables, also for the power supply.
- Install the correct GSDMLfile for the device. Please note that the encoder and gateway uses different GSDML files.
- Configure the device/devices according to this manual.
 - Choose configuration, singleturn or multturn.
 - Choose telegram
 - Configure the IP address settings and give the device a unique Device name.
 - Configure the encoder module parameters
 - Compile and download the configuration

Note: **If using a gateway together with an EnDat encoder, make sure that the EnDat encoder is connected to the gateway.**

2.2 Cables and standards


Two shielded copper cables twisted in pairs are defined as the normal transmission medium for PROFINET networks. In such networks the signal transmission is performed in accordance with 100BASE-TX at a transmission speed of 100 Mbps (Fast-Ethernet).

Only shielded cables and connecting elements are allowed in a PROFINET network. The individual components have to satisfy the requirements of Category 5 in accordance with IEC 11801. The entire transmission path has to meet the requirements of Class D in accordance with IEC 11801. Furthermore, PROFINET cables shall have a cable cross-section of AWG 22 in order to enable even complex cabling structures through minimum damping. For this reason, the specification of the PROFINET cables supports a modular setup, which ensures an IEC 11801-compliant structure on adherence to simple installation rules.

Transmission channels lengths are determined by the type of cable being used. The choice of cable is to be such that a transmission channel length of 100 meter is achieved between two active network devices. The use of a high number of plug connections has a negative effect on attenuation and reflection and consequently reduces the transmission channel length. A maximum of three interconnections can be inserted between two active devices without reduction of the permissible transmission lengths of 100 meters.

2.3 Connectors and pin configuration

M12 connectors are used for connecting the bus lines to the encoder. The M12 connector used is a 4-pin female shielded D-coded version.

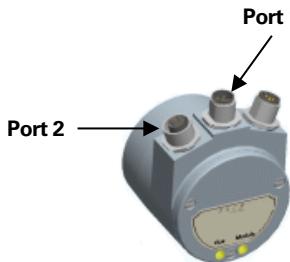


Signal	Function	Pin
TX+	Transmission data +	1
TX-	Transmission data -	3
RX+	Receiver data +	2
RX-	Receiver data -	4

Table 1 Bus Connection

Figure 1 Encoder Port 1 and 2

Note: The encoder provides integrated switch functionality between the two M12 connectors used for PROFINET communication. It is important to distinguish between these ports when IRT-communication is used.

The M12 connector used for power supply of the encoder is a 4-pin male shielded A-coded version.

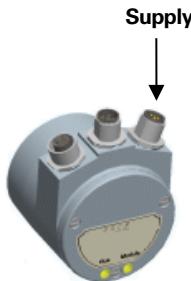

Signal	Function	Pin
+E Volt	Power supply	1
Not connected		2
0 Volt	0 Volt	3
Not connected		4

Table 2 Power supply connection


Figure 2 Encoder power supply

Note: Passive T-couplings are not possible to use in a PROFINET network. All devices must be connected through active network components.

2.4 Connectors and pin configuration for PROFINET gateway

The PROFINET data communication is constituted by 4p M12 female D-coded connector and the power supply is constituted by a 4p M12 A-coded male connector. The EnDat encoder interface is constituted by either a 17p female CCW connector or an 8p M12 A-coded female connector depending on the model.

PROFINET and supply connection:

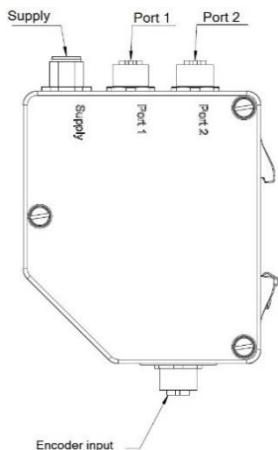

Connector type	4p M12 D-coded female	4p M12 D-coded female	4p M12 A-coded male
Function	Port 1	Port 2	Supply
TX+	1	1	-
RX+	2	2	-
TX-	3	3	-
RX-	4	4	-
+EV power source A	-	-	1
+EV power source B*)	-	-	2
0 Volt	-	-	3
0 Volt	-	-	4

*) For a secondary power supply

Table 3 Power supply connection gateway

Figure 3 Gateway connectors

EnDat connection:		
Connector type	17p M23 CCW female	8p M12 A-coded female
Function	Encoder input (17p M23)	Encoder input (8p M12)
0 Volt sensor	4	1
+E Volt sensor	1	2
Data	14	3
Data inverted	17	4
0 Volt	10	5
Clock inverted	9	6
Clock	8	7
+E Volt	7	8

Table 4 EnDat connection

Note: **The gateway provides integrated switch functionality between the two M12 connectors used for PROFINET communication. It is important to distinguish between these ports when IRT-communication is being used.**

Note **It is not possible to use passive T-coupling in a PROFINET network. All devices must be connected through active network components.**

2.5 Shielding concept of the device

Automation systems in an industrial environment are subjected to high levels of electromagnetic disturbance. Switching large electrical loads creates high interference levels that can be picked up in various ways by electronic devices with detrimental effects. Even under such conditions, electric components within an automation system must still guarantee a continuous, uninterrupted function.

The electromagnetic compatibility (EMC) of the entire plant must be ensured by using suitably designed components and assembling them correctly to make up the system. Data cabling is considered as a passive system and cannot be tested for EMC compliance individually. Nevertheless, cabling and connection elements for PROFINET supports compliance with devices requirements by providing a high-quality, comprehensive shielding concept.

To achieve the highest possible noise immunity and resistance against other EMC related disturbances **the bus and power supply cables shall always be shielded**. The screen should be connected to ground on both ends of the cable. In certain cases compensation current might flow over the screen.

2.6 MAC-address

PROFINET IO field devices are addressed using MAC addresses, device names and IP addresses. All field devices have a unique MAC address. The MAC address is constituted by a 6 byte Ethernet address for each individual station and is unique worldwide. The MAC address consists of two parts, the first 3 bytes represents the manufacturer specific ID and the last 3 bytes represents a consecutive number. The MAC address of the encoder or gateway is printed on its label for commissioning purposes.

2.7 LED indication

The following table defines diagnostic indications shown by the encoders or gateways two bi-colored LEDs.

Bus	Module	Meaning	Cause
Off	Off	No power	
Red	Green	No connection to another device. Criteria: No data exchange	- bus disconnected - Controller not available/ switched off
Blinking* red	Green	Parameterization fault, no data exchange Criteria: Data exchange correct, however the encoder did not switch to the data exchange mode	- I/O device not configured yet or wrong configuration - Wrong station address assigned - Actual configuration of the slave differs from the nominal configuration
Green	Red	System failure	Diagnosis exists, slave in data exchange mode
Green	Green	Data exchange and encoder functions properly	
Blinking* green	Blinking green	Firmware upgrade in process	
Blinking* red	Blinking red	Failure during firmware upgrade	
Red	Red	No bus communication	- Missing EnDat encoder (Gateway)
Green	Orange	Warning present	Command not supported

*) The blinking frequency is 0.5 Hz. Minimal indication time is 3 seconds.

Table 5 Led indication

3 Configuration example with SIMOTION Scout

This chapter will illustrate how to setup and configure a PROFINET encoder for working in RT Class 1 mode. In the following examples SIMOTION SCOUT V4.1.5.6 and D435 motion controller is used. Please refer to the manufacturer of the configuration tool if other configuration tools are being used.

3.1 Device description file installation (GSDML)

In order to start using an absolute encoder or encoder gateway with PROFINET interface, a device description file needs to be downloaded and imported to the configuration software. The device description file is called a **Generic Station Description Markup Language** file and contains the necessary implementation parameters needed for a PROFINET IO device.

The GSDML file can be downloaded from www.heidenhain.com

GSDML file	
Encoder	GSDML-Vx.xx-JH-PN-Encoder-xxxxxxxx.xml
Encoder Gateway	GSDML-Vx.xx-JH-PN-Gateway-xxxxxxxx.xml

Table 6 GSDML files

Installation of GSDML-files

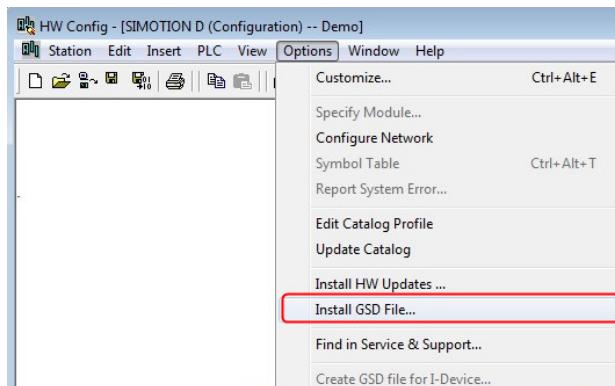


Figure 4 Installation of GSDML file

1. Select Options -> Install GSD File and click the Browse button to navigate to the location of the GSD file. If a bitmap picture representing the encoder is requested, make sure that the bitmap file is located in the same folder as the GSDML file. A bitmap file is included in the zip-file downloadable from www.heidenhain.com.
2. Select the GSD file and click the Install button to start installing the selected GSD file.

3.2 Setting encoder configuration

When the GSD file has been installed the supported encoder types can be found in the HW Configuration under PROFINET IO->Additional Field Devices->Encoders->HEIDENHAIN PROFINET Encoders. Select either multiturn or singleturn encoder, dependent on the type of encoder to be configured. Drag and drop the encoder onto the PROFINET IO system as shown in the picture below. In the example below one multiturn encoder was chosen. If more than one encoder shall be configured, then the following steps need to be done once for each device.

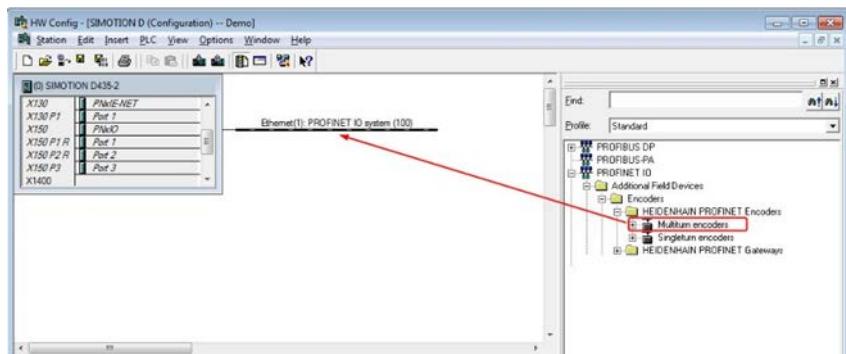


Figure 5 Encoder configuration

Note: When using a linear scale with the gateway, Singleturn/ Linear configuration should be chosen.

Configuration example with SIMOTION Scout

When correctly done, the encoder will appear on the PROFINET IO system as shown in figure 6 below. Click on the encoder device and then Click on the EO Multiturn and drag and drop the module to slot 1 as shown in figure 6.

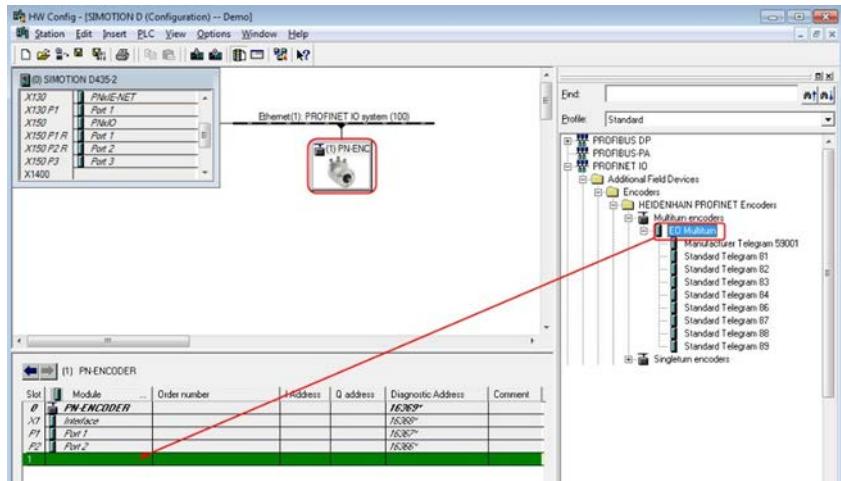


Figure 6 Example of connected encoder

The next step will be to choose the data length and the type of data that should be sent to and from the IO controller. This is done by choosing different telegrams. Available telegrams for the multi-turn encoder can be found under Multiturn -> EO Multiturn. In the example below standard telegram 81 is used. Drag and drop the telegram onto slot 1, sub slot 2 as shown in the figure 7 below. For more information regarding the different telegrams refer to chapter 5.4-5.14.

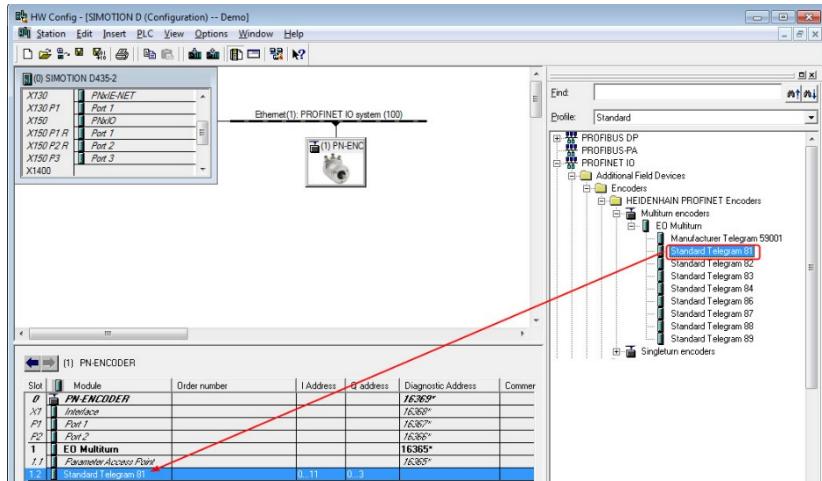


Figure 7 Telegram selection

The Standard Telegram 81 will appear on slot 1 sub slot 2 according to figure 8 below.

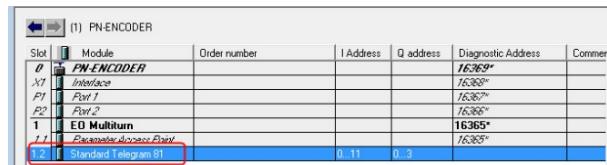


Figure 8 Selected telegram

Note: The steps above need to be performed once for each device.

Configuration example with SIMOTION Scout

3.3 Setting encoder device name

In a PROFINET network all IO devices needs to have a unique device name. The encoders are delivered without any device name preset from the factory. To set the encoder device name, double click on the encoder icon to open the Properties window.

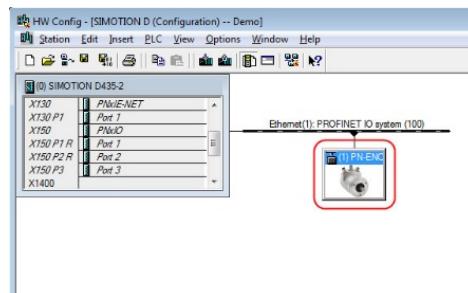


Figure 9 How to set encoder device name

In the Properties window, enter an appropriate device name in the Device name field.

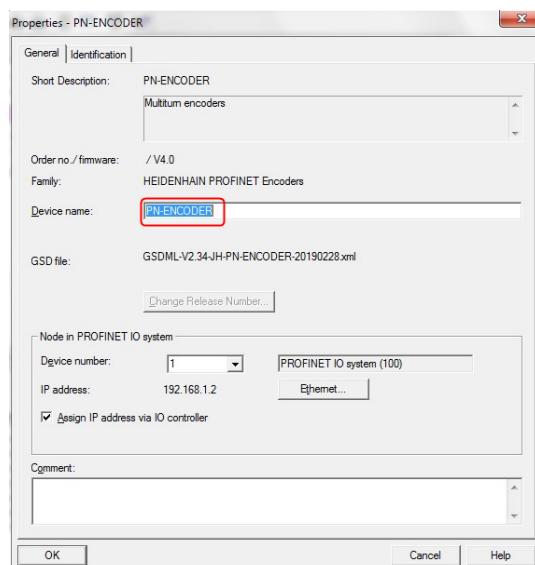


Figure 10 Device name

Make sure that the checkbox Assign IP address via IO controller is checked if the IP address for the encoder should be assigned via the IO controller. The IP address can only be set via the Discovery and Configuration protocol (DCP).

Then select PLC-> Ethernet->Assign Device Name to open the Assign device name window.

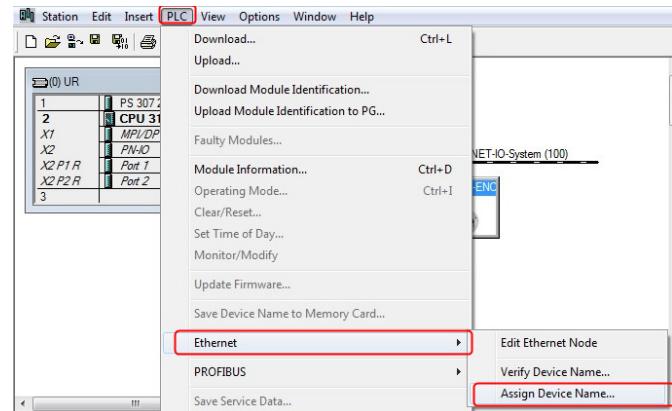


Figure 11 Assign device name

Configuration example with SIMOTION Scout

Choose the device under available devices and then click on the Assign name button to adopt the changes and then click on the Close button. The MAC address of the encoder is written on the encoder label.

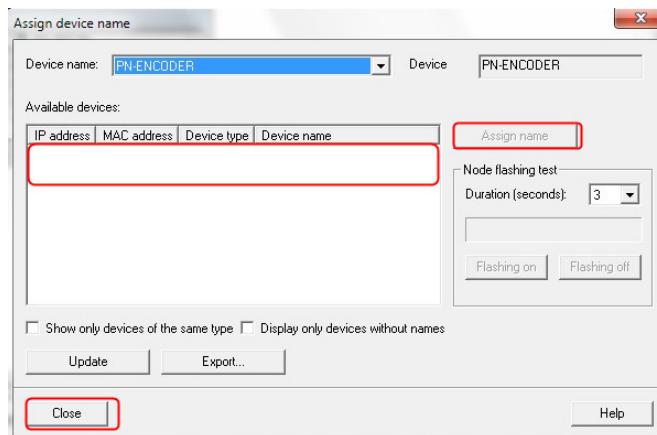


Figure 12 Assign name

Note: All connected devices need to be assigned a unique device name.

After changing device name, it is recommended to verify that the performed change has been done. This is done by opening the Verify Device Name window found under PLC->Ethernet->Verify Device Name.

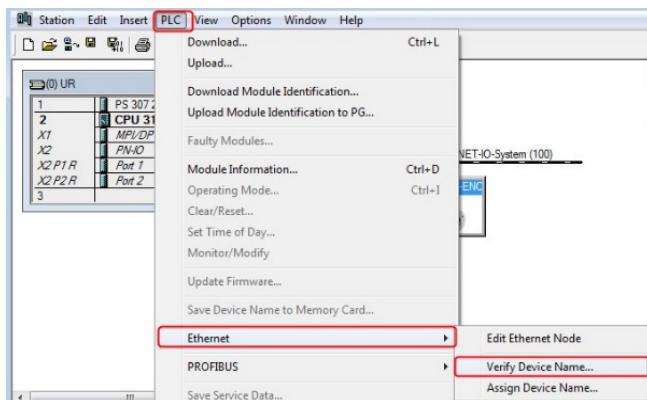


Figure 13 How to verify device name

In the Verify Device Name window, verify that the Device name has changed and the status is OK as shown in the example according to figure 13 below.

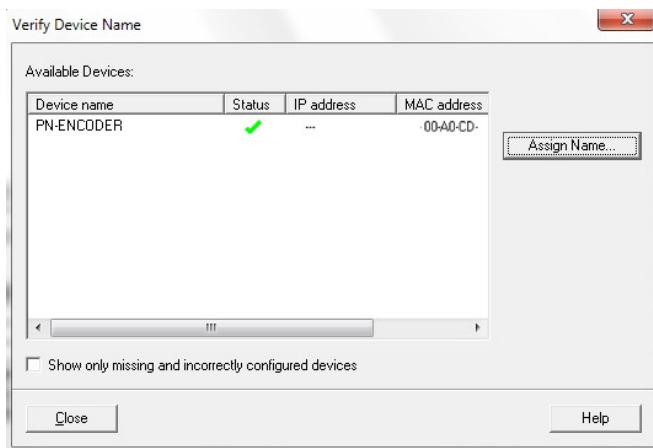


Figure 14 Verify device name

3.4 Setting encoder parameters

This chapter describes how to change the user parameters in the encoder.

To set the encoder user parameters double click on the Parameter Access point field located under **slot 1.1** as shown in figure 15, to open the Properties window.

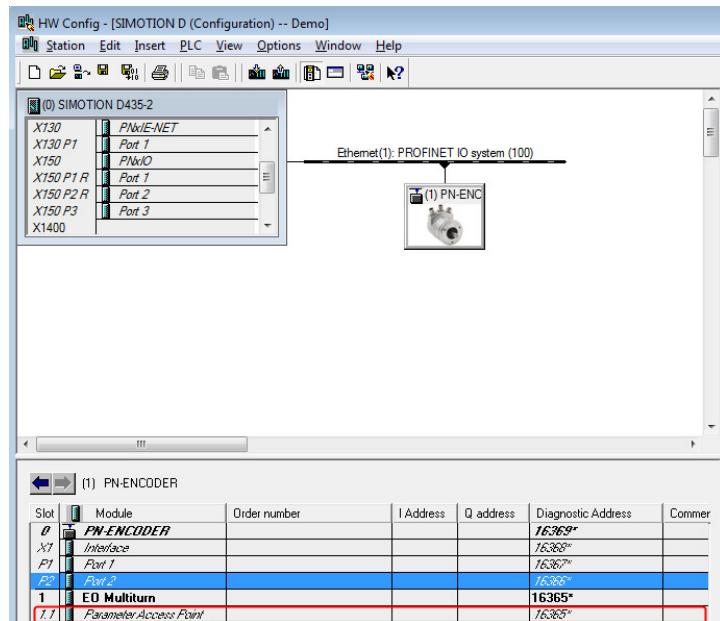


Figure 15 Parameter Access Point (slot 1.1)

In the Properties window, choose the Parameters" tab. To set the parameter data, change the value of the different parameters by clicking on the drop down list in the Value field for the respective parameter. For more information regarding parameter data, see chapter 8.

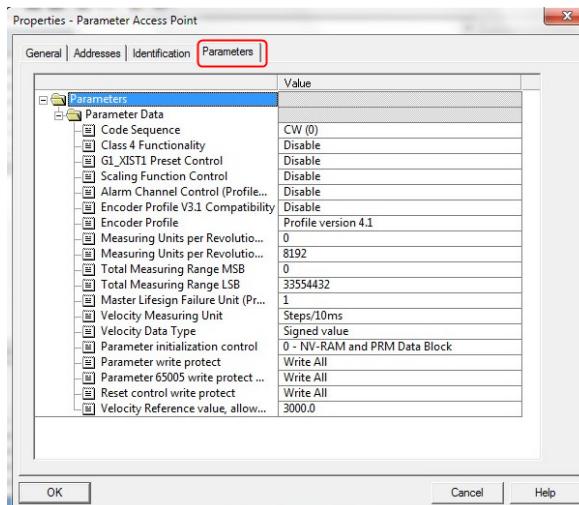


Figure 16 Example of parameter data

Configuration example with SIMOTION Scout

When the configuration and parameterization of the device has been done, the settings need to be saved and compiled. This is done by clicking on the Save and Compile option under the Station tab.

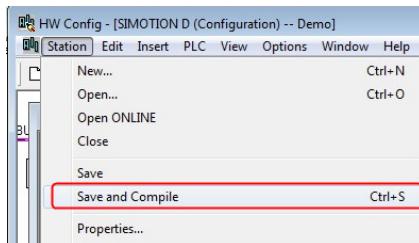


Figure 17 Save and compile

Then the settings need to be downloaded to the IO-controller. This is done by clicking on the Download option under the PLC Tab.

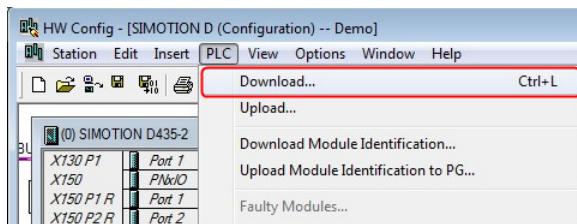


Figure 18 Download settings

3.5 Isochronous real time settings (RT Class 3)

This example is intended to illustrate the commissioning of a PROFINET encoder in isochronous operation. In the example below STEP 7 v5.4 SP5 and SIMOTION D435 motion controller is used.

Complete the configuration according to chapter 3.2-3.4 before configuration of the IRT settings as described in this chapter.

To set the IRT settings of the encoder, double click on the Interface field located under slot 0, sub slot X1 to open the Properties window.

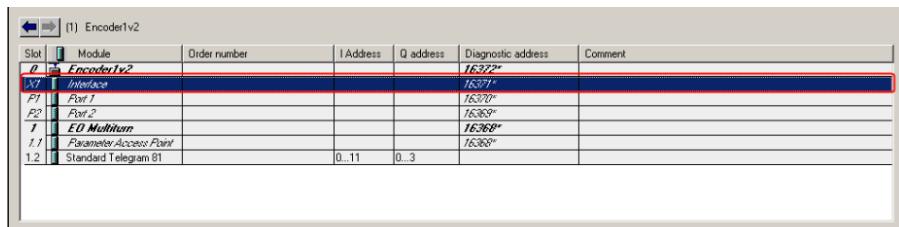


Figure 19 Open interface properties

Under the Synchronization tab change the value for the Parameter RT Class to IRT and the IRT option parameter to High Performance according to the picture below.

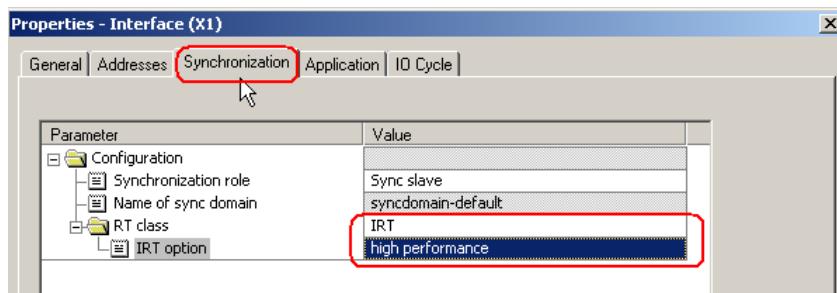


Figure 20 RT Class option

Configuration example with SIMOTION Scout

Under the Application tab check the box for Operate IO device/application in isochronous mode.

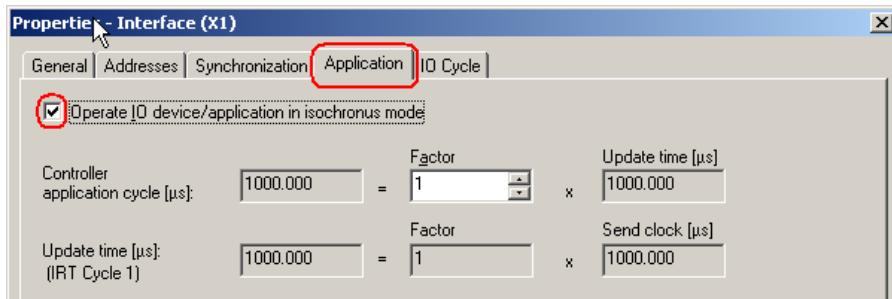


Figure 21 Interface properties

Under the IO Cycle tab change the Update Time Mode to fixed factor.

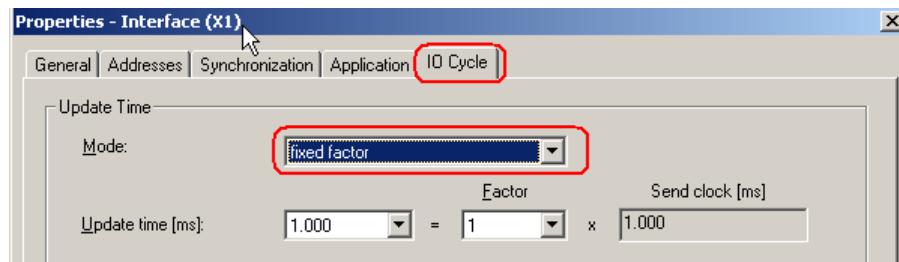


Figure 22 IO Cycle properties

Before the encoder can operate in IRT mode it is necessary to set from which port of the encoder the connection to the network has been done.

To set the topology double click on the port from which the encoder is connected to the network. This is either slot 0 sub slot P1 or slot 0 sub slot P2. In the example in figure 22 below Port 1 is used on the encoder. For port description of the encoder see chapter 2.2 Connectors and pin configuration.

(1) Encoder1v2						
Slot	Module	Order number	I Address	Q address	Diagnostic address	Comment
0	Encoder1v2				16372*	
V1	Interface				16371*	
P1	Port 1				16370*	
P2	Port 2				16369*	
1	EO Medium				16368*	
1.1	Parameter Access Point				16369*	
1.2	Standard Telegram 81	0..11	0..3			

Figure 23 Port settings

Under the Topology tab change the Partner port to the used port of your IO controller.

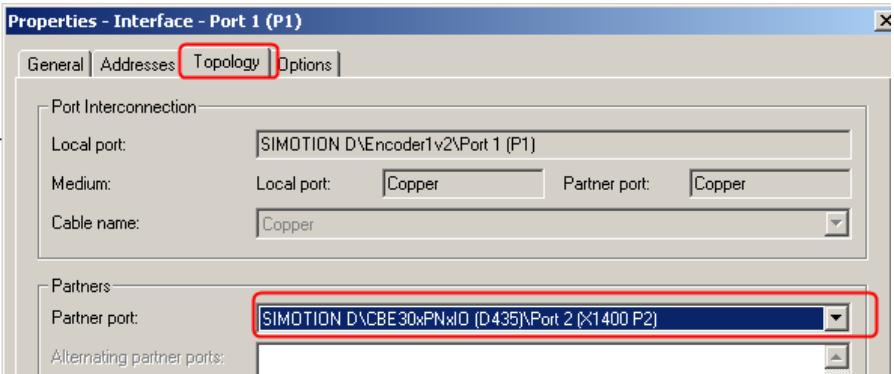


Figure 24 Topology settings

Configuration example with SIMOTION Scout

When the above steps have been performed, it is recommended to verify that the setting for the encoder and the IO controller is correct. This is done by opening the Domain management Window found under Edit->PROFINET IO.

Verify that the RT Class is set to IRT and that the IRT option is set to High performance.

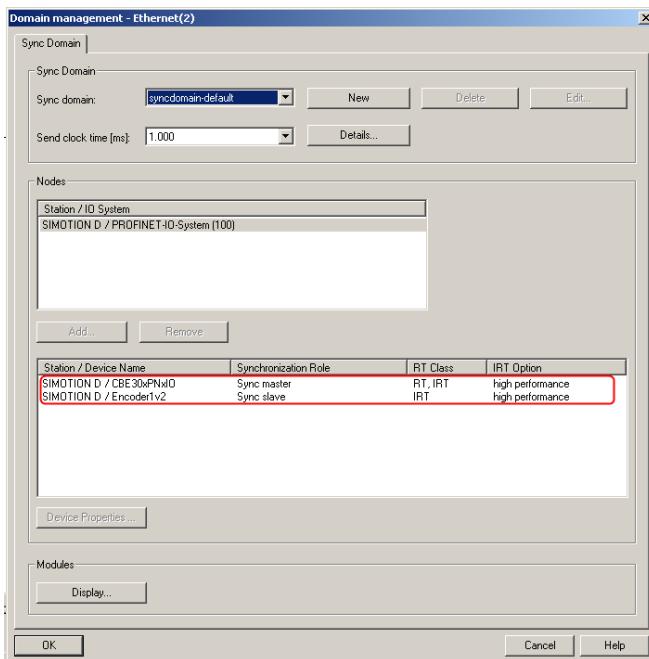


Figure 25 Domain management

The encoder is now prepared for operating in IRT mode.

4 Configuration example with TIA-portal

This chapter will illustrate how to setup and configure a PROFINET Multiturn encoder with the TIA-portal. In the following example, Totally Integrated Automation Portal version V13 SP1 and Step 7 Basic Version V13 SP1 was used. Please refer to the manufacturer of the configuration tool if other configuration tools are being used.

4.1 Installation of GSDML files

In order to start using a PROFINET device a GSDML file needs to be imported into the software.

The necessary GSDML-file can be downloaded from
www.heidenhain.com.

GSDML file	
Encoder	GSDML-Vx.xx-JH-PN-Encoder-xxxxxxxx.xml
Encoder gateway	GSDML-Vx.xx-JH-PN-Gateway-xxxxxxxx.xml

Table 7 GSDML file

Installation of GSDML-file

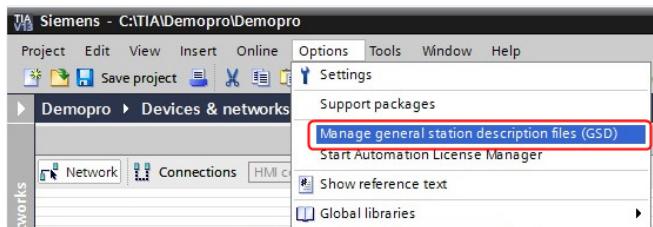


Figure 26 GSDML installation

1. Select Options -> Manage general station description files (GSD) and click the Browse button to navigate to the location of the GSDML file. If a bitmap picture representing the encoder is requested, make sure that the bitmap file is located in the same folder as the GSDML file. A bitmap file is included in the zip-file downloadable from www.hiedenhain.com.
2. Select the GSD file and click the Install button to start installing the selected GSD file.

4.2 Setting encoder configuration

When the GSDML file has been installed the supported encoder types can be found in the HW catalog under Other Field Devices->PROFINET IO-> Encoders->HEIDENHAIN->HEIDENHAIN PROFINET Encoders. Select either multiturn encoders or single-turn encoders depending on the type of encoder to be configured. Drag and drop the device as shown in the picture below. In the example below a multiturn encoder was chosen. If more than one encoder shall be configured, then the following steps need to be done once for each device.

Note: The steps above need to be performed once for each device to be connected.

Note: When using a linear scale with the gateway, Single-turn/Linear configuration should be chosen.

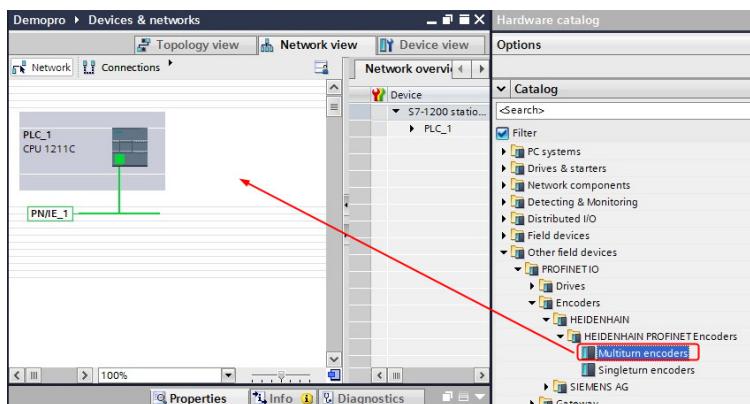


Figure 27 Encoder configuration

Configuration example with TIA-portal

The next step will be to choose the data length and the type of data that should be sent to and from the IO controller. This is done by choosing different telegrams. Available telegrams can be found in the Hardware catalog in the Device view. Expand the Module folder in the catalogue tree and double click on the EO Multiturn. That will open up the Submodules folder. Double click on the Telegram to be used. For more information regarding the different telegrams refer to chapters 5.4-5.14.

Note: **The steps above need to be performed once for each device.**

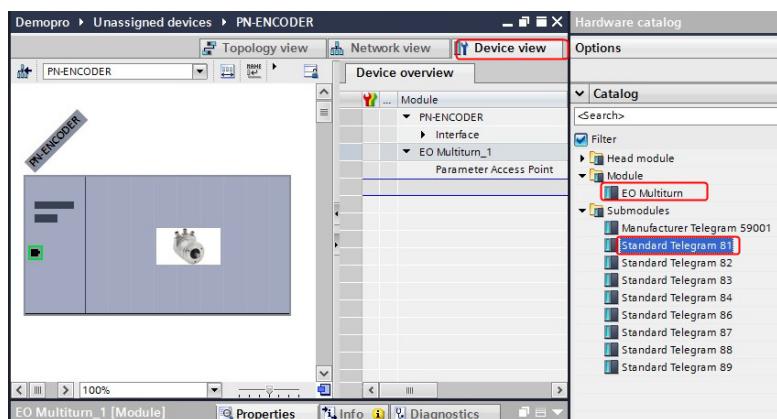


Figure 28 Telegram selection

4.3 Assign the device to the IO controller

In the Network view right click “Not assigned” and click on the “Assign new IO controller” to connect the device to the IO controller.

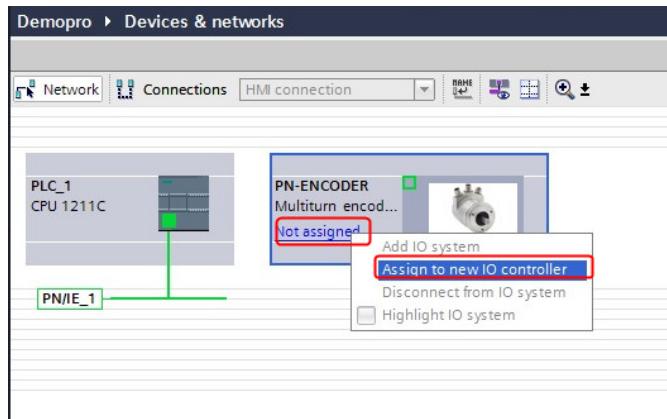


Figure 29 Assign IO controller

Configuration example with TIA-portal

4.4 Setting encoder IP address and encoder device name

In a PROFINET network all IO devices needs to have a unique IP-address and device name.

In the Network view click on the PROFINET ENCODER device. Then click on the Properties tab for the PN-ENCODER. The setting for the IP address and device name can be found under the General tab -> PROFINET interface [X1] -> Ethernet addresses. Set the IP address and enter a suitable device name. Unclick the box "Generate PROFINET device name automatically" to set your own device name.

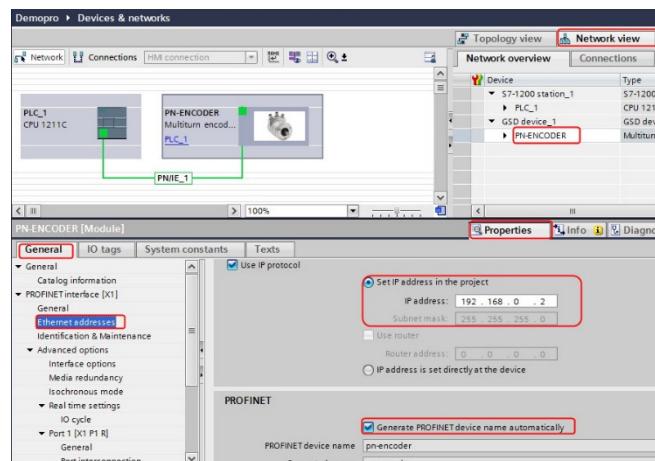


Figure 30 IP address and device name settings

4.5 Assigning Device name

To assign the device name to the device, right click on the PN-ENCODER device then click on Assign device name or click on the Assign device name icon.

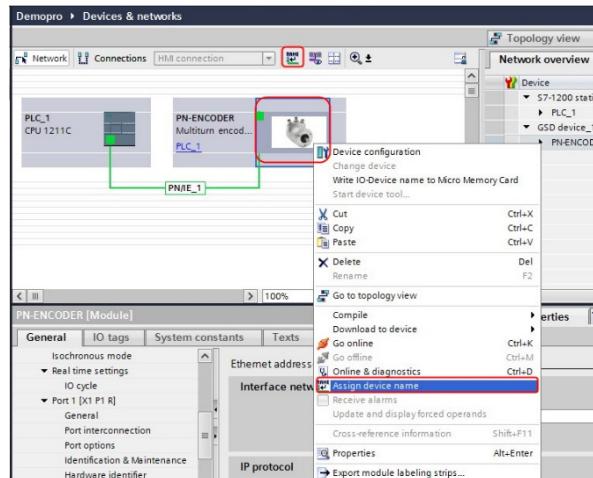


Figure 31 Assigning Device name

The Assign PROFINET device name window will then open. Under the online access field choose PN/IE as the type of PG/PC interface. Then click on the update list button to update the list. The encoder should now be available in the list. Choose the device to be configured with the help of the MAC address. The MAC address for the device is written on the device label.

Configuration example with TIA-portal

Then choose the PROFINET device name from the drop down list and then click the Assign name button.

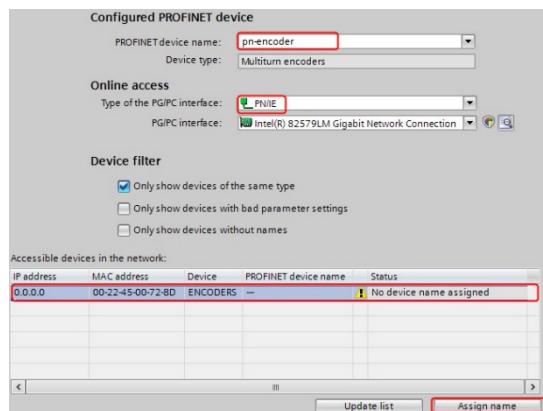


Figure 32 Assign name

If the assigning of the name went ok, this will be indicated with a Status "OK".

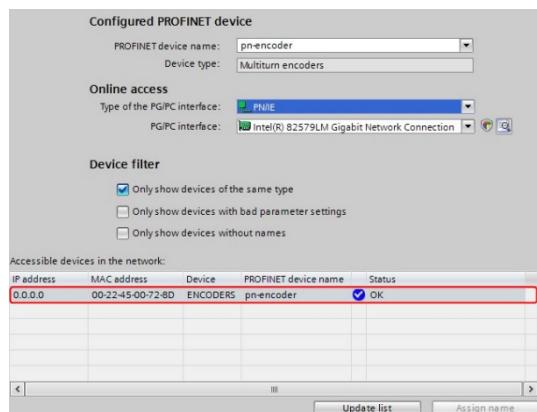


Figure 33 Assign name OK

Note: All connected devices need to be assigned a unique device name.

4.6 Setting encoder parameters

This chapter describes how to change the module parameters in the encoder.

To set the encoder user parameters click on the Parameter Access point under the Device view. Then click Properties->General-> Module parameters.

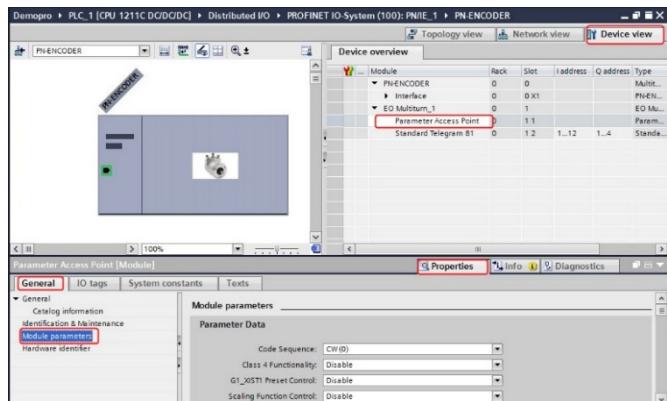


Figure 34 Setting encoder parameters

The module parameter window will open. Change the value of the different parameters by clicking on the drop down list in the Value field for the respective parameter. For more information regarding parameter data, see chapter 8.



Figure 35 Example of parameter data

Configuration example with TIA-portal

When the configuration and parameterization of the device has been done, the settings needs to compiled before they can be downloaded to the IO controller. This is done by clicking on the Compile button.

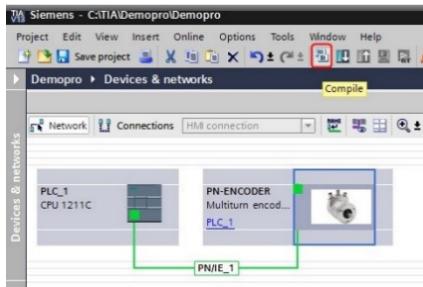


Figure 36 Compile

Then download the settings to the IO controller by clicking on the download button



Figure 37 Download settings

In the window “Extended download to device” select your interface/subnet (PN/IE_1) and click on the Start search button. Then choose the IO controller and click on the Load button.

If everything went well both the Module and Bus LED shall turn to green.

5 PROFINET IO data description

5.1 Encoder profile overview, PNO order no.3.162

This manual is related to devices that fulfills the demands and functionality according to encoder profile V4.2 (PNO no 3.162).

The operating functions for devices according to this profile are divided into four encoder application classes, named Class 1, Class 2, Class 3 and Class 4.

For an overview of the different encoder profile for PROFIBUS and PROFINET and the related standards, see figure 38 below.

For further information regarding the device functionality refer to the device profile. The profile and PROFINET technical information can be ordered at PNO in Karlsruhe, Germany (www.profinet.com).

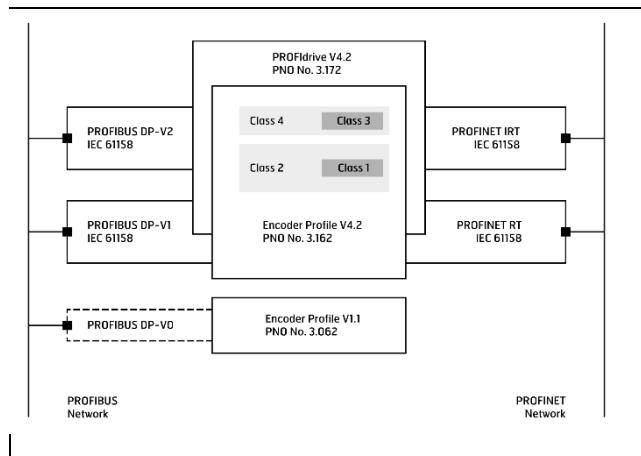


Figure 38 Overview of encoder profiles

5.2 Application Class definition

The PROFINET devices can be configured as a class 1, 2, 3 or class 4 PROFINET IO device according to the encoder profile V.4.2.

- CLASS 1** Standard encoder with preset functionality. Isochronous mode is not supported. Inherited from old PROFIBUS profile for DP-V0. Specially dedicated to General motion application.
- CLASS 2** Standard encoder with base mode parameter access, preset functionality, velocity value and scaling functionality. Isochronous mode is not supported. Inherited from old PROFIBUS profile for DP-V0. Specially dedicated to General motion application.
- CLASS 3** Device with base mode parameter access and limited parameterization of the functionality. Isochronous mode **is not** supported.
- CLASS 4** Device with scaling, Preset and base mode parameter access. Isochronous mode **is** supported.

5.3 Standard and manufacturer specific signals

Table 8 below describes the standard signals that are used to configure the IO data. The signals are described in the chapters that follow.

Significance	Abbreviation	Length (bits)	Data type
Velocity value A	NIST A	16	Signed
Velocity value B	NIST B	32	Signed
Control word	G1_STW	16	Unsigned
Status word	G1_ZSW	16	Unsigned
Position value 1	G1_XIST1	32	Unsigned
Position value 2	G1_XIST2	32	Unsigned
Position value 3	G1_XIST3	64	Unsigned
Control word 2	STW2 ENC	16	Unsigned
Status word 2	ZSW2 ENC	16	Unsigned
Encoder preset control word 31 bit with trigger bit included	G1_XIST PRESET B	32	Unsigned
Encoder preset control word 32 bit	G1_XIST PRESET B1	32	Unsigned
Encoder preset control word 64 bit	G1_XIST PRESET C	64	Unsigned
Manufacturer specific signals below			
Acceleration value	ACC B	32	Unsigned

Table 8 Standard signals

5.4 Standard telegrams

Configuration of PROFINET devices are made by choosing different telegram structures. The telegrams are used to specify the data length and which type of data that are sent to and from the IO controller. A configuration error will occur if for example a 37 bits multiturn encoder is used and have been configured with telegram 81-83. A 37 bit encoder needs telegram 84 which supports 64 bit position values. HEIDENHAIN PROFINET encoders and gateways supports the standard and manufacturer specific telegrams according to the table below.

Telegram	Encoder Gateway with:		Absolute encoder
	Linear Encoder	Rotary Encoder	
Standard telegram 81	Supported	Supported	Supported
Standard telegram 82	Supported	Supported	Supported
Standard telegram 83	Supported	Supported	Supported
Standard telegram 84	Supported	Supported	Supported
Standard telegram 86	Supported	Supported	Supported
Standard telegram 87	Supported	Supported	Supported
Standard telegram 88	Supported	Supported	Supported
Standard telegram 89	Supported	Supported	Supported
Manufacturer telegram 59000	Not supported	Supported	Not supported
Manufacturer telegram 59001	Supported	Supported	Supported

Table 9 Supported telegram

5.5 Standard Telegram 81

Standard telegram 81 uses 4 bytes for output data from the IO controller to the device and 12 bytes of input data from the encoder to the IO-controller.

Output data from the IO controller:

- 2 bytes Control word 2 (STW2 ENC).
- 2 bytes Control word (G1 STW).

IO Data (word)	1		2	
Byte	0	1	2	3
Set point	STW2 ENC			G1 STW

Table 10 Output data Telegram 81

Input data to the IO controller:

- 2 bytes Status word 2 (ZSW2 ENC).
- 2 bytes Status word (G1_ZSW).
- 4 bytes Position value 1 (G1 XIST1).
- 4 bytes Position value 2 (G1 XIST2).

IO Data (word)	1		2		3		4		5		6	
Byte	0	1	2	3	4	5	6	7	8	9	10	11
Actual value	ZSW2 ENC		G1 ZSW		G1 XIST1				G1 XIST2			

Table 11 Input data Telegram 81

5.6 Standard Telegram 82

Standard telegram 82 uses 4 bytes for output data from the IO controller to the device and 14 bytes of input data from the device to the controller.

Output data from the IO controller:

- 2 bytes Control word 2 (STW2_ENC).
- 2 bytes Control word (G1 STW).

IO Data (word)	1	2	
Byte	0	1	2
Set point	STW2 ENC		G1 STW

Table 12 Output data Telegram 82

Input data to the IO controller:

- 2 bytes Status word 2(ZSW2 ENC).
- 2 bytes Status word (G1 ZSW).
- 4 bytes Position value 1 (G1 XIST1).
- 4 bytes Position value 2 (G1 XIST2).
- 2 bytes Velocity value A (NIST A).

IO Data (word)	1	2	3	4	5	6	7
Byte	0	1	2	3	4	5	6
Actual value	ZSW2 ENC	G1 ZSW	G1 XIST1			G1 XIST2	
							NIST A

Table 13 Input data Telegram 82

5.7 Standard Telegram 83

Standard telegram 83 uses 4 bytes for output data from the controller to the device and 16 bytes of input data from the device to the controller.

Output data from the IO controller:

2 bytes Control word 2 (STW2 ENC).

2 bytes Control word (G1 STW).

IO Data (word)	1	2
Byte	0	1
Set point	STW2 ENC	G1 STW

Table 14 Output data Telegram 83

Input data to the IO controller:

2 bytes Status word 2 (ZSW2 ENC).

2 bytes Status word (G1 ZSW).

4 bytes Position value 1 (G1 XIST1).

4 bytes Position value 2 (G1 XIST2).

4 bytes Velocity value B (NIST B).

IO Data (word)	1	2	3	4	5	6	7	8
Byte	0	1	2	3	4	5	6	7
Actual value	ZSW2 ENC	G1 ZSW	G1 XIST1			G1 XIST2		
						NIST B		

Table 15 Input data Telegram 83

5.8 Standard Telegram 84

Standard telegram 84 uses 4 bytes for output data from the controller to the encoder and 20 bytes of input data from the encoder to the controller. Telegram 84 shall only be used for encoders with resolution higher than 32 bit.

Output data from the IO controller:

2 bytes Control word 2 (STW2 ENC).

2 bytes Control word (G1 STW).

IO Data (word)	1	2	
Byte	0	1	
Set point	STW2 ENC		G1 STW

Table 16 Output data Telegram 84

Input data to the IO controller:

2 bytes Status word 2 (ZSW2 ENC).

2 bytes Status word (G1 ZSW).

8 bytes Position value 3 (G1 XIST3).

4 bytes Position value 2 (G1 XIST2).

4 bytes Velocity value B (NIST B).

IO Data (word)	1	2	3	4	5	6	7	8	9	10
Byte	0	1	2	3	4	5	6	7	8	9
Actual value	ZSW2 ENC	G1 ZSW	G1 XIST3					G1 XIST2	NIST B	

Table 17 Input data Telegram 84

Note: In standard Telegram 84, G1 XIST2 is used to transfer error codes and optionally position values if the measuring length exceeds 64 bits.

5.9 Standard Telegram 86

Standard telegram 86 uses 4 bytes for output data from the controller to the encoder and 8 bytes of input data from the encoder to the controller. With telegram 86 it is possible to get cyclic data transmission and also the possibility to do a preset via IO-data without the need of control word and status words.

IO Data (word)	1	2		
Byte	0	1	2	3
Set point	G1 XIST PRESET B			

Table 18 Output data Telegram 86

IO Data (word)	1	2	3	4	5	6	7
Byte	0	1	2	3	4	5	6
Actual value	G1 XIST1				NIST B		

Table 19 Input data Telegram 86

5.10 Standard Telegram 87

Standard telegram 87 uses 4 bytes for output data from the controller to the encoder and 4 bytes of input data from the encoder to the controller. With telegram 87 it is possible to get cyclic data transmission and also the possibility to do a preset via IO-data without the need of control word and status words.

IO Data (word)	1	2		
Byte	0	1	2	3
Set point	G1 XIST PRESET B			

Table 20 Output data Telegram 87

IO Data (word)	1	2		
Byte	0	1	2	3
Actual value	G1 XIST1			

Table 21 Input data Telegram 87

5.11 Standard Telegram 88

Standard telegram 88 uses 8 bytes for output data from the controller to the encoder and 12 bytes of input data from the encoder to the controller. With telegram 88 it is possible to get cyclic data transmission and also the possibility to do a preset via IO-data without the need of control word and status words.

IO Data (word)	1	2	3	4
Byte	0	1	2	3
Actual value	G1 XIST PRESET C			

Table 22 Output data Telegram 88

IO Data (word)	1	2	3	4	5	6
Byte	0	1	2	3	4	5
Actual value	G1 XIST3					NIST B

Table 23 Input data Telegram 88

Note: **Telegram 88, should only be used if the measuring range exceeds 32 bits.**

5.12 Standard Telegram 89

Standard telegram 89 uses 6 bytes for output data from the controller to the encoder and 10 bytes of input data from the encoder to the controller. With Telegram 89 a PRESET is initiated by a trigger bit in Control Word 2 (STW2_ENC).

IO Data (word)	1	2		3		
Byte	0	1	2	3	4	
Actual value	STW2 ENC		G1 PRESET B1			

Table 24 Output data Telegram 89

IO Data (word)	1	2		3		4		5	
Byte	0	1	2	3	4	5	6	7	8
Actual value	ZSW2 ENC	G1 XIST1						NIST B	

Table 25 Input data Telegram 89

5.13 Manufacturer telegram 59000

Manufacturer telegram 59000 is **only** supported by the encoder gateway together with a rotary encoder. Telegram 59000 is similar to standard telegram 83 but with an added 32 bit acceleration value. Telegram 59000 uses 4 bytes for output data and 20 bytes of input data.

Output data from the IO controller:

- 2 bytes Control word 2 (STW2 ENC).
- 2 bytes Control word (G1 STW).

IO Data (word)	1		2	
Byte	0	1	2	3
Set point	STW2 ENC		G1 STW	

Table 26 Output data Telegram 59000

The manufacturer telegram 59000 input data consist of a position values, velocity value and acceleration according to below. The velocity value uses the format that is defined in the parameter Velocity measuring unit and is presented in hundredths of rpm. Two velocity data types can be used, unsigned 32 bit with direction shown in the MSB (set when negative direction) or signed 32 bit.

The acceleration value is presented in tenths of rpm/s. It means that the NIST B value will be presented as 1000 rpm if the actual shaft speed is only 10 rpm and that the ACC B value will be presented as 10 rpm/s if the actual acceleration is 1 rpm/s.

The velocity is calculated according to the formula (1):

$$V = \frac{\partial x}{\partial t} = X_{\text{new}} - X_{\text{old}} / T_{\text{integration}} \quad (1)$$

Where

V	is the velocity value;
$\frac{dx}{dt}$	is the first time derivative of the position X;
X _{new}	is the new position value;
X _{old}	is the old position value;
T _{integration}	is the integration time in ms;

The acceleration is calculated according to the formula (2):

$$a = \frac{\partial v}{\partial t} = V_{\text{new}} - V_{\text{old}} / T_{\text{integration}} \quad (2)$$

Where

a	is the acceleration value;
$\frac{dv}{dt}$	is the first time derivative of the velocity value;
V _{new}	is the new velocity value;
V _{old}	is the old velocity value;
T _{integration}	is the integration time in ms;

Input data to the IO-controller:

ZSW2 ENC	= Status word 2 (16 bit unsigned)
G1_ZSW	= Status word (16 bit unsigned)
G1_XIST1	= Position value 1 (32 bit unsigned)
G1_XIST2	= Position value 2 (32 bit unsigned)
NIST B	= Velocity value B (32 bit signed)
ACC B	= Acceleration value B (32 bit unsigned)

IO Data (word)	1		2		3		4		5		6		7		8		9		10	
Byte	0	1	2	3	4	5	6	7	8	9	1	1	1	2	1	1	1	1	1	1
Actual value	ZSW2 ENC	G1 ZSW	G1_XIST2				G1_XIST2				NIST B				ACC B					

Table 27 Input data Telegram 59000

Note: User parameter Class 4 functionality and G1_XIST1 Preset control must be activated in order to activate the preset in manufacturer telegram 59000.

Note: Data type for the acceleration value is same as the selected data type for velocity.

5.14 Manufacturer telegram 59001

The manufacturer telegram 59001 is a simplified telegram to get cyclic data transmission and also the possibility to do a preset via IO-data without the need of control word and status words.

The preset function can be used to set the actual position of the encoder to any entered value within the working range of the encoder. If scaling is active and has been done on the device it is only possible to enter a preset value within the working range of the encoder.

The preset is activated when the most significant bit (bit 31) is set to 1. The actual preset value should be entered in the following bits according to below.

IO Data (word)	1			2	
Byte	0		1	2	3
Bits	31(MSB)		30-24	23-16	15-8
	Preset control bit	Preset value < total resolution			

Table 28 Output data Telegram 59001

The manufacturer telegram 59001 input data consist of a 4 bytes position data value and a 4 byte velocity value as shown below. The velocity value uses the format that is defined in the Velocity measuring unit.

IO Data (word)	1	2	3	4
Byte	0	1	2	3
Actual value	Position value 32 bit Unsigned int			Velocity value 32 bit Signed int

Table 29 Input data Telegram 59001

Note: User parameter Class 4 functionality and G1 XIST1
Preset control must be activated in order to activate the preset in manufacturer telegram 59001.

5.15 Format of G1 XIST1 and G1 XIST2

The G1 XIST1 and G1 XIST2 signals consist of the absolute position value in binary format. By default the G1 XIST1 signal is equal to the G1 XIST2 signal. The format of the actual position values in G1 XIST1 and G1 XIST2 is shown below.

Format definition for G1 XIST1 and G1 XIST2:

- All values are presented in binary format
 - The shift factor is always zero (right aligned value) for both G1 XIST1 and G1 XIST2.
 - The setting in the parameter data affects the position value in both G1 XIST1 and G1 XIST2.
 - G1 XIST2 displays the error telegram instead of the position value if error occurs.

Example with absolute rotary encoder

25 bit multturn absolute rotary encoder (8192 steps per revolution, 4096 distinguishable revolutions)

M = Multiturn value (Distinguishable revolutions)

S = Singleturn value (number of steps per revolutions)

 


Figure 39 Absolute value in G1 XIST1

 


Figure 40 Absolute value in G1 XIST2

Note: For a linear encoder the number of bits used is dependent on the transfer format, length and the resolution of the linear encoder. The values are right aligned.

5.16 Format of G1 XIST3

G1 XIST3 is a 64 bit position value which is used to support encoders with a resolution exceeding 32 bits.

Format definition for G1 XIST3:

- Binary format
- The actual position value is always right aligned, a shifting factor is not used.
- The settings in the parameter data affect the position value in G1 XIST3 if Class 4 is enabled.

IO Data	1	2	3	4
Format	64 bit position value			

Table 30 Format of G1_XIST3

5.17 Sensor preset control word (G1 XIST1 PRESET B)

G1 XIST1 PRESET B is a 32 bit signal that includes a trigger bit for PRESET Control used for Telegram 86 and 87. The controller can transmit a preset value for the sensor via cyclic data telegram and activate this preset value by setting the trigger bit. As the trigger bit is transferred in the same signal as the preset value only a preset value of maximum 31 bit can be applied.

IO Data (word)	1	2		
Byte	0		1	2
Bits	31(MSB)	30-24	23-16	15-8
	Preset control bit	Preset value < total resolution		

Table 31 G1 XIST1 PRESET B

Note: The preset function should only be used at encoder standstill.

5.18 Sensor preset control word (G1 XIST1 PRESET B1)

G1 XIST1 PRESET B1 is a 32 bit signal used for Telegram 89. G1 XIST1 PRESET B1 can be used to transmit a preset value in full 32 bit length. The activation of the preset value is triggered by bit 0 in Control word 2 (STW2 ENC).

IO Data (word)	1	2	
Byte	0	1	2
	PRESET value		

Table 32 G1 XIST1 PRESET B1

Note: The preset function should only be used at encoder standstill.

5.19 Sensor preset control word (G1 XIST1 PRESET C)

G1 XIST1 PRESET C is a 64 bit signal that includes a trigger bit for PRESET Control used for Telegram 88. The controller can transmit a preset value for the sensor via cyclic data telegram and activate this preset value by setting the trigger bit. As the trigger bit is transferred in the same signal as the preset value, only a preset value of maximum 63 bit can be applied.

IO Data (word)	1	2	3	4
Bits	(MSB)Bit 63 Preset control	Bit 62..0	Preset value	

Table 33 G1 XIST1 PRESET C

Note: The preset function should only be used at encoder standstill.

5.20 Control word 2 (STW2 ENC)

The control word 2 (STW2 ENC) is referred to as the master sign of life and it includes the Control by PLC mechanism from PROFIdrive STW2.

Bit	Function
0	Preset trigger (Only for telegram 89)
1..6	Reserved
7	Not supported
8,9	Reserved
10	Control by PLC
11	Reserved
12..15	Controller Sign-of-life

Table 34 Control word 2 (STW2 ENC)

Bit	Value	Significance	Comments
0	1	Preset trigger 0->1	Trigger for performing preset (For Telegram 89 only)
	0	Idle	Before starting a new preset operation the controller has to reset this bit
10	1	Control by PLC	Control via interface, EO IO Data is valid.
	0	No Control by PLC	EO IO Data not valid, except Sign-Of-Life
12..15	0 to 15	Controller Sign-Of-Life	Received if isochronous operation is activated

Table 35 Detailed assignment of control word 2 (STW2 ENC)

5.21 Status word 2 (ZSW2 ENC)

The status word 2 (ZSW2 ENC) is referred to as the slave's sign of life and it includes the Control by PLC mechanism from PROFIdrive ZSW1 and the Slave Sign-Of-Life mechanism from PROFIdrive ZSW2.

Bit	Function
0	PRESET acknowledge
1	G1 XISTx position value valid
2	NISTx speed value valid
3	Fault Present
4..6	Reserved
7	Warning Present
8	Reserved
9	Control requested
10,11	Reserved
12..15	Encoder Sign-of-life

Table 36 Status word 2 (ZSW2 ENC)

Bit	Value	Significance	Comments
0	1	Preset Acknowledge 0->1	The preset value was set as new position value.
	0	Idle	The encoder position offset value was stored in the encoder and the encoder is now ready for a new Preset operation.
1	1	G1 XISTx position value is valid	This bit shows if there is a valid position value in the corresponding XISTx of a Class 1 or class 2 Telegram. This bit is only used for Telegram 89.
	0	G1 XISTx position value is invalid	This bit is only used for Telegram 89.
2	1	NISTx speed value is valid	This bit shows if there is a valid speed value in the corresponding NISTx of a Class 1 or class 2 Telegram. This bit is only used for Telegram 89.
	0	NISTx speed value is invalid	This bit is only used for Telegram 89.
3	1	Fault Present	At least one fault is present. The position value should be considered invalid.
	0	No Fault	
7	1	Warning Present	At least one warning is present. One or more critical limits are reach but all encoder functionality is still operable.
	0	No Warning	
9	1	Control requested	The automation system is requested to assume control.
	0	No Control requested	Control by the automation system is not possible.
12..15	0 to 15	Encoder Sign-Of-Life	Send if isochronous operation is activated

Table 37 Detailed assignment of status word 2 (ZSW2 ENC)

5.22 Control word (G1 STW)

The control word controls the functionality of major encoder functions.

Bit	Function
0..7	Not supported
8..10	Reserved
11	Home position mode(Preset)
12	Request set/shift of home position (Preset)
13	Request absolute value cyclically
14	Activate parking sensor
15	Acknowledging a sensor error

Table 38 Control word (G1 STW)

Note: If the sensor parking is activated (bit 14 = 1) the encoder is still on the bus with the slave sign of life active and the encoder error and diagnostics switched off.

5.23 Status word (G1 ZSW)

The status word defines encoder states, acknowledgements, error messages of major encoder functions.

Bit	Function
0..7	Not supported
8..10	Reserved
11	Requirements of error acknowledgment detected
12	Set/shift of home position (Preset) executed
13	Transmit absolute value cyclically
14	Parking sensor active
15	Sensor fault

Table 39 Status word (G1 ZSW)

Note: If bit 13 Transmit absolute value cyclically or bit 15 Sensor error is not set there is no valid value or error code transferred in G1 XIST2.

Note: Bit 13 Transmit absolute value cyclically cannot be set at the same time as bit 15 Sensor error as these bits are used to indicate either a valid position value transmission (bit 13) or the error code transmission (bit 15) in G1 XIST2.

5.24 Real time communication

PROFINET IO uses three different communication channels to exchange data with programmable controllers and other devices. The non-real time channel based on for example TCP (UDP)/IP is used for parameterization, configuration and acyclic read/write operations.

The RT or Real Time channel is used for process data transfer and alarms.

Real-time data are treated with a higher priority than data sent over the open channel. RT communications overrides the open channel to handle the data exchange with programmable Controllers.

The third channel, Isochronous Real Time (IRT) is the high performance, high speed channel used for demanding motion Control applications. IRT data are treated with a higher priority than RT data sent over the RT channel.

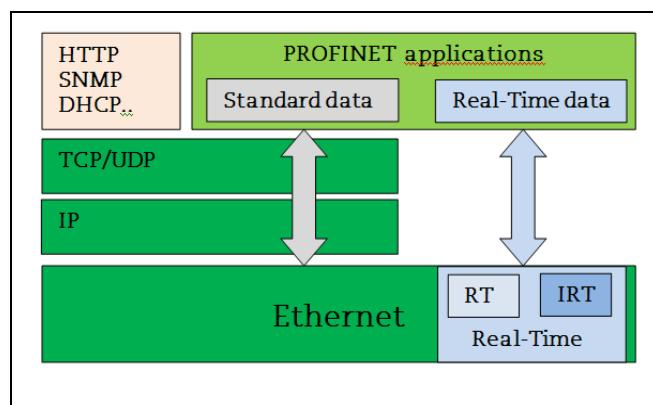


Figure 41 Real time communication

PROFINET distinguishes between three real time classes for transmission of time critical process data. The three RT classes are:

Real-Time, RT Class 1

- Unsynchronized Real time communication
- Industrial standard switches can be used
- Typical application area: Factory automation

Real-Time, RT Class 2

- Synchronized and unsynchronized data transmission
- Special switches supporting IRT is needed
- Typical application area: Factory automation

Isochronous RealTime, RT Class 3

The isochronous operation mode is used when real-time positioning with high performance is required. The basic principal is that all PROFINET devices on the net are clock synchronized with the controller using a global control broadcast enabling simultaneous data accusation from all devices with microsecond accuracy. The data exchange cycles for IRT are usually in the range of a few hundred microseconds up to a few milliseconds. The difference to real-time communication is essentially the high degree of determinism, so that the start of a bus cycle is maintained with high precision. The synchronization is monitored by sign-of life messages in Control word 2 (STW2 ENC) and Status word 2 (ZSW2 ENC).

- Clock synchronized data transmission
- Special switches supporting IRT is needed
- IRT is required for example motion control applications

6 Alarms and warnings

6.1 Diagnostics and Alarms

Diagnostic data is always transferred acyclically using Record Data communications over the non-real time channel. An IO Supervisor must specifically request the diagnostic or status data from the IO device using RDO (Record Data Object) services.

Alarm data is transmitted from the IO device to the IO controller via the RT channel.

Alarm is generated by the encoder when failure occurs which effects the position value. Alarms can be reset (deleted) when all encoder parameters are within the specified value ranges and the position value is correct.

6.2 Channel diagnostics

The device outputs a diagnostic interrupt to the CPU when it detects one of the supported channel diagnostics.

Supported channel diagnostic	Diagnostic data record	Description
Position error (hardware and signal quality)	0x9100	The device fails to read the correct position value
Memory error	0x9116	The device fails to read stored offset or preset values from the non-volatile memory
Commissioning diagnostics	0x9105	User parameter data assignment error
Master's sign of life fault	0x910B	A master sign of life evaluation error was detected
Command not supported	0x910F	The activation of a non-supported function was detected

Table 40 Channel diagnostics

In a SIMATIC STEP 7 system the operation system responds by calling a diagnostic OB. The OB number and start information provides the cause and location of the error. The error information can be read by calling a system Function block (SFB54 RALRM for STEP 7). Then the user can decide how the system should handle the error.

Note: **If the called OB is not included in the program the CPU will go to stop.**

6.2.1 Extended channel diagnostics

The below table shows the manufacturer specific error types implemented.

Error code	Description
0x7FFF	Checksum incorrect
0x7FFE	Encoder missing (communication error)
0x7FFD	Light source error
0x7FFC	Signal amplitude error
0x7FFB	Position error
0x7FFA	Ovvoltage error
0x7FF9	Under voltage error
0x7FF8	Over current error
0x7FF7	Battery error
0x7FF6	Error value unknown

Table 41 Manufacturer specific error types

6.3 Error codes in G1 XIST 2

Diagnosis information can be obtained by monitoring of the Error bit in the Sensor Status word G1_ZSW (bit 15) and evaluation of the error code transmitted in G1 XIST2.

Supported diagnostic	Error code in G1 XIST2	Description
Sensor group error	0x0001	The device fails to read the correct position value
Memory error	0x1001	The device fails to read stored offset or preset values from the non-volatile memory
Command not supported	0x0F01	User parameter data assignment error or command error in commands words G1_STW and STW2_ENC
Master's sign of life fault	0x0F02	The number of permissible failures of the controller's life sign was exceeded.

Table 42 Error codes in G1 XIST 2

7 Acyclic Parameter Data

7.1 Acyclic data exchange

In addition to the cyclic data exchange, the PROFINET device also supports acyclic data exchange. The acyclic data exchange is transferred over the non-real time channel and is used to read out and write status information from and to the IO device. The acyclic data exchange is conducted in parallel to the cyclic data communication.

Example of acyclic data:

- Reading of diagnostic
- Reading of I&M functions
- Reading of PROFIdrive parameters

7.2 Identification and Maintenance (I&M functions)

Devices according to the encoder profile 3.162 also support I&M functionality.

The main purpose of the I&M functions is to support the end user if the device is acting faulty or missing some of its functionality. The I&M functions could be seen as an electronic nameplate containing common information regarding the device and its manufacturer. The I&M parameters are accessed using the Record Data Object 0xAFF0.

Example of I&M functions:

- MAC address
- Hardware Version
- Software Version
- Product type
- Manufacturer ID

For more information regarding additional I&M functions supported by the encoder, refer to chapter 8.179.

7.3 Base mode parameter access

The PROFIdrive parameters and the encoder parameters can be accessed by the Acyclic Data Exchange service using the Base Mode Parameter access local (**Record Data Object 0xB02E**).

7.3.1 General characteristics

Acyclic parameter can be transmitted 1(single) or up to 39 (multi) in one access. A parameter access can be up to 240 bytes long.

7.3.2 Parameter requests and responses

Request header:

Request ID, DO-ID and number of parameters of the access.

Parameter address:

One address for each parameter, if several parameters are accessed.

Parameter value:

If the Request ID is 0x02 (change value) the value is set in the request and if the Request ID is 0x01 (request value), the value appears in the reply.

7.3.3 Changing the preset value

Table 43 below shows the structure of a change value request.

Write of Preset value, parameter 65000 Parameter request		
Request reference	0x00	
Request ID	0x02	0x02 → Change value, 0x01 → read value
DO-ID (axis)	0x01	Drive Object ID
No of parameters	0x01	
Attribute	0x10	0x10 → Value
No of elements	0x00	
Parameter number	0xFDE8	Parameter 65000
Sub index	0x0000	
Format	0x04	Data type integer 32
Number of values	0x01	

Table 43 Changing the preset value

7.3.4 Reading the preset value

The tables below show the structure of a read value request.

Read of Preset value, parameter 65000 Parameter request		
Request reference	0x00	
Request ID	0x01	0x01→read value
DO-ID (axis)	0x01	Drive Object ID
No of parameters	0x01	0x01 Read one parameter
Attribute	0x10	0x10→Value
No of elements	0x00	
Parameter number	0xFDE8	Parameter 65000
Sub index	0x0000	

Table 44 Reading the preset value (request)

Read of Preset value, parameter 65000 Parameter response		
Request reference	0x00	mirrored
Response ID	0x01	0x01→read value
DO-ID (axis)	0x01	mirrored
No of parameters	0x01	
Format	0x04	0x04= Data type unsigned 32
No of values	0x01	
Values or errors	0x00,0x00,0x00,0x64	Preset value 100

Table 45 Reading the preset value (response)

7.4 Supported parameters

7.4.1 Parameter 922, read only

922→ unsigned16, presents which telegram is used. Telegram 81, 82, 83, 84, 86, 87, 88, 89, 59000 or 59001 is possible.

7.4.2 Parameter 925, read/write

925→ unsigned16, Number of Controller sign-of-life failures which will be tolerated

7.4.3 Parameter 964, read only

964→Array unsigned32, Device identification

964[0] = Manufacturer Id. This is set during manufacturing of the encoder.

964[1] = 0→DU Drive unit type, always set to 0.

964[2] = →Software version

964[3] = →Software year

964[4] = → Software day and month

964[5] = 1→ Number of drive objects (DO)

7.4.4 Parameter 965, read only

965→Octet String 2

965[0] = 0x3D→Profile number

965[1] = 31, 41 or 42 →Profile version, set by customer (module parameters)

7.4.5 Parameter 971, read/write

971→ unsigned16, Stores the local parameter to a non-volatile memory. Preset value is saved when writing value 1 and is set to 0 by the device firmware when finished. This means that the preset value has been saved when reading back value 0.

7.4.6 Parameter 972, read/write

972→unsigned16, Reset encoder device

Note: Only supported in Encoder profile v4.2 mode

7.4.7 Parameter 974, read only

974→Array unsigned16, BMP access service identification

974[0] = Max block length

974[1] = Max number of parameter requests per multi-parameter request

974[2] = Max latency per request, (n x 10 ms)

7.4.8 Parameter 975, read only

975→Array of Unsigned16, Encoder object identification

Sub index_:

975[0] = Manufacturer Id, Set in the production.

975[1] = DO type

975[2] = Software version

975[3] = Software year

975[4] = Software day and month

975[5] = PROFIdrive DO type class

975[6] = PROFIdrive SUB class 1

975[7] = Drive object Id (DO ID).

7.4.9 Parameter 979, read only

979→Array unsigned32, Sensor format

Sub index:

979[0] = Header

979[1] = Sensor type

Bit 0 = 0 Rotary encoder, Bit 0 = 1 linear encoder

Bit 1 = 1 always set to 1

Bit 2 = 0 →32 bit data, Bit 2 = 1 →64 bit data

Bit 31 = 1 if configuration and parameterization is OK

979[2] = Sensor resolution

979[3] = Shift factor for G1 XIST1 always set to 0.

979[4] = Shift factor for G1 XIST2 always set to 0.

979[5] = Singleturn = 1, Multiturn = 4096

979[6] = 0

979[7] = 0

979[8] = 0

979[9] = 0

979[10] = 0

7.4.10 Parameter 980, read only

This parameter shows the supported parameters

980→Array unsigned16

Note: Supported parameters depends on encoder profile configuration

7.4.11 Parameter 60000, read/write

Velocity reference value
60000→Float 32

The parameter 60000 sets the value for the velocity reference (100 % value) for N2/N4 normalized speed actual values (NIST A, NIST B).

Note: Only supported in Encoder profile v4.2 mode

Note: This parameter is only used together with parameter 60001 set to N2/N4 Normalized.

7.4.12 Parameter 60001, read/write

Velocity value normalization
60001→Unsigned 16
Value 0 = Steps/s
Value 1 = Steps/100ms
Value 2 = Steps/10ms
Value 3 = RPM
Value 4 = N2/N4 Normalized

Note: Only supported in Encoder profile v4.2 mode

Note: N2/N4 Normalized not supported with encoder gateway used with linear scale

7.4.13 Parameter 61000, read/write

Name of station
61000 →Octet String, 240 octets

7.4.14 Parameter 61001, read only

IP of station
61001→Octet string

7.4.15 Parameter 61002, read only

MAC of station
61002→Octet string, 6 octets

7.4.16 Parameter 61003, read only

Default gateway of station
61003→ Octet string

7.4.17 Parameter 61004, read only

Subnet mask of station
61004 → Octet string

7.4.18 Parameter 65000, read/write

Preset value 32 bit.
65000 → Integer32

7.4.19 Parameter 65001, read only

65001 → Array Integer32, Operating status

65001[0] = 0x000C0101 → Header, Version of parameter structure and numbers of index describing the encoder. 12 index and version 1.01

65001[1] = Operating status (Bit 4 alarm channel control is always set with profile version 4.x)

65001[2] = Errors
65001[3] = Supported errors
65001[4] = Warnings
65001[5] = Supported warnings
65001[6] = Encoder profile version
65001[7] = Operating time
65001[8] = Offset value
65001[9] = Measuring units per revolution
65001[10] = Total measuring length in measuring units (Linear = 1)
65001[11] = Velocity value normalization
65001[12] = Velocity reference value
65001[13] = Measuring units per revolution 64bit (MSW)
65001[14] = Measuring units per revolution 64bit (LSW)
65001[15] = Total measuring range in measuring units 64bit (MSW)
65001 [16] = Total measuring range in measuring units 64bit (LSW)
65001 [17] = Offset value 64bit (MSW)
65001 [18] = Offset value 64bit (LSW)

7.4.20 Parameter 65002, read/write

Preset value 64 bit
65002 → Integer64

7.4.21 Parameter 65003, read only

Operating status 64 bit
65003 → Array integer64
65003[0] = 0x00000000000040101 → Header Version of parameter structure and numbers of index describing encoder. 4 index and version 1.01
65003[1] = Offset value 64 bit
65003[2] = Measuring units per revolution 64 bit
65003[3] = Total measuring range in measuring units 64 bit, (Linear =1)

Note: Only supported in Encoder profile v4.1 mode

7.4.22 Parameter 65004, read/write

Function control
65004 → Unsigned32

Bit0 = Code sequence, (0=CW, 1=CCW)
Bit1 = Class 4 functionality,
(0=Disable, 1=Enable)
Bit2 = G1 XIST1 Preset Control,
(0=Enable, 1=Disable)
Bit3 = Scaling function control,
(0=Disable, 1=Enable)
Bit4 = Alarm channel control,
(0=Disable, 1=Enable)
Bit5 = V3.1 Compatibility mode,
(0=Compatibility mode enabled)
(1=Compatibility mode Disabled)
Bit6 = Encoder type, (0=Rotary, 1=Linear)
Bit7-31 = Reserved

Note: Only supported in Encoder profile v4.2 mode

7.4.23 Parameter 65005, read/write

Parameter control
65005→ Unsigned16

Bit 0-1 = Parameter Initialization control
(0=PRM, 1=Non-volatile RAM)
Bit 2-4 = Parameter write protect
(0=Write all, 1=Read only)
Bit 5 = Parameter 65 005 write protect
(0=Write all, 1=Read only)
Bit 6 = Reset control write protect
(0=Write all, 1=Read only)
Bit 7-15 = Reserved

Note: Only supported in Encoder profile v4.2 mode

7.4.24 Parameter 65006, read/write

Measuring units per revolution
65006→ Unsigned32

Note: Only supported in Encoder profile v4.2 mode

7.4.25 Parameter 65007, read/write

Total Measuring range in measuring units
65007→ Unsigned32

Note: Only supported in Encoder profile v4.2 mode

7.4.26 Parameter 65008, read/write

Measuring units per revolution 64 bit
65008→ Unsigned64

Note: Only supported in Encoder profile v4.2 mode

7.4.27 Parameter 65009, read/write

Total Measuring range in measuring units 64bit
65009→ Unsigned64

Note: Only supported in Encoder profile v4.2 mode

7.5 Example of reading and writing to a parameter

This is an example of S7 blocks used for reading and writing to parameter 65000 (preset value). Experience with S7 programming and Statement List programming language STL is required.

Hardware components		
Controller	SIEMENS S7-F CPU	CPU 315F2PN/DP
IO Device	PROFINET encoder	

Table 46 Hardware components

Software components	
SIMATIC STEP 7	V5.4 + SP5
GSDML file for PROFINET encoder	

Table 47 Software components

Acyclic Parameter Data

7.5.1 Used blocs

Write record block SFB53 WRREC
Read record block SFB52 RDREC
Instance data blocks DB3 and DB4
Request data block DB1
Response data block DB2
Organization blocks OB1, OB82 and OB86

SFB52

SFB52 is standard S7 block for reading parameters.

SFB53

SFB53 is standard S7 block for writing parameters.

DB1

DB1 is the request data block.

Address	Name	Type	Initial value	Actual value	Comment
0.0	Request_reference	BYTE	B#16#1	B#16#001	request number
+1.0	Request_ID	BYTE	B#16#2	B#16#002	request parameter = 1; change parameter = 2
2.0	Axis	BYTE	B#16#0	B#16#000	Axis addressing for multi-axis drives
3.0	No_of_parameters	BYTE	B#16#1	B#16#001	write 1 parameters
4.0	Attribute_parameter_01	BYTE	B#16#10	B#16#10	write value
5.0	No_of_elements_01	BYTE	B#16#1	B#16#001	number of elements 1
6.0	parameter_number_01	WORD	W#16#FD#8	W#16#FD#8	parameter 65000 (Preset value 32)
8.0	Subindex_01	WORD	W#16#0	W#16#00000	subindex
10.0	Data_type	BYTE	B#16#4	B#16#04	data type integer 32
11.0	No_of_values	BYTE	B#16#1	B#16#001	Number of values = number of elements
12.0	Value	DINT	L#0	L#33554176	Value of 65000

Figure 42 Request data block, DB1

DB2

DB2 is the response data block.

Address	Name	Type	Initial value	Comment
0.0		STRUCT		
+0.0	Request_reference_mirror	BYTE	B#16#0	request number mirrored
+1.0	Response_ID	BYTE	B#16#0	request parameter
+2.0	DOIID_mirrored	BYTE	B#16#0	Axis mirrored
+3.0	No_of_parameters	BYTE	B#16#0	response about number of parameter
+4.0	Format_parameter_1	BYTE	B#16#0	response about parameter 1 format
+5.0	No_of_values_parameter_1	BYTE	B#16#0	response about number of value of parameter 1
+6.0	parameter_number_01	DWORD	DW#16#0	Read value p65000
=10.0		END_STRUCT		

Figure 43 Response data block, DB2

DB3

DB3 is the instance data block of SFB52

DB3 -- PN_WR_RD_PRESET_LL\SIMATIC 300(1)\CPU 315F-2PN/DP						
	Address	Declaration	Name	Type	Initial value	Actual value
1	0.0	in	REQ	BOOL	FALSE	FALSE
2	2.0	in	ID	DWORD	DW#16#0	DW#16#0
3	6.0	in	INDEX	INT	0	0
4	8.0	in	MLEN	INT	0	0
5	10.0	out	VALID	BOOL	FALSE	FALSE
6	10.1	out	BUSY	BOOL	FALSE	FALSE
7	10.2	out	ERROR	BOOL	FALSE	FALSE
8	12.0	out	STATUS	DWORD	DW#16#0	DW#16#0
9	16.0	out	LEN	INT	0	0
10	18.0	in_out	RECORD	ANY	P#P 0.0 VOID 0	P#P 0.0 VOID 0

Figure 44 Instance data block, DB3

DB4

DB4 is the instance data block of SFB53

DB4 -- PN_WR_RD_PRESET_LL\SIMATIC 300(1)\CPU 315F-2PN/DP						
	Address	Declaration	Name	Type	Initial value	Actual value
1	0.0	in	REQ	BOOL	FALSE	FALSE
2	2.0	in	ID	DWORD	DW#16#0	DW#16#0
3	6.0	in	INDEX	INT	0	0
4	8.0	in	LEN	INT	0	0
5	10.0	out	DONE	BOOL	FALSE	FALSE
6	10.1	out	BUSY	BOOL	FALSE	FALSE
7	10.2	out	ERROR	BOOL	FALSE	FALSE
8	12.0	out	STATUS	DWORD	DW#16#0	DW#16#0
9	16.0	in_out	RECORD	ANY	P#P 0.0 VOID 0	P#P 0.0 VOID 0

Figure 45 Instance data block, DB4

Acyclic Parameter Data

OB1

OB1 controls the read and write operation.

OB1 : "Main Program Sweep (Cycle)"

In network 1 and network 2 the user will see how to generate the request / response DB for writing/reading p65000 using S7 standard function blocks SFB53/53 easy handled by the VAT_1 variable table.

Network 1: Write request

With the SFB53 "WRREC" (write record) you transfer a data record with the number INDEX to a DP slave device component defined by ID.

A	M	8.4
AN	M	8.1
AN	M	8.3
AN	M	8.2
S	M	8.0
L	W#16#B02E	
T	#INDEX	

```
CALL "WRREC" , "InstanceDB_SFB53"      SFB53 / DB4          -- Write a Process Data Record
REQ  :=M8.0
ID   :=D#16#7F7
INDEX :=#INDEX
LEN   :=16
DONE  :=M14.0
BUSY  :=M8.1
ERROR :=M14.2
STATUS:=MD10
RECORD:=P#DB1.DBX0.0 BYTE 16
```

A	M	8.1
R	M	8.0

Network 2: Read request

With the SFB52 "RDREC" (read record) you read a data record with the number INDEX from a component.

A	M	8.4
AN	M	8.1
AN	M	8.3
AN	M	8.0
S	M	8.2

```
CALL "RDREC" , "InstanceDB_SFB52"      SFB52 / DB3          -- Read a Process Data Record
REQ  :=M8.2
ID   :=D#16#7F7
INDEX :=#INDEX
MLEN  :=10
VALID :=M16.0
BUSY  :=M8.3
ERROR :=M16.2
STATUS:=MD18
LEN   :=MW22
RECORD:=P#DB2.DBX0.0 BYTE 10
```

A	M	8.3
R	M	8.2

Figure 46 Organization block, OB1

Parameters of SFB52

Parameter	Declaration	Data type	Description
REQ	INPUT	BOOL	REQ=1 Enables data transfer
ID	INPUT	DWORD	Logical address of the PROFINET IO module or sub module (PAP-module address 2039)
INDEX*	INPUT	INT	Record number
MLEN*	INPUT	INT	Maximum length of the record information in bytes
VALID	OUTPUT	BOOL	New record has been received and is valid.
BUSY	OUTPUT	BOOL	Busy=1 during the read operation
ERROR	OUTPUT	BOOL	Error=1 read error
STATUS	OUTPUT	DWORD	Block status or error code
LEN*	OUTPUT	INT	Length of record information
RECORD	IN_OUT	ANY	Target area for the record

Table 48 Parameters of SFB52

*) Negative values are interpreted as 16-bit unsigned integers.

Parameters of SFB53

Parameter	Declaration	Data type	Description
REQ	INPUT	BOOL	REQ=1 Enables data transfer
ID	INPUT	DWORD	Logical address of the PROFINET IO module or sub module (PAP-module address 2039)
INDEX*	INPUT	INT	Record number
LEN*	INPUT	INT	Length of the record information in bytes
DONE	OUTPUT	BOOL	Data record was transferred
BUSY	OUTPUT	BOOL	Busy=1 during the write operation
ERROR	OUTPUT	BOOL	Error=1 write error
STATUS	OUTPUT	DWORD	Block status or error code
RECORD	IN_OUT	ANY	Data record

Table 49 Parameters of SFB53

*) Negative values are interpreted as 16-bit unsigned integers.

Diagnostic address of slot 1

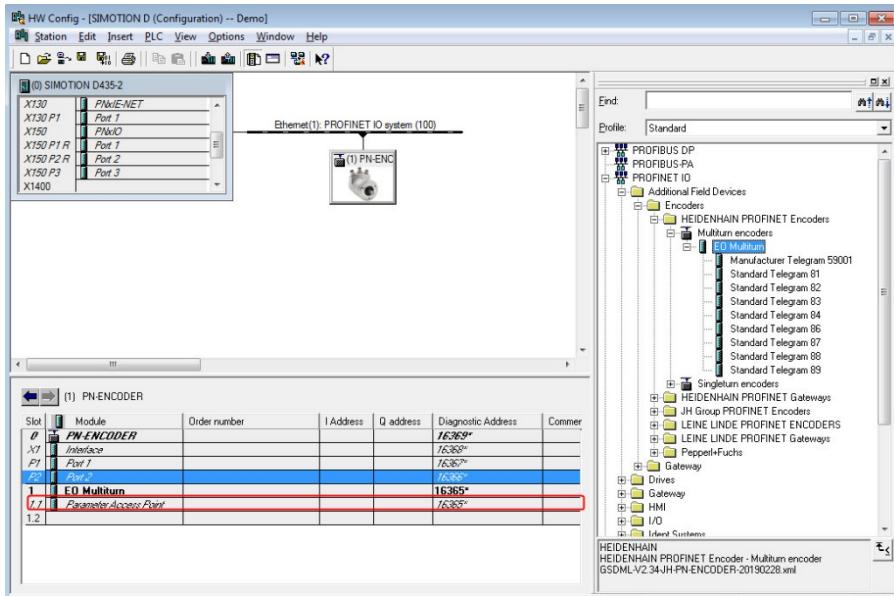


Figure 47 Diagnostic address of slot 1

Acyclic Parameter Data

Variable table

With the variable table the user can monitor and modify variables.

	Address	Symbol	Symbol comment	Display format	Status value	Modify value
1		// Enable parameter write/read 1=enabled				
2	M 8.4			BOOL	false	
3						
4		// The flag M8.1 shows writing is not yet completed (BUSY = 1: The write process is not yet terminated)				
5	M 8.1			BOOL	false	
6		// ERROR = 1: A write error has occurred				
7	M 14.2			BOOL	false	
8		//Write block status or error information				
9	MD 10			HEX	DW#16#00700000	
10						
11		// The flag M8.3 shows if reading is not yet completed (BUSY = 1: The read process is not yet terminated)				
12	M 8.3			BOOL	false	
13		//ERROR = 1: A read error has occurred				
14	M 16.2			BOOL	false	
15		// Read block status or error information				
16	MD 18			HEX	DW#16#00700000	
17						
18		// Position and control/status words				
19	P/W 2			HEX	VW#16#0000	
20	PQW 2			HEX	VW	VW#16#1000
21	P/W 1			HEX	VW#16#0000	
22	PQW 1			HEX	VW	VW#16#0400
23						
24	PID 4			HEX	DW#16#0001877E	
25	PID 8			HEX	DW#16#0001877E	
26						
27						
28						
29		//Write parameters:				
30	DB1.DB8 1	"Request_DB" Request_ID	request parameter = 1; change parameter = 2	HEX	B#16#02	
31	DB1.DB8 12	"Request_DB" Value	Write value 65000	HEX	DW#16#12345678	DW#16#12345678
32	DB2.DB0 6	"Respons_DB" parameter_number_01	Read value p65000	HEX	DW#16#00000000	
33						

Figure 48 Variable table

To change the value of parameter 65000 with the variable table perform the following steps:

- Enable monitoring by clicking the Monitor variable button.
- Write 02hex to address DB1.DBB 1 by entering B#16#02 in the modify value column.
- Write the new preset value in hexadecimal to address DB1.DBD 12 by entering the value in the modify value column. (Ex.DW#16#000001F4)
- Click the Modify variable button. The status value of DB1.DBB 12 should now contain the new value.
- Run the program-right click on M8.4 and click "Modify address to 1" to run the program. Then stop the program by right click and click "Modify address to 0".
- The status value of DB2.DBD 6 should now have been changed to the new preset value.
- Change the value in DB1.DBB 1 to 01hex (B#16#01#) and click modify variable.
- To set the encoder to the new preset value bit 12 in control word must be set to 1. This is done by writing 1000hex (W#16#1000) to address P0W 2. Then click the button Modify variable to make the preset of the encoder.
- The encoder can now at any time be set to the preset value by setting bit 12 in control word (G1 STW).

8 Functional description of the device

The table below shows the supported functions in the PROFINET encoder and encoder Gateway.

Function	Encoder	Gateway	
		Rotary	Linear
Code sequence	✓	✓	✓
Class 4 functionality	✓	✓	✓
G1_XIST1 Preset control	✓	✓	✓
Scaling function control	✓	✓	-
Alarm channel control	✓	✓	✓
Encoder profile V3.1 Compatibility	✓	✓	✓
Encoder Profile	✓	✓	✓
Encoder type	✓	✓	✓
Preset value	✓	✓	✓
Preset value 64 bit	✓	✓	✓
Measuring units per revolution/ Measuring step	✓	✓	-
Total measuring range	✓	✓	-
Measuring units per revolution 64 bit	✓	✓	-
Total measuring range 64 bit	✓	✓	-
Velocity reference value	✓	✓	✓
Maximum Master Sign of Life errors	✓	✓	✓
Velocity measuring unit	✓	✓	✓
Encoder Profile version	✓	✓	✓

Function	Encoder	Gateway	
		Rotary	Linear
Operating time	✓	✓	✓
Offset value	✓	✓	✓
Offset value 64 bit	✓	✓	✓

Table 50 Supported functions

8.1 Code sequence

Rotary encoder:

The code sequence defines whether the absolute position value should increase during clockwise or counter clockwise rotation of the encoder shaft seen from flange side. The code sequence is by default set to increase the absolute position value when the shaft is turned clockwise (0).

Linear encoder:

The code sequence defines the direction count of the absolute position value. The code sequence is by default set to increase (CW) when the scale is traversed towards the right (viewed from ID-label side).

Attribute	Meaning	Value
CW	Rotary encoder: Increasing position values with clockwise rotation (seen from shaft side) Linear encoder: Increasing position values when the reading heads is traversed towards the right when seen from ID-label side.	0
CCW	Rotary encoder: Increasing position values with counter clockwise rotation (seen from shaft side) Linear encoder: Decreasing position values when the reading heads is traversed towards the right when seen from ID-label side.	1

Table 51 Code sequence

Note: **The position value will be affected when the code sequence is changed during operation. It might be necessary to perform a preset after the code sequence has been changed.**

8.2 Class 4 functionality

This parameter enables or disables the measuring task functions Scaling, Preset and Code sequence. If the function is enabled, scaling and Code sequence control affects the position value in G1 XIST1, G1 XIST2 and G1 XIST3. A preset will in this case always affect G1 XIST2 and G1 XIST3 but if the parameter G1 XIST1 Preset control is disabled the preset will not affect the position value in G1 XIST1.

Attribute	Meaning	Value
Enable	Scaling/preset/code sequence control enabled	1
Disable	Scaling/preset/code sequence control disabled	0

Table 52 Class 4 functionality

8.3 G1 XIST1 – Preset control

This parameter controls the effect of a home position (preset) on the G1 XIST1 actual value.

If Class 4 functionality is activated and G1 XIST1 Preset control is disabled, the position value in G1 XIST1 will not be affected by a Preset.

Attribute	Meaning	Value
Enable	G1 XIST1 is affected by a preset command	0
Disable	Preset does not affect G1 XIST1	1

Table 53 G1 XIST1 – Preset control

Note: This parameter is disabled by setting the value to 1.

Note: There is no functionality of this parameter if the Class 4 functionality parameter is disabled.

8.4 Scaling function control

This parameter enables or disables the Scaling function of the encoder. The scaling function control is not supported when using the gateway together with a linear encoder.

Attribute	Meaning	Value
Enable	Scaling function is enabled	1
Disable	Scaling function is disabled	0

Table 54 Scaling function control

Note: **The parameter Class 4 functionality must be enabled to use this parameter.**

8.5 Alarm channel control (Profile V3)

This parameter enables or disables the device specific Alarm channel transferred as Channel Related Diagnosis. This functionality is used to limit the amount of data sent in isochronous mode.

If the value is zero (default value) only the communication related alarms are sent via the alarm channel. If the value is one (1) also encoder profile specific faults and warnings are sent via the alarm channel.

Attribute	Meaning	Value
Enable	Profile specific diagnosis is switched on	1
Disable	No profile specific diagnosis (default)	0

Table 55 Alarm channel control

Note: **This parameter is only supported in encoder Profile V3.1 compatibility mode. In standard mode the profile specific diagnosis is always active.**

8.6 Encoder profile V3.1 Compatibility

This parameter defines if the device should run in a mode compatible to Version 3.1 of the Encoder Profile. See below for an overview of functions affected when the compatibility mode is enabled.

Attribute	Meaning
Enable	Compatibility with encoder Profile V3.1
Disable	No backward compatibility

Table 56 Profile V3.1 compatibility mode

Function	Compatibility mode enabled (=0)	Compatibility mode disabled (=1)
Control by PLC (STW2_ENC)	Ignored, the control word (G1 STW) and the set point values are always valid. Control requested (ZSW2_ENC) is not supported and is set to 0.	Supported
Module parameter Maximum Master Sign of Life failures	Supported	Not supported in v4.1 mode. In V4.1 the value is fixed to 1. PROFIdrive P925 is optional to control the life sign monitoring.
User parameter Alarm channel control	Supported	Not supported, the application alarm channel is active and controlled by a PROFIdrive parameter.
P965 Profile Version	31 (V3.1)	41(V4.1)/42(V4.2)

Table 57 Compatibility mode overview

8.7 Encoder profile

This parameters defines if the encoder functionality shall be according to encoder profile 3.162 V4.1 or encoder Profile 3.162 v4.2.

Attribute	Meaning	Value
Profile version v4.1	Functionality according to ProfileV4.1	0
Profile version v4.2	Functionality according to ProfileV4.2	1

Table 58 Encoder profile

8.8 Encoder type

The parameter 650001 sub-index 1 bit 6 defines if the encoder is a rotary or linear encoder.

Attribute	Meaning	Value
Rotary encoder	Encoder resolution is measured in number of increments per turn	0
Linear encoder	Encoder resolution is measured in number nm per increment	1

Table 59 Encoder type

8.9 Preset value

The preset value function enables adaptation of the position value from the encoder to a known mechanical reference point of the system. The preset function sets the actual position of the encoder to zero (= default value) or to the selected preset value. Depending on the telegram used, the preset function is either controlled by bits in the control word or by a preset trigger bit in Control word 2 (STW2 ENC) or directly set in the output data with some telegrams. A preset value can be set more than once and it can be stored to the non-volatile memory using PROFIdrive parameter 971.

The preset function has an absolute and a relative operating mode selectable by bit 11 in the Control word (G1 STW). Bit 11 and bit 12 in the Control word controls the preset in the following way.

Normal operating mode: Bit 12 = 0

In this mode, the encoder will make no change in the output value.

Preset mode absolute: Bit 11 =0, Bit 12 = 1

In this mode, the encoder reads the current position value and calculates an internal offset value from the preset value and the current position value. The position value is then shifted with the calculated offset value to get a position value equal to the preset value. No preset will be made if a negative preset value is used while trying to initiate an absolute preset.

Preset mode relative: Bit 11 =1, Bit 12 = 1

In this mode the position value is shifted by the preset value, which could be a negative or a positive value set by encoder parameter 65000 or 65002.

The steps below should be followed by the IO-controller when modifying the Preset value parameters:

1. Read the requested Preset value parameter and check if the returned value meets the application requirements. If not, proceed with the following steps.
2. Write the Preset value into the individual parameter.
3. Store the value in the non-volatile memory by PROFIdrive parameter 971 if the value should be valid also after the next power on sequence.

Note: **The preset function should only be used at encoder standstill.**

Note: **The number of possible preset cycles is unlimited.**

Note: **If scaling is used the preset function shall be used after the scaling function to ensure that the preset value is entered in the current measuring unit.**

Note: **There is no preset activated when the preset value is written to the encoder. How the preset is controlled depends on the telegram used.**

Note: **Preset can also be done with Encoder specific Parameter 65000 or 65002 (64bit).**

8.10 Scaling function parameters

The scaling function converts the encoder's physical absolute position value by means of software in order to change the resolution of the encoder. The scaling parameters will only be activated if the parameter Class 4 functionality and Scaling function control are enabled. The permissible value range for the scaling is limited by the resolution of the encoder. The scaling parameters are securely stored in the IO controller and are reloaded into the encoder at each power-up.

Note: **The scaling function parameters is not available for the gateway together with linear encoders.**

8.10.1 Measuring units per revolution

This parameter sets the singleturn resolution of the encoder. In other words it is the number of measuring steps during one revolution of the encoder shaft.

Example:

For a 13-bit encoder with a singleturn resolution of 13 bits, the permissible value range for "Measuring units per revolution" is between 2^0 and 2^{13} (8192).

Parameter	Meaning	Data type
Measuring units per revolution	The singleturn resolution in measuring steps	Unsigned 32
Measuring units per revolution 64 bit	The singleturn resolution in measuring steps for encoders with a resolution exceeding 32 bits.	Unsigned 64

Table 60 Measuring units per revolution

Note: **After downloading new scaling parameters, the preset function must be used to set the encoder starting point to absolute position 0 or to any required starting position within the scaled operating range.**

8.10.2 Total measuring range

This parameter sets the total measuring range of the encoder. The total measuring range is calculated by multiplying the singletum resolution with the number of distinguishable revolutions.

Example:

The total measuring range for a 25 bit multiturn encoder with a 13 bit singletum and a 12 bit multiturn resolution is between 2^0 and 2^{25} (33 554 432).

The total measuring range is calculated as below:

$$\begin{aligned} &\text{Measuring units per revolution} \times \text{Total measuring range} \\ &= 8192 (2^{13}) \times 4096 (2^{12}) \\ &= 33554432 \end{aligned}$$

If the total measuring range for the encoder is higher than 31 bit, telegram 84 or telegram 88 shall be used.

The device has two different operating modes, depending on the specified measuring range. When the device receives a parameter message, it checks the scaling parameters if a binary scaling can be used. If binary scaling can be used, the device selects operating mode A (see following explanation). If not, operating mode B is selected.

A. Cyclic operation (binary scaling)

Cyclic operation is used when operating with 2^X number of turns (2, 4, 8, 16, 32, 64, 128, 256, 512, 1024, 2048, 4096... number of turns). If the desired total measuring range is equal to the specified singleturn resolution * 2^X (where $x \leq 12$) the encoder operates in endless cyclic operation (0 - max - 0 -max). If the position value increases above the maximum value by rotating the encoder shaft, the encoder continues from 0.

Example of a cyclic scaling:

Measuring units per revolution = 1 000
Total measuring range = 32 000
(2^5 = number of revolutions 32)

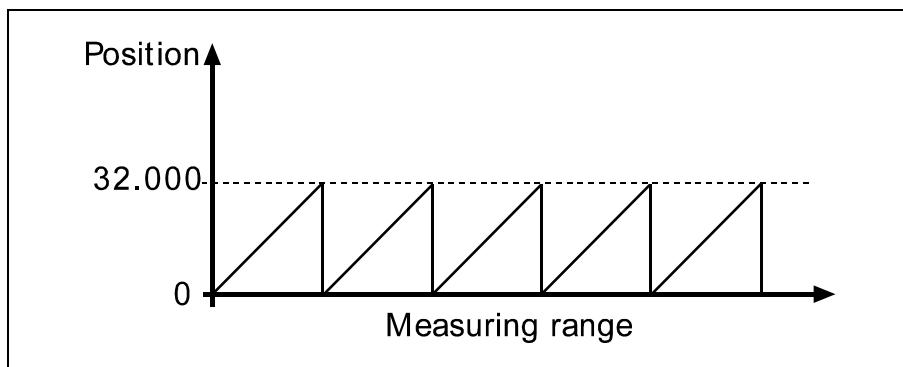


Figure 49 Cyclic operation

B. Non-cyclic operation

If the desired total measuring range is **not** equal to the specified singleturn resolution * 2^X (where $x \leq 12$) the encoder operates in non-cyclic operation. The non-cyclic operation is affected by the parameter G1_XIST1 Preset control as described below.

G1_XIST1 Preset control = Enabled

If the position value increases or decreases outside the maximum value or below 0 with the parameter G1_XIST1 Preset control **enabled**, the device outputs the maximum position value within the scaled total range for both position values G1_XIST1 and G1_XIST2.

Example of non-cyclic scaling with G1_XIST1 Preset control enabled:

Measuring units per revolution = 100
Total measuring range = 5000
(number of revolutions 50)

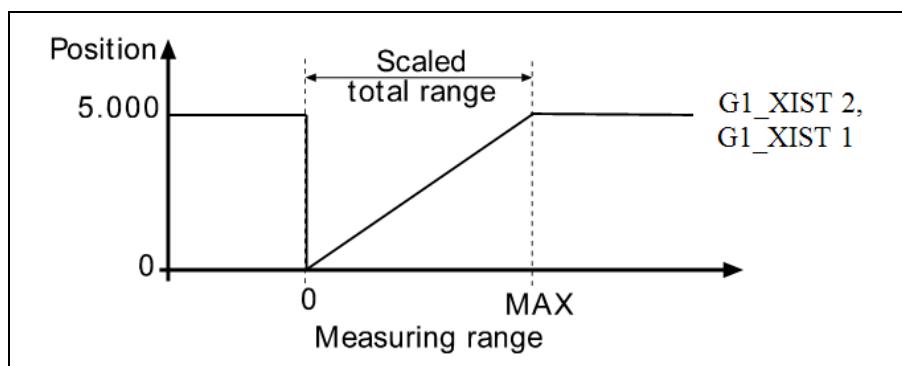


Figure 50 Non cyclic operation, preset control enabled

G1_XIST1 Preset control = Disabled

With the parameter G1_XIST1 **disabled**, and if the position value increases or decreases outside the maximum value or below 0, the device will output the maximum position value within the scaled total range for the position value G1_XIST2. The position value G1_XIST1 is not limited to the scaled total range. For the position value G1_XIST1, the device will continue to output a scaled position value within the encoder's total measuring range (up to 33554432 positions for a 25 bit encoder).

Example of non-cyclic scaling with G1_XIST1 Preset control disabled:

Measuring units per revolution = 100

Total measuring range = 5000

(number of revolutions 50)

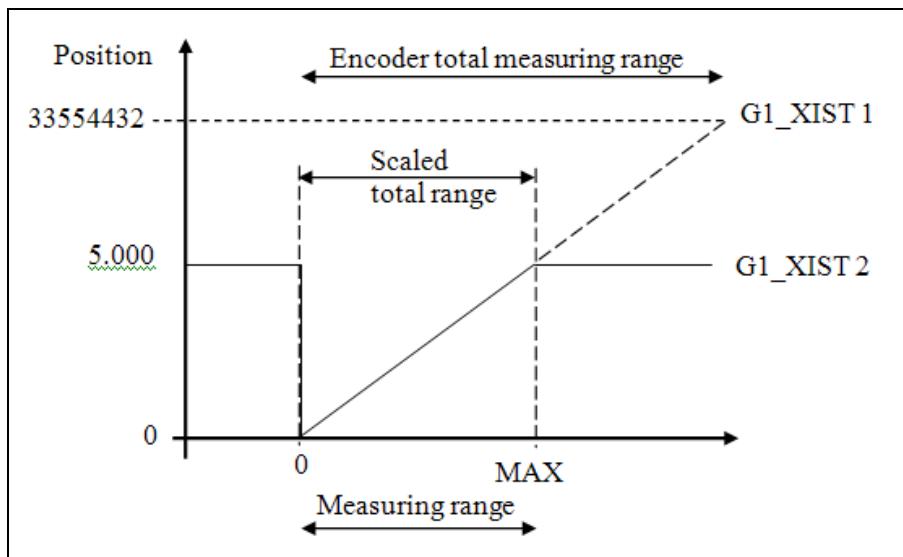


Figure 51 Non cyclic operation, preset control disabled

Handling 64 bit data

Siemens hardware configuration tool does not support 64 bit data type, so when writing larger numbers than 32 bit into the configuration tool, this needs to be done according to below:

Example:

Total measuring range in measuring units = 2^{36}

$2^{36} = 68719476736 = 0x00\ 00\ 00\ 1000\ 00\ 00\ 00$

MSB LSB
4 Byte=32 bit 4 Byte=32 bit

Take the 4 least significant bytes above and convert to decimal:

$\rightarrow 0x00\ 00\ 00\ 00 = \mathbf{0}$ = Total measuring range LSB

Then take the 4 most significant bytes above and convert to decimal:

$\rightarrow 0x00\ 00\ 00\ 10 = \mathbf{16}$ = Total measuring range MSB

In the configuration software enter the decimal values:

Total measuring range LSB = **0**

Total measuring range MSB = **16**

8.11 Velocity reference value

This parameter sets the value for the velocity reference (100 % value) for N2/N4 normalized speed actual values NIST A, NIST B.

Note: This parameter is only used when N2/N4 Normalization has been chosen as velocity measuring unit

8.12 Maximum Master Sign-of-Life failures

With this parameter the number of allowed failures of the master's sign of life is defined. The default value is one (1).

Parameter	Meaning	Value
Maximum Master Sign-of-Life failures	The number of permissible failures of the master's life sign.	0...255

Table 61 Maximum master Sign of life failures

Note: This parameter is only supported in Encoder profile V3.1 or V4.2 mode. When using the encoder in V4.1 mode the value is fixed to 1.

8.13 Velocity measuring units

This parameter defines the coding of the velocity measuring units used to configure the signals NIST A and NIST B. Telegrams 82, 83, 84, 86, 88, 89 and manufacturer specific telegram 59000 and 59001 includes velocity output and needs a declaration of the velocity measuring unit.

Parameter	Meaning	Value
Velocity measuring units	Definition of the units for the encoder velocity output value	See below
Velocity measuring units for encoder		Value
Steps/s		0
Steps/100 ms		1
Steps/10 ms		2
RPM Note: RPM is not supported for linear encoders		3
N2/N4 normalized		8

Table 62 Velocity measuring units for encoders

Velocity measuring units for gateway	Value
Steps/s	0
Steps/100 ms	1
Steps/10 ms	2
RPM/200 ms	3
RPM/100 ms	4
RPM/80 ms	5
RPM/60 ms	6
RPM/40 ms	7
N2/N4 normalized	8

Table 63 Velocity measuring units for gateways

Note: **RPM is not supported for linear encoders**

Note: **N2/N4 Normalization is not supported for encoder gateway when used with a linear scale**

In order to provide a correct velocity value, the maximum permissible rotational shaft speed for singleturn encoders used in IRT mode is limited to the values shown in the table below.

Bus cycle time	Max permitted rotational shaft speed
1 ms	12000 rpm
2 ms	12000 rpm
3 ms	8000 rpm
4 ms	6000 rpm

Table 64 Max permitted rotational speed

The velocity calculations are made with a maximum of 19 bits resolution. If the resolution is higher than 2^{19} , the value used for velocity calculations is automatically reduced to 2^{19} .

Example:

For a 37 bit multiturn encoder with a 2^{25} singleturn resolution and a 2^{12} multiturn resolution, the maximum singleturn value for velocity calculations will be 2^{19} . For a singleturn encoder the maximum resolution can be up to 31 bit, but the value used for velocity calculations will in this case also be 2^{19} .

Note: **In case of the steps/s unit, an average is made over 200 ms and the value is multiplied by 5.**

Note: **If scaling has been set on the device the velocity calculation is based on the scaled position value. Consequently the accuracy of the velocity value is dependent of the scaling set to the device.**

8.14 Encoder profile version

The encoder Profile Version is the version of the encoder profile document implemented in the device. This parameter is not affected by the Compatibility mode settings.

Bits	Meaning
0..7	Profile Version, least significant number, (value range: 0-99), decimal coding
8..15	Profile Version, most significant number, (value range: 0-99), decimal coding
16..31	Reserved

Table 65 Encoder profile

8.15 Operating time

The operating time monitor stores the operating time for the device in operating hours. The operating time is saved every six minutes in the non-volatile memory in the device. This happens as long as the device is powered on.

If the operating time function is not used the operating time value is set to the maximum value (0xFFFF FFFF).

Parameter	Meaning	Data type
Operating time	The accumulated power on time	Unsigned 32

Table 66 Operating time

8.16 Offset value

The offset value is calculated in the preset function and shifts the position value with the calculated value. The offset value is stored in a non-volatile memory and can be read from the device at any time. The data type for the offset value is a 32 bit or 64 bit binary value with sign, whereby the offset value range is equal to the measuring range of the device.

The preset function is used after the scaling function. This means that the offset value is indicated according to the scaled resolution of the device.

Parameter	Meaning	Data type
Offset value	The offset value for encoders with a measuring range of maximum 32 bits	Integer 32
Offset value 64 bit	The offset value for encoders with a measuring range exceeding 32 bits	Integer 64

Table 67 Offset value

Note: **The offset value is read only and cannot be modified by a parameter write access.**

8.17 Acyclic data

The devices supports the following acyclic data exchange functions.

8.17.1 PROFdrive parameters

The following PROFdrive parameters are supported:

PNU = Parameter number

PNU	Significance	Data type	Read/Write
922	Telegram selection	Unsigned 16	R
925	Number of Controller Sign-of-Life failures which may be tolerated.	Unsigned 16	R/W
964	Drive Unit identification	Array[n] Unsigned 16	R
965	Profile identification number	Octet string 2	R
971	Transfer to non-volatile memory	Unsigned 16	W
972	Reset encoder device Note: Only available when the encoder is configured according to encoder profile 4.2.	Unsigned 16	R/W
974	Base Mode Parameter Access service identification	Array[n] Unsigned 16	R
975	Encoder object identification	Array[n] Unsigned 16	R
979	Sensor format	Array[n] Unsigned 32	R
980	List of supported parameters	Array[n] Unsigned 16	R

Table 68 Supported PROFdrive parameters

8.17.2 Device parameter numbers

The table below specifies the device specific parameter that is supported.

PNU	Significance	Data type	Read/Write
60000	N2/N4 Velocity reference value	Float 32	R/W
60001	Velocity value normalization	Unsigned 16	R/W
61000	Name of station	Octet string [240]	R
61001	IP of station	Unsigned 32	R
61002	MAC of station	Octet string[6]	R
61003	Default gateway of station	Unsigned 32	R
61004	Subnet Mask Of Station	Unsigned 32	R
65000	Preset value	Integer 32	R/W
65001	Operating status	Array [n] Integer 32	R
65002	Preset value 64 bit	Integer 64	R/W
Additional parameters available when the encoder is configured according to the encoder profile v.4.1. (See chapter 8.7 Encoder Profile)			
65003	Operating status 64 bit	Array [n] Integer 64	R

Functional description of the device

PNU	Significance	Data type	Read/Write
Additional parameters available when the encoder is configured according to the encoder profile v.4.2. (See chapter 8.7 Encoder Profile)			
65004	Function control	Unsigned 32	R/W
65005	Parameter control	Unsigned16	R/W
65006	Measuring units per revolution	Unsigned 32	R/W
65007	Total measuring range in measuring units	Unsigned 32	R/W
65008	Measuring units per revolution 64 bit	Unsigned 64	R/W
65009	Total measuring range in measuring units 64 bit	Unsinged 64	R/W

Table 69 Device specific parameter

8.17.3 Parameter 65000 and 65002– Preset value

The parameter 65000 and 65002 sets the value for the preset function. The parameter 65002 should be used if the preset value exceeds 32 bits.

PNU	65000
Significance	Preset value
Data type	Integer 32
Access	Read and write
Explanation	The preset value sets the value for the preset function. The preset value can be stored in the non-volatile memory by PROFIdrive parameter 971 and will be re-loaded at each start up if stored.

Table 70 Parameter 65000, Preset value

PNU	65002
Significance	Preset value
Data type	Integer 64
Access	Read and write
Explanation	The preset value sets the value for the preset function. The preset value can be stored in the non-volatile memory by PROFIdrive parameter 971 and will be re-loaded at each start up if stored.

Table 71 Parameter 65002, Preset value 64 bit

8.17.4 Parameter 65001 – Operating status

This parameter structure is a read only structure where information on the device operating status can be found. It is a complement to the PROFdrive parameter 979 described in the Profile for Drive Technology.

PNU	65001
Significance	Encoder Operating Status
Data type	Array[n] Integer 32
Access	Read
Explanation	The operating status displays the status of the encoder.

Table 72 Parameter 65001, Operating status

Sub index	Meaning
0	Header
1	Operating status
2	Faults
3	Supported Faults
4	Warnings
5	Supported warnings
6	Encoder Profile version
7	Operating time
8	Offset value
9	Measuring units per revolution
10	Total measuring range in measuring units
11	Velocity value normalization

Sub index	Meaning
	Sub-indices 12...18 are only available when the encoder is configured according to the encoder Profile version V.4.2. (See chapter 8.7 Encoder Profile)
12	Velocity reference value
13	Measuring units per revolution 64 bit MSW
14	Measuring units per revolution 64bit LSW
15	Total measuring range in measuring units 64 bit MSW
16	Total measuring range in measuring units 64 bit LSW
17	Offset value 64 bit MSW
18	Offset value 64 bit LSW

Table 73 Parameter 65001, Sub index

Sub index 1: Operating status

In sub index 1 the status of different encoder functions can be read out. The mapping of the respective functions is according to the table below.

Bits	Definition
0	Code sequence
1	Class 4 functionality
2	G1_XIST1 Preset control
3	Scaling function control
4	Alarm channel control
5	V3.1 Compatibility mode
6	Encoder type
7..27	Reserved for future use
28..31	Reserved for manufacturer

Table 74 Parameter 65001, Sub index 1

8.17.5 Parameter 65003 – Operating status 64 bit

The parameter 65003 is only available when the encoder is configured according to encoder profile V4.1. (See chapter 8.7 Encoder Profile).

Parameter 65003 is a read only parameter where information on the 64 bit parameter values can be found.

PNU	65003
Significance	Operating Status 64 bit
Data type	Array[n] Integer 64
Access	Read
Explanation	The status of operating parameters with 64 bit length.

Table 75 Parameter 65003, Operating status 64 bit

Sub index	Meaning
0	Header
1	Offset value 64 bit
2	Measuring units per revolution 64 bit
3	Total measuring range in measuring units 64 bit

Table 76 Parameter 65003

8.17.6 Parameter 65004 – Function control

The setting of the Function control parameter permits or locks the encoder related functionalities. For more detailed information about the bit definition refer to chapter 8.1-8.8.

PNU	65004
Significance	Function control
Data type	Unsigned32
Access	Read/write
Explanation	This parameter configures position acquisition related functionality

Table 77 Parameter 65004, Function control

Bits	Definition
0	Code sequence
1	Class 4 functionality
2	G1_XIST1 Preset control
3	Scaling function control
4	Alarm channel control
5	V3.1 Compatibility mode
6	Encoder type
7..31	Reserved

Table 78 Parameter 65004, Bit definition

8.17.7 Parameter 65005 – Parameter control

The parameter 65005 controls the run-up initialization of the encoder parameters and the online write access on the encoder parameters via the BMP parameter channel.

PNU	65005
Significance	Parameter control
Data type	Unsigned16
Access	Read/write
Explanation	This parameter configures all available parameter initialization and access functionality

Table 79 Parameter 65005, Parameter control

Bits	Meaning
0-1	Parameter initialization control
2-4	Parameter write protect
5	Parameter 65005 write protect
6	Reset control write protect
7..15	Reserved

Table 80 Parameter 65005, Bit definition

Functional description of the device

Bit	Value	Attribute	Comments
0-1	0	PRM	Initialization of parameter set out of PRM Data Block enabled
	1	NV-RAM	Only initialization via internal NV-RAM
2-4	0	Write all	Write/read access to all parameters
	1	Read only	Read access to all parameters. Parameter 971, 972 and 65005 excluded
5	0	Write all	Write/read access to 65005 and 971
	1	Read only	Read access to 65005 and 971
6	0	Write all	Reset control via 972 enabled
	1	Read only	Reset control via 972 disabled
7..15	Reserved		

Table 81 Parameter 65005, Detailed bit definition

8.17.8 Parameter 65006-65009 – Scaling function

With these parameters the encoder's internal numerical value is converted by software to change the resolution of the encoder.

Parameter	Meaning	Data type
65006	Measuring units per revolution/Measuring step: Rotary encoder: The singleturn resolution in measuring steps Linear encoder: The measuring step in nm	Unsigned32
65007	Total measuring range in measuring units: The total absolute measuring range in measuring steps	Unsigned32
65008	Measuring units per revolution 64 bit: The singleturn resolution for rotary encoders with a resolution exceeding 32 bits per revolution	Unsigned64
65009	Total measuring range in measuring units 64bit: The total absolute measuring range for encoders with a range exceeding 32 bits	Unsigned64

Table 82 Parameters 65006-9, Scaling function

8.17.9 Identification & Maintenance functions

In addition to the PROFIdrive parameter 964, Device Identification, I&M functions are supported by the devices. The I&M functions can be accessed with record index 0xAFF0-0xAFF4. The following I&M functions are supported.

I&M Parameter	Octets	Comment
Header		
Manufacturer specific	10	Not used
I&M Block		
MANUFACTURER_ID	2	Manufacturer ID
ORDER_ID	20	Part number
SERIAL_NUMBER	16	Serial number
HARDWARE_REVISION	2	Not used
SOFTWARE_REVISION	4	Software revision
REVISION_COUNTER	2	Not used
PROFILE_ID	2	Profile number
PROFILE_SPECIFIC_TYPE	2	Type of device,
IM_VERSION	2	Version of the I&M profile
IM_SUPPORTED	2	Value = 0 means support of I&M

Table 83 Identification & Maintenance

9 Firmware upgrade

The Heidenhain encoder and gateway supports a firmware upgrade function. The firmware upgrade function has been developed to offer the possibility to upgrade the device to the latest released firmware.

The update is performed with a PC software with an interface as figure 52 below. The PC software is available from Heidenhain Website.

The following steps shall be followed to perform a firmware Upgrade:

- Make sure that you have the firmware upgrade PC software and a valid *.bin firmware file
- Make sure that the device has a valid IP address set
- Connect the device to the PC where the Firmware upgrade tool is located
- Click on the Open file tab and browse to the location of the firmware *.bin file.
- Enter the IP address of the encoder in the IP address field
- Click on the Update button
- Once the update is finished this is indicated in the status field with the text "Firmware updated successfully"

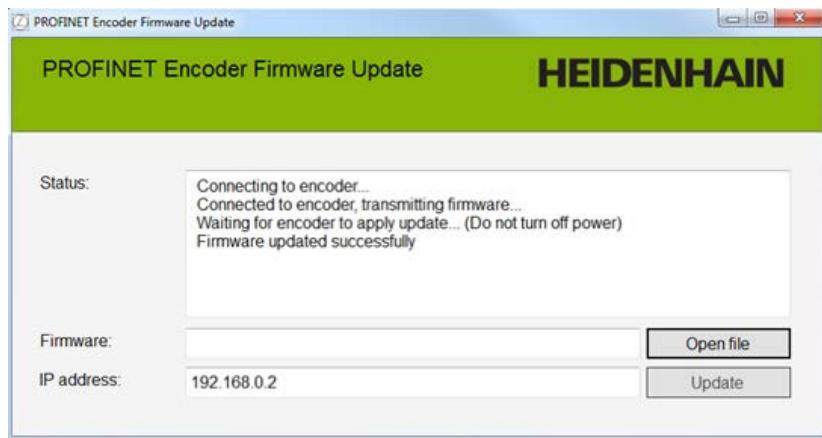


Figure 52 Firmware upgrade PC software

10 Device replacement using LLDP

The devices support Link Layer Discovery Protocol (LLDP). LLDP is essentially a neighbor discovery protocol used by network devices for advertising of their identity, capabilities and interconnections.

In a PROFINET network all IO devices are recognized by their device name.

Sometimes an IO device needs to be replaced in an automation system, and this is when LLDP is useful. Using LLDP, the neighbor relations between the individual IO device and the IO controller are analyzed and stored on the IO controller. If an IO device has been replaced, the IO controller will recognize this and will redefine the device name.

Below is an example on how to exchange an IO device using LLDP:

Select properties of the PN-IO controllers interface module and enable Support device replacement without exchangeable medium.

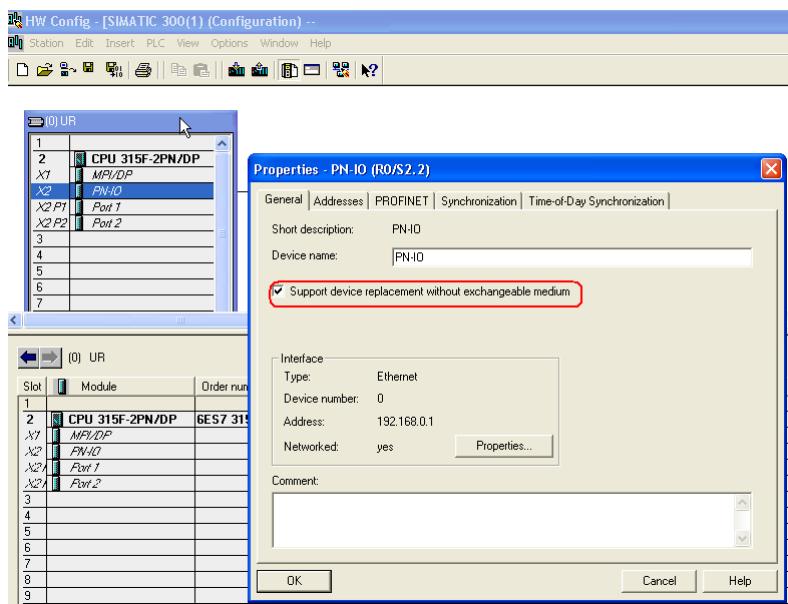


Figure 53 LLDP Properties

Configure the topology of the system for all connected ports.

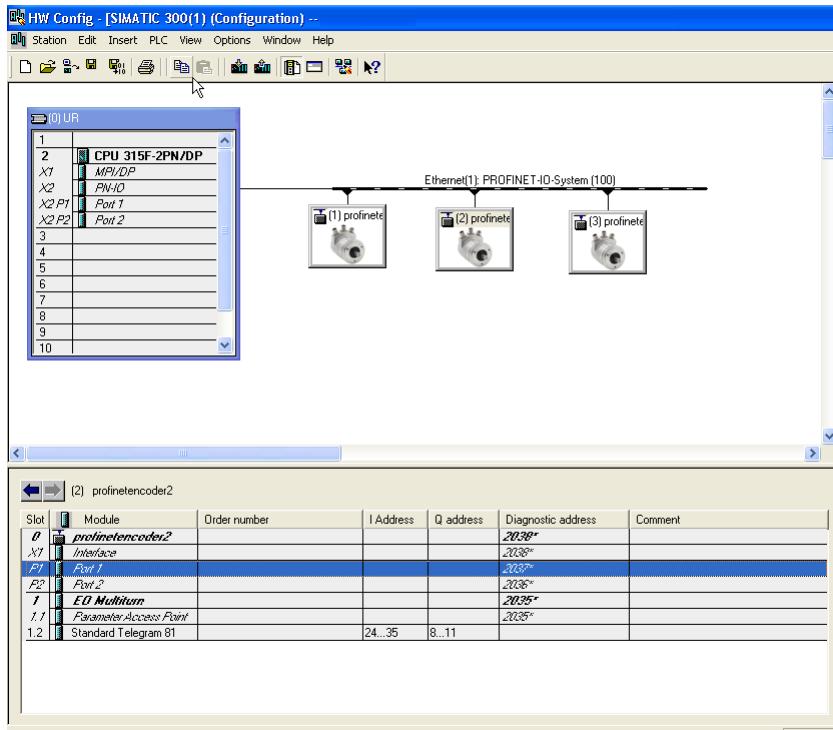


Figure 54 LLDP Port configuration

Device replacement using LLDP

In the properties window, select the corresponding partner port.

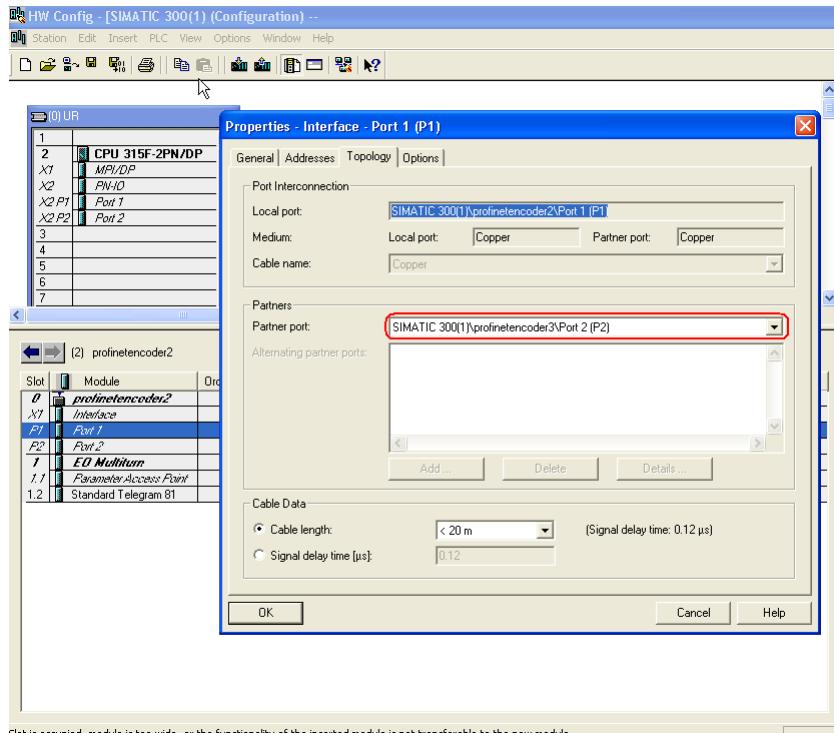


Figure 55 LLDP Partner port settings

Then select Edit-> PROFINET IO->Topology to open the topology editor.

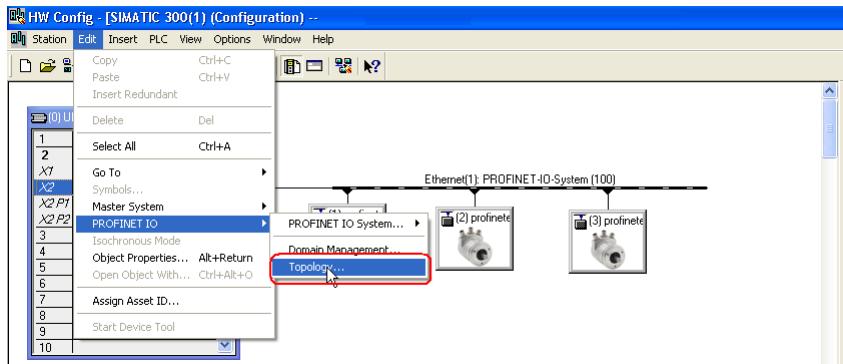


Figure 56 Open Topology editor

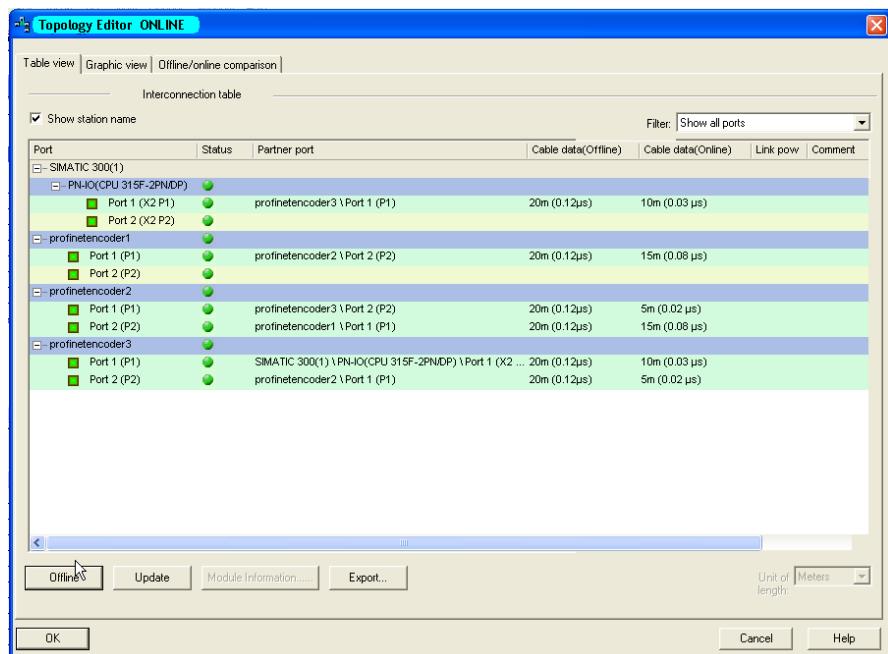


Figure 57 Topology editor

Verify that the offline topology matches the online topology.

Device replacement using LLDP

After the above has been verified it is possible to replace any IO device if the ports are reconnected in the same way and the new device is set to factory reset.

To manually do a factory set of the encoder, follow the steps below:

Select PLC-> Ethernet-> Edit Ethernet Node.

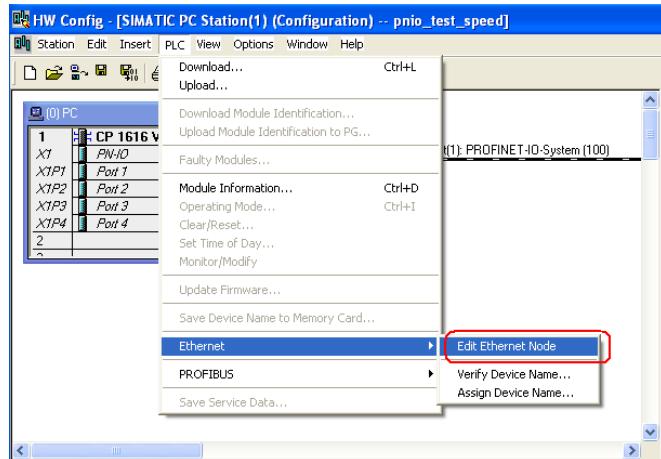


Figure 58 Edit Ethernet node

Enter the device MAC-address and then click on the Reset button. The MAC-address of the device is written on the device label.

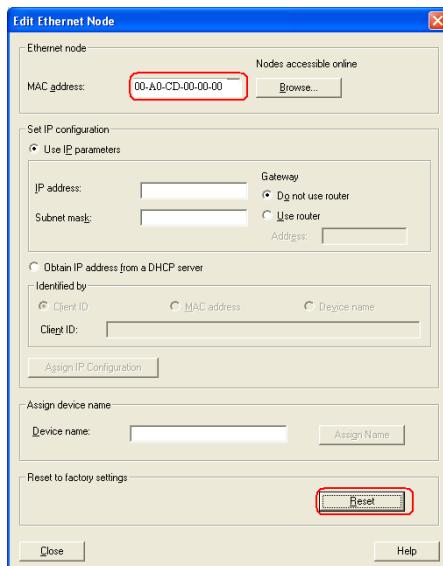


Figure 59 Factory reset

Click yes in the confirmation window to reset the encoder to its factory settings.

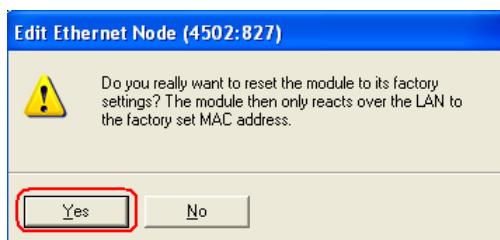


Figure 60 Factory set configuration

11 Encoder state description

11.1 Normal Operation state

11.1.1 Profile version 4.x

If using devices complying with encoder profile v4.1 or v4.2, then bit 10 Control by PLC in Control word 2 needs to be set before the data in Control word is valid. If not set, Control word is not used by the device firmware. See chapter 8.7 for more information about encoder profiles.

11.1.2 Profile version 3.x

If using devices complying with encoder profile 3.x, the data in Control word is always valid and bit 9 Control requested in Status word 2 is always cleared.

11.1.3 Profile version 3.x and 4.x

When using telegram 81-83 and Control word bit 13 Request absolute value cyclically is set, then Status word bit 13 Transmit absolute value cyclically is set. Status word bit 13 is cleared (bit 13=0) when Control word bit 13 is cleared. Status word bit 13 is always cleared, when using telegram 84 due to the fact that no absolute value is sent in G1 XIST2.

11.2 Parking state

This state can be reached from any other state. The position value in G1 XIST1, G1 XIST2 and G1 XIST3 are set to zero. Errors are cleared and alarms are disabled in parking mode. The parking mode is activated by setting bit 14 in Control word (G1 STW).

11.3 Set/shift home position (Preset)

The Set/shift home position is initiated when Control word (G1 STW) bit 12 Request set/shift of home position is set. In this case the Status word bit 12 Set/shift of home position executed is set to 1. In order to initiate a set/shift home position Class 4 functionality must be enabled otherwise there will be an error message in G1 XIST2 and the encoder Module LED will turn orange indicating a warning.

11.3.1 Preset depending on different telegrams

When using standard telegram 81-83 the acyclic encoder parameter 65000 Preset value 32 bit shall be used to set a preset value (≤ 32 bit) for the encoder. If the acyclic parameter 65002 Preset value 64 bit is used in this case, an error message will be returned. When using telegram 86, 87 and 89 the Preset value is set directly in the output data.

With telegram 84, the acyclic parameter 65002 Preset value 64 bit shall be used to set a preset value (≤ 64 bit) for the device. If the acyclic parameter 65000 Preset value 32 bit is used in this case, an error message will be returned.

When using telegram 88 the preset value is set directly in the output data. The operating status is read by parameter 65001 Operating status and 65003 Operating status 64bit if using the encoder in encoder profile v4.1. If using the encoder in encoder profile v4.2 the operating status is read by parameter 65001.

11.3.2 Absolute preset with negative value

Preset data sent with acyclic parameter 65000 or 65002 are signed values. The relative preset mode uses signed preset values, but with the absolute preset mode no preset will be made if a negative preset value (set with parameter 65000 or 65002) is used while trying to initiate an absolute preset.

11.4 Error state

This state is reached when an error has occurred. The device can enter this state from both the normal operation state and the set-shift home position state. If an error occurs, the Status word (G1 ZSW) bit 15 Sensor error is set, and the error code is displayed in G1_XIST2 instead of the position value.

11.5 Error acknowledgement

This state is reached when an error has occurred, and Control word (G1 STW) bit 15 acknowledging a sensor error has been set. The Status word bit 11 Requirement of error acknowledgment detected and Status word (G1 ZSW) bit 15 Sensor error are set to 1.

11.6 Start up

This state is only reached when Control word (G1 STW) bit 14 Activate parking sensor are cleared (=0). Once the Control word bit 14 are cleared, it takes about 500 ms before the Status word bit 14 Parking sensor active are set to zero (=0). The reason for the delay is that before the encoder goes to normal operation mode, an initializing of the encoder is made.

12 Frequently asked questions FAQ

1. Problem:

Preset, parking mode and error reset is not possible.

Solution:

The Control By PLC bit in Control Word 2 has to be set to 1 (Profile V4.1/V4.2).

2. Problem:

The preset value is lost if the power supply is switched off.

Solution:

Parameter 971 has to be set to 1 in order to save the preset value into non-volatile memory.

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

 +49 8669 31-0

 +49 8669 32-5061

E-mail: info@heidenhain.de

Technical support  +49 8669 32-1000

Measuring systems  +49 8669 31-3104

E-mail: service.ms-support@heidenhain.de

NC support  +49 8669 31-3101

E-mail: service.nc-support@heidenhain.de

NC programming  +49 8669 31-3103

E-mail: service.nc-pgm@heidenhain.de

PLC programming  +49 8669 31-3102

E-mail: service.plc@heidenhain.de

APP programming  +49 8669 31-3106

E-mail: service.app@heidenhain.de

www.heidenhain.de