



HEIDENHAIN



GAGE-CHEK 2000 Demo

User's Manual

Evaluation Unit

English (en)
07/2024

Table of contents

1	Fundamentals.....	5
1.1	Overview.....	6
1.2	Information on the product.....	6
1.2.1	Demo software for demonstration of the device functions.....	6
1.2.2	Demo software features.....	6
1.3	Intended use.....	6
1.4	Improper use.....	6
1.5	Notes on reading the documentation.....	6
1.6	Symbols and fonts used for marking text.....	7
2	Software Installation.....	9
2.1	Overview.....	10
2.2	Downloading the installation file.....	10
2.3	System requirements.....	10
2.4	Installing GAGE-CHEK 2000 Demo in Microsoft Windows.....	11
2.5	Uninstalling GAGE-CHEK 2000 Demo.....	14

3	Basic Operation.....	15
3.1	Overview.....	16
3.2	Using the touchscreen and input devices.....	16
3.2.1	Touchscreen and input devices.....	16
3.2.2	Gestures and mouse actions.....	16
3.3	General operating elements and functions.....	18
3.4	GAGE-CHEK 2000 Demo – startup and shut-down.....	20
3.4.1	Starting GAGE-CHEK 2000 Demo.....	20
3.4.2	Shutting down GAGE-CHEK 2000 Demo.....	21
3.5	User login and logout.....	22
3.5.1	User login.....	22
3.5.2	User logout.....	22
3.6	Setting the language.....	22
3.7	User interface.....	23
3.7.1	User interface after start-up.....	23
3.7.2	Main menu of the user interface.....	23
3.7.3	Measure menu.....	25
3.7.4	File management menu.....	26
3.7.5	User login menu.....	27
3.7.6	Settings menu.....	28
3.7.7	Switch-off menu.....	29
3.8	Position display.....	30
3.8.1	Operating elements of the position display.....	30
3.9	Customizing the workspace.....	31
3.9.1	Hiding and showing the main menu.....	31
3.9.2	Hiding or displaying the function bar.....	31
3.9.3	Scrolling the function bar.....	31
3.9.4	Moving functions on the function bar.....	31
3.10	Using the function bar.....	32
3.10.1	Operating elements of the function bar.....	32
3.10.2	Function elements.....	32

4	Software Configuration.....	35
4.1	Overview.....	36
4.2	Setting the language.....	36
4.3	Activating software options.....	37
4.4	Selecting the product version (optional).....	38
4.5	Copying the configuration file.....	38
4.6	Uploading the configuration data.....	39
5	ScreenshotClient.....	41
5.1	Overview.....	42
5.2	Information about ScreenshotClient.....	42
5.3	Starting ScreenshotClient.....	43
5.4	Connecting ScreenshotClient with the demo software.....	43
5.5	Connecting ScreenshotClient with the unit.....	44
5.6	Configuring ScreenshotClient for taking screenshots.....	44
5.6.1	Configuring the storage location and file name for screenshots.....	44
5.6.2	Configuring the user interface language of screenshots.....	44
5.7	Creating screenshots.....	45
5.8	Exiting ScreenshotClient.....	46
6	Index.....	47
7	List of figures.....	48

1

Fundamentals

1.1 Overview

This chapter contains information about the product and this manual.

1.2 Information on the product

1.2.1 Demo software for demonstration of the device functions

GAGE-CHEK 2000 Demo is a software application you can install on a computer independently of the device. GAGE-CHEK 2000 Demo helps you to become familiar with, try out or present the functions of the device.

1.2.2 Demo software features

Because of the missing hardware environment the range of features of the demo software does not correspond to the complete functional range of the device. However, you can use the descriptions to familiarize yourself with the most important functions and the user interface.

1.3 Intended use

The products of the GAGE-CHEK 2000 series are advanced digital evaluation electronics for the measurement of exact measured values and for positioning tasks in metrology applications. The products are used primarily on measuring machines and positioning equipment.

GAGE-CHEK 2000 Demo is a software product for demonstration of the basic features of the GAGE-CHEK 2000 series products. GAGE-CHEK 2000 Demo may be used only for presentation, training or testing purposes.

1.4 Improper use

GAGE-CHEK 2000 Demo is not intended for any use other than the intended use. Any use for other purposes is prohibited, specifically:

- For productive purposes in production systems
- As part of production systems

1.5 Notes on reading the documentation

Have you found any errors or would you like to suggest changes?

We are continuously striving to improve our documentation for you. Please help us by sending your suggestions to the following e-mail address:

userdoc@heidenhain.de

1.6 Symbols and fonts used for marking text

In these instructions the following symbols and fonts are used for marking text:

Depiction	Meaning
▶ ... > ...	Identifies an action and the result of this action Example: ▶ Tap OK > The message is closed
■ ... ■ ...	Identifies an item of a list Example: ■ TTL interface ■ EnDat interface ■ ...
Bold	Identifies menus, displays and buttons Example: ▶ Tap Shut down > The operating system shuts down. ▶ Turn the power switch off

2

**Software
Installation**

2.1 Overview

This chapter provides all of the information needed for downloading and properly installing GAGE-CHEK 2000 Demo on a computer.

2.2 Downloading the installation file

Before you can install the demo software on a computer, you need to download an installation file from the HEIDENHAIN Portal.

i To download the installation file from the HEIDENHAIN Portal, you need access rights to the **Software** portal folder in the directory of the appropriate product.

If you do not have access rights to the Portal's **Software** folder, you can request the access rights from your HEIDENHAIN contact person.

- ▶ Download the latest version of GAGE-CHEK 2000 Demo here:
<https://portal.heidenhain.de>
- ▶ Select the download folder of your browser
- ▶ Unpack the downloaded file with the extension **.zip** into a temporary storage folder
- > The following files will be unpacked into the temporary storage folder:
 - Installation file with the extension **.exe**
 - File **DemoBackup.mcc**

2.3 System requirements

If you want to install GAGE-CHEK 2000 Demo on a computer, the computer system must meet the following requirements:

- Microsoft Windows 7 or higher
- Screen resolution of at least 1280 × 800 recommended

2.4 Installing GAGE-CHEK 2000 Demo in Microsoft Windows

- ▶ Select the temporary storage folder into which you unpacked the downloaded file with the **.zip** extension
Further information: "Downloading the installation file", Page 10
- ▶ Run the installation file with the extension **.exe**
- ▶ The installation wizard is opened:

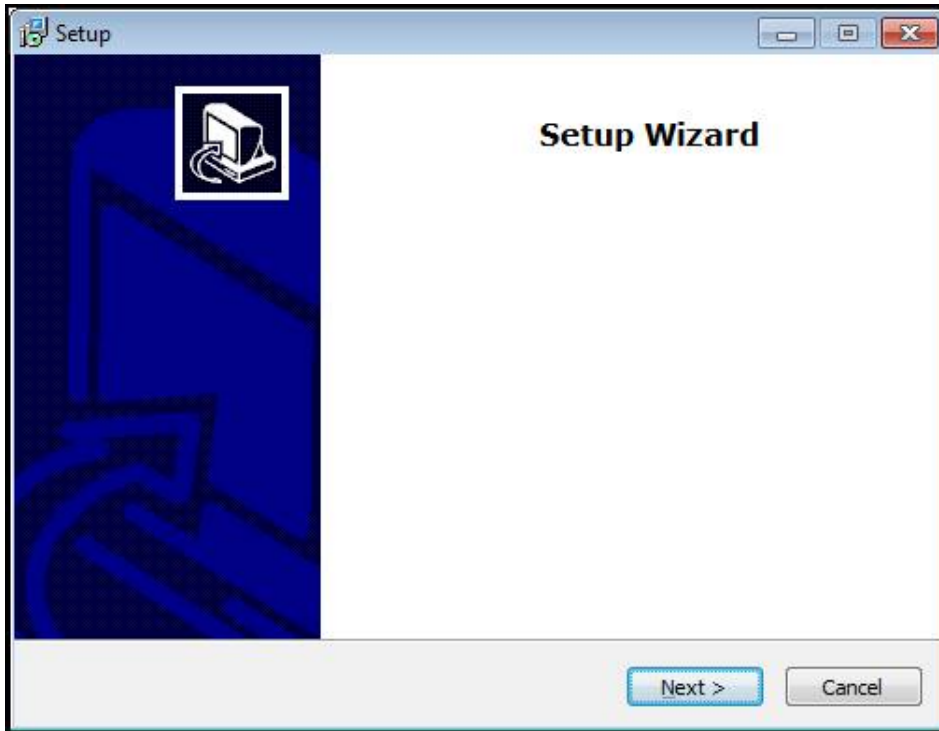 


Figure 1: **Installation wizard**

- ▶ Click **Next**
- ▶ In the **License Agreement** installation step, accept the terms of the license
- ▶ Click **Next**



In the **Select Destination Location** installation step, the installation wizard suggests a storage location. We recommend retaining the suggested storage location.

- ▶ In the **Select Destination Location** installation step, select the storage location to which you want to save GAGE-CHEK 2000 Demo
- ▶ Click **Next**



In the **Select Components** installation step, the ScreenshotClient program is also installed by default. ScreenshotClient enables you to take screenshots of the active screen.

If you want to install ScreenshotClient

- ▶ In the **Select Components** installation step, leave the default settings unchanged

Further information: "ScreenshotClient", Page 41

- ▶ In the **Select Components** installation step:
 - Select the type of installation
 - Activate or deactivate the option **Screenshot Utility**

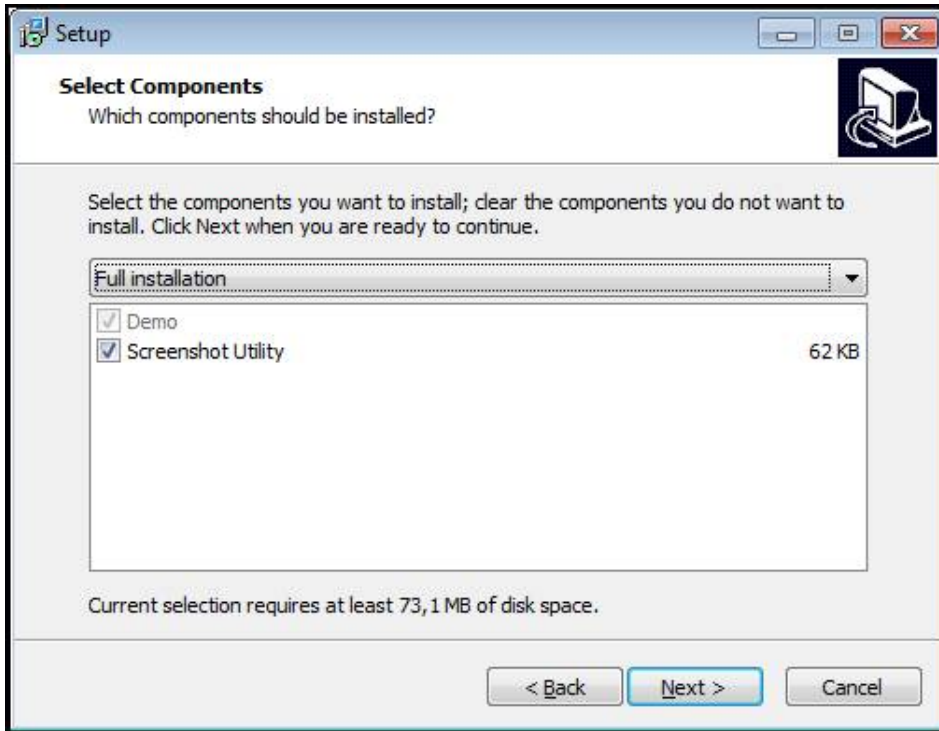 


Figure 2: Installation wizard with activated options **Demo software** and **Screenshot Utility**

- ▶ Click **Next**
- ▶ In the **Select Start Menu Folder** installation step, select the storage location at which you want to create the start menu folder
- ▶ Click **Next**
- ▶ In the **Select Additional Tasks** installation step, select or deselect **Desktop icon**
- ▶ Click **Next**
- ▶ Click **Install**
- > Installation starts—the status of installation is shown in the progress bar.
- ▶ After installation has been completed successfully, use **Finish** to close the installation wizard
- > The program has been successfully installed on your computer.

2.5 Uninstalling GAGE-CHEK 2000 Demo

- ▶ Click into the search window of the Windows task bar
- ▶ Enter "Remove" as the search term
- ▶ Click these elements in succession:
 - **Adding or removing programs**
 - **GAGE-CHEK 2000 Demo**
 - **Uninstalling**
- ▶ Follow the instructions of the wizard
- > The program has been successfully removed from your computer.

3

Basic Operation

3.1 Overview

This chapter describes the user interface, operating elements, and basic functions of GAGE-CHEK 2000 Demo.

3.2 Using the touchscreen and input devices

3.2.1 Touchscreen and input devices

The operating elements on the user interface of GAGE-CHEK 2000 Demo are operated via a touchscreen or a connected mouse.

To enter data, you can use the screen keyboard of the touchscreen or a connected keyboard.

3.2.2 Gestures and mouse actions

To activate, switch or move the operating elements of the user interface, you can use GAGE-CHEK 2000 Demo's touchscreen or a mouse. Gestures are used to operate the touchscreen and the mouse.

i The gestures for operating the touchscreen may differ from the gestures for operating the mouse.

If the gestures for operating the touchscreen differ from those for operating the mouse, then these instructions describe both operating options as alternative actions.

The alternative actions for operating the touchscreen or the mouse are identified by the following symbols:



Operation using the touchscreen



Operation using the mouse

The following overview describes the different gestures for operating the touchscreen or the mouse:

Tapping



Means touching the screen briefly with your fingertip



Means pressing the left mouse button once

The actions initiated by tapping include

- Selection of menus, features, or parameters
- Entering characters with the screen keyboard
- Closing dialogs
- Displaying and hiding the main menu in the **Measure** menu
- Displaying and hiding the function bar in the **Measure** menu

Holding (long press)

Means touching the screen and holding your finger(s) on it for a few seconds



Means pressing the left mouse button once and holding it down

The actions initiated by holding are

- Quickly changing the values in input fields with plus and minus buttons
- Activate multiple selection

Dragging

Is a combination of long press and then swipe, moving a finger over the touchscreen when at least the starting point of motion is defined



Means pressing the left mouse button once and holding it down while moving the mouse; at least the starting point of the motion is defined

The actions initiated by dragging include

- Scrolling through lists and texts

Swiping

A flowing movement of a finger across the touchscreen without a defined starting and end point



Single pressing and holding down of the left mouse button while simultaneously moving the mouse; the starting point and end point of the movement are not clearly defined

The actions initiated by swiping include

- Switching the views

3.3 General operating elements and functions

The operating elements described below are available for configuring and operating the product via the touchscreen or input devices.





Screen keyboard


 
 



The screen keyboard enables you to enter text into the input fields of the user interface. Depending on the input field, a numeric or alphanumeric screen keyboard is shown.

Using the screen keyboard

- ▶ To enter values, tap an input field
- > The input field is highlighted.
- > The screen keyboard is displayed.
- ▶ Enter text or numbers
- > If the entry is correct and complete, a green check mark is displayed as applicable.
- > If the entry is incomplete or the values are incorrect, a red exclamation mark is displayed as applicable. In this case, the entry cannot be completed.
- ▶ To apply the values, confirm the entry with **RET**
- > The values are displayed
- > The screen keyboard disappears.

Operating elements

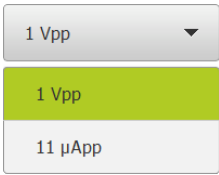Operating element	Function
	<p>Input fields with plus and minus buttons</p> <p>To adjust a numerical value, use the + (plus) and - (minus) buttons to the left and right of the numerical value.</p> <ul style="list-style-type: none"> ▶ Tap + or - until the desired value is displayed ▶ Long-press + or - to scroll through the values more quickly > The selected value is displayed.
	<p>Toggle switch</p> <p>Use the toggle switch to switch between functions.</p> <ul style="list-style-type: none"> ▶ Tap the desired function > The active function is shown in green. > The inactive function is shown in light gray.
	<p>Slide switch</p> <p>Use the slide switch to activate or deactivate a function.</p> <ul style="list-style-type: none"> ▶ Drag the slider to the desired position or ▶ Tap the slide switch > The function is activated or deactivated.
	<p>Slider</p> <p>Use the slider (horizontal or vertical) to continuously adjust values.</p> <ul style="list-style-type: none"> ▶ Drag the slider to the desired position > The selected value is displayed graphically or in percent.

Operating element	Function
	<p>Drop-down list</p> <p>Buttons that open drop-down lists are indicated by a triangle pointing down.</p> <ul style="list-style-type: none"> ▶ Tap the button > The drop-down list opens. > The active entry is highlighted in green. ▶ Tap the desired entry > The selected entry is applied.
	<p>Undo</p> <p>This button allows you to undo the last action.</p> <p>Processes that have already been concluded cannot be undone.</p> <ul style="list-style-type: none"> ▶ Tap Undo > The last action is undone.
	<p>Add</p> <ul style="list-style-type: none"> ▶ Tap Add to add a feature > The new feature is added.
	<p>Close</p> <ul style="list-style-type: none"> ▶ Tap Close to close a dialog
	<p>Confirm</p> <ul style="list-style-type: none"> ▶ Tap Confirm to conclude an action
	<p>Back</p> <ul style="list-style-type: none"> ▶ Tap Back to return to the higher level in the menu structure

3.4 GAGE-CHEK 2000 Demo – startup and shut-down

3.4.1 Starting GAGE-CHEK 2000 Demo

i Before using GAGE-CHEK 2000 Demo, you need to perform the steps for configuring the software.

GC

- ▶ Tap **GAGE-CHEK 2000 Demo** on the Microsoft Windows desktop
or
- ▶ Open the following in sequence in Microsoft Windows:
 - **Start**
 - **All programs**
 - **HEIDENHAIN**
 - **GAGE-CHEK 2000 Demo**

i

Two executable files with different modes of appearance are available:

- **GAGE-CHEK 2000 Demo**: starts within a Microsoft Windows window
- **GAGE-CHEK 2000 Demo (full screen)**: starts in full-screen mode

GC

- ▶ Tap **GAGE-CHEK 2000 Demo** or **GAGE-CHEK 2000 Demo (full screen)**
- > GAGE-CHEK 2000 Demo starts an output window in the background. The output window is not relevant for operation and is closed again when the GAGE-CHEK 2000 Demo is shut down.
- > GAGE-CHEK 2000 Demo starts the user interface with the **User login** menu.

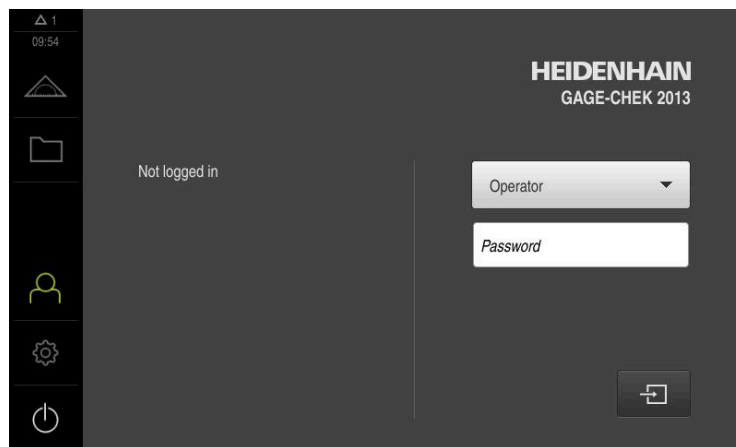 


Figure 3: **User login** menu

3.4.2 Shutting down GAGE-CHEK 2000 Demo



- ▶ Tap **Switch off** in the main menu



- ▶ Tap **Shut down**
- > GAGE-CHEK 2000 Demo is shut down



To shut down GAGE-CHEK 2000 Demo in the Microsoft Windows window, also use the **Switch-off** menu.

If you use **Close** to close the Microsoft Windows window, all settings will be lost.

3.5 User login and logout

In the **User login** menu, you can log in and out of the product as a user.

Only one user can be logged in to the product at a time. The logged-in user is displayed. Before a new user can log in, the logged-in user has to log out.



The product provides various authorization levels that grant the user full or restricted access to management and operation functionality.

3.5.1 User login



- ▶ Tap **User login** in the main menu
- ▶ In the drop-down list, select the **OEM** user
- ▶ Tap the **Password** input field
- ▶ Enter the "oem" password of the **OEM** user
- ▶ Confirm entry with **RET**



- ▶ Tap **Log in**
- > The user is logged in and the **Measure** menu is displayed.

3.5.2 User logout



- ▶ Tap **User login** in the main menu



- ▶ Tap **Log out**
- > The user is logged out.
- > All functions of the main menu are inactive, except for **Switch off**.
- > The product can only be used again after a user has logged in.

3.6 Setting the language

The user interface language is English. You can change to another language, if desired.



- ▶ Tap **Settings** in the main menu



- ▶ Tap **User**
- > The logged-in user is indicated by a check mark.
- ▶ Select the logged-in user
- > The language selected for the user is indicated by a national flag in the **Language** drop-down list.
- ▶ Select the flag for the desired language from the **Language** drop-down list
- > The user interface is displayed in the selected language.

3.7 User interface

i The unit is available in different versions, which are variously equipped. The user interface and available functions may vary depending on the version.

3.7.1 User interface after start-up

User interface after start-up

If automatic user login is activated, and the last user who logged in was of the **Operator** type, then the product displays the **Measure** menu with the workspace and the function bar after starting up.

If automatic user login is not activated, then the product opens the **User login** menu.

Further information: "User login menu", Page 27

3.7.2 Main menu of the user interface

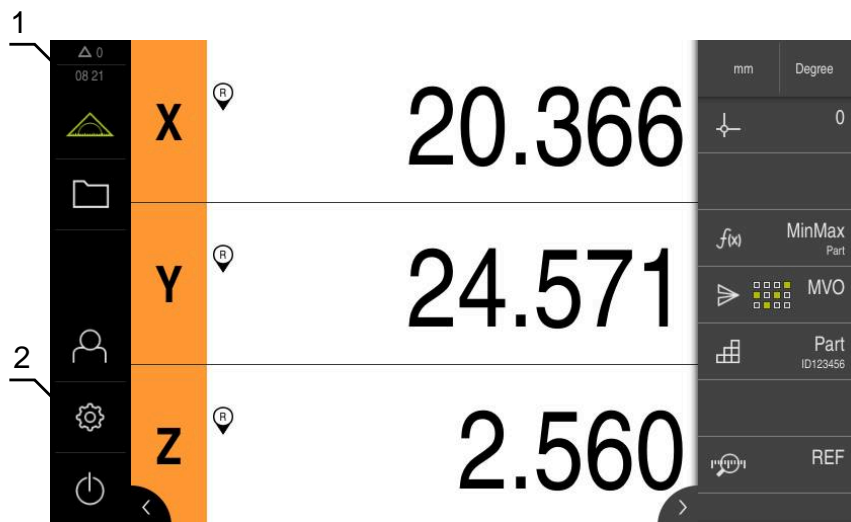 










Figure 4: User interface

- 1 Message display area, displays the time and the number of unclosed messages
- 2 Main menu with operating elements

Main menu operating elements

Operating element	Function
	Message Displays an overview of all messages and the number of messages that have not been closed
	Measure Positioning and measurement of minimum, maximum, and range; perform relative measurements Further information: "Measure menu", Page 25
	File management Management of the files that are available on the product Further information: "File management menu", Page 26

Operating element	Function
	<p>User login</p> <p>Login and logout of the user</p> <p>Further information: "User login menu", Page 27</p>
	<div data-bbox="501 495 1219 622" style="border: 1px solid black; padding: 5px;"> <p> If a user with additional permissions (Setup or OEM user type) is logged in, then the gear symbol appears.</p> </div>
	<p>Settings</p> <p>Settings of the product, such as setting up users, configuring sensors, or updating the firmware</p> <p>Further information: "Settings menu", Page 28</p>
	<p>Switch-off</p> <p>Shutdown of the operating system or activation of power-saving mode</p> <p>Further information: "Switch-off menu", Page 29</p>

3.7.3 Measure menu

Call



- ▶ Tap **Measure** in the main menu
- > The user interface for measuring and positioning is displayed.

Short description

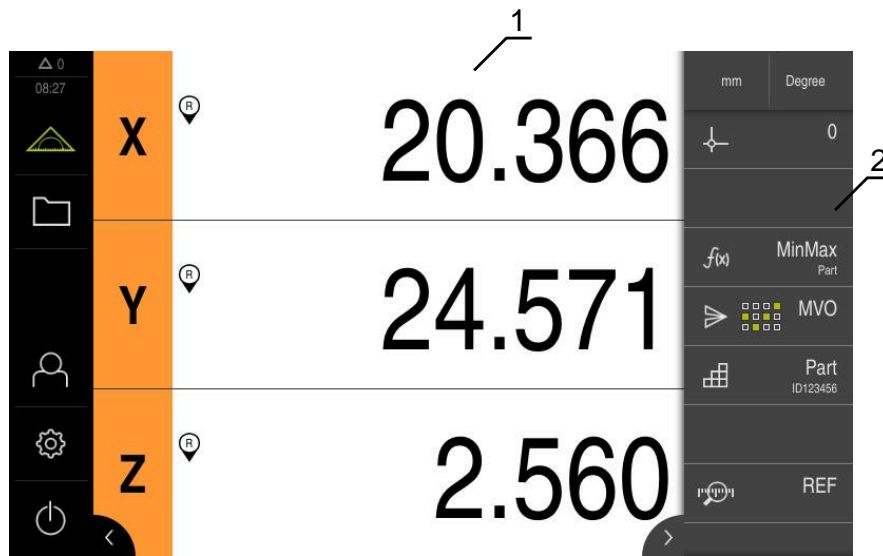 


Figure 5: **Measure** menu

- 1 The workspace shows the current position of the measuring plate
- 2 The function bar provides the quick access menu and the function elements

3.7.4 File management menu

Call



- ▶ Tap **File management** in the main menu
- > The file management user interface is displayed.

Short description

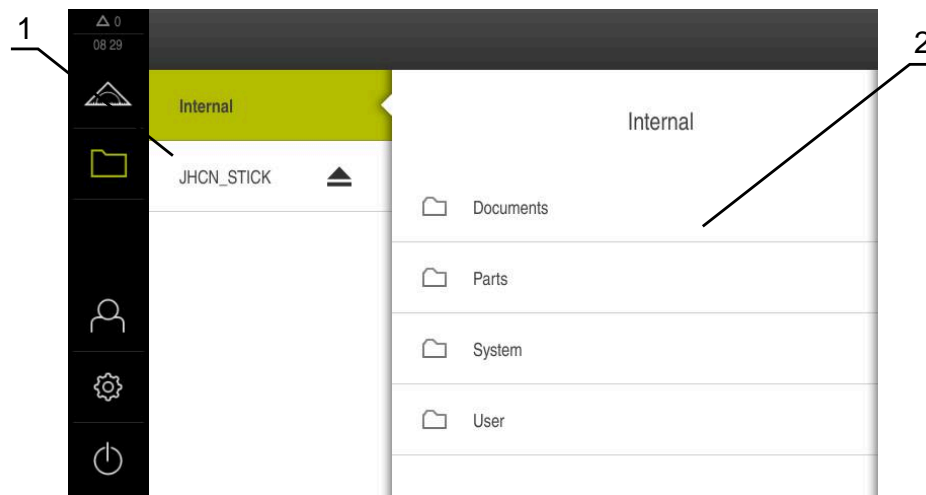 


Figure 6: **File management** menu

- 1 List of available storage locations
- 2 List of folders in the selected storage location

The **File management** menu shows an overview of the files stored in the product's memory.

3.7.5 User login menu

Call



- ▶ Tap **User login** in the main menu
- > The user interface for user login and logout is displayed.

Short description

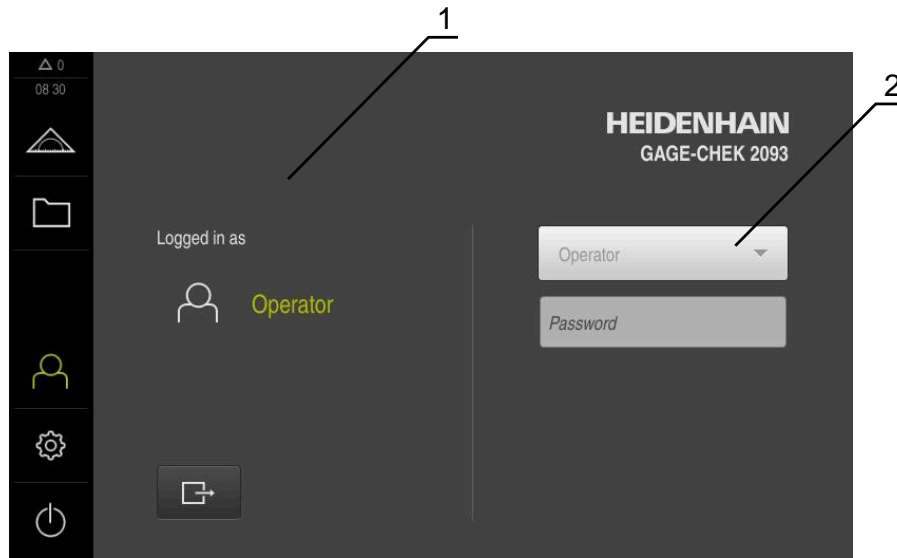 


Figure 7: **User login** menu

- 1** Display of the logged-in user
- 2** User login

The **User login** menu shows the logged-in user in the column on the left. The login of a new user is displayed in the right-hand column.

To log in another user, the logged-in user must first log out.

Further information: "User login and logout", Page 22

3.7.6 Settings menu

Call



- ▶ Tap **Settings** in the main menu
- The user interface for the product settings is displayed.

Short description

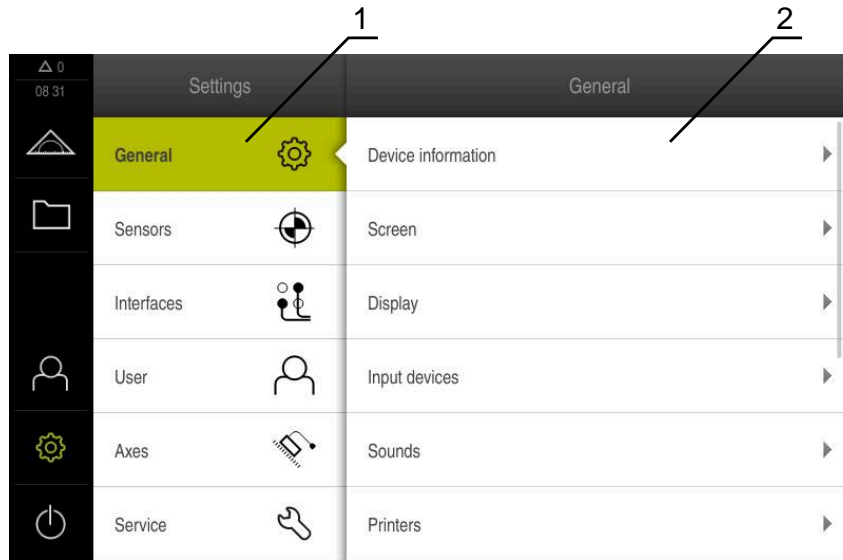 


Figure 8: **Settings** menu

- 1 List of setting options
- 2 List of setting parameters

The **Settings** menu shows all of the options for configuring the product. The settings parameters allow you to adapt the product to on-site requirements.



The product provides various authorization levels that grant the user full or restricted access to management and operation functionality.

3.7.7 Switch-off menu




Call



- ▶ Tap **Switch off** in the main menu
- > The operating elements for shutting down the operating system, for activating the energy-saving mode and for activating the cleaning mode are displayed.

Short description

The **Switch off** menu provides the following options:





 

 



Operating element	Function
	Shut down Shuts down GAGE-CHEK 2000 Demo
	Energy saving mode Switches the screen off and puts the operating system into energy-saving mode
	Cleaning mode Switches the screen off; the operating system continues unchanged

Further information: "GAGE-CHEK 2000 Demo – startup and shut-down", Page 20

3.8 Position display

The unit's position display shows the axis positions and additional information about the configured axes (if applicable).

3.8.1 Operating elements of the position display

Symbol	Meaning
	Axis key Axis key functions: <ul style="list-style-type: none"> ■ Tapping the axis key: opens the input field for position value ■ Holding down the axis key: sets the current position as zero point
	Reference mark search performed successfully
	Reference mark search not performed or no reference mark detected
	Current position: Current position of encoder (if the MinMax is active)
	Minimum: Lowest measured value (if the MinMax is active)
	Maximum: Highest measured value (if the MinMax function is active)
	Range: Difference between the maximum and minimum (if the MinMax function is active)
	Position value is equivalent to the diameter (if the D/R function is active)
	Copy : Copies the current position value. Available on the keyboard when entering a position value, as well as on the calculator keypad.
	Paste: Pastes the copied value from the clipboard. Available only on the calculator keypad.

3.9 Customizing the workspace

In the **Measure** menu, you can enlarge the workspace by hiding the main menu or the function bar.

Call



- ▶ Tap **Measure** in the main menu
- > The user interface for measuring and positioning is displayed.

3.9.1 Hiding and showing the main menu



- ▶ Tap the **tab**
- > The main menu is hidden.
- > The arrow changes direction.
- ▶ To show the main menu, tap the **tab** again

3.9.2 Hiding or displaying the function bar



- ▶ Tap the **tab**
- > The function bar is hidden.
- > The arrow changes direction.
- ▶ To show the function bar, tap the **tab** again

3.9.3 Scrolling the function bar

The function bar becomes scrollable if it has more function elements than can be displayed at one time. When you assign a function to the empty bottom field, an empty field will be added to the bar. Now you can scroll the function bar.



- ▶ Swipe up or down on the function bar
- > The functions are scrolled up or down.

3.9.4 Moving functions on the function bar

You can move the functions on the function bar by drag-and-drop as needed.




- ▶ Hold a function on the function bar
- > The drag-and-drop mode is activated. The function bar is displayed dark.



- ▶ Touch a function and drag it to the desired location
- ▶ To end the drag-and-drop mode, tap a function
- > The function bar is displayed bright.

3.10 Using the function bar

3.10.1 Operating elements of the function bar

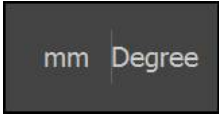


Operating element	Function
	<p>Quick access menu</p> <p>The quick access menu displays the current settings:</p> <ul style="list-style-type: none"> ■ Unit for linear values (Millimeters or Inch) ■ Unit for angular values (Radian, Decimal degrees, or Deg-Min-Sec) ▶ To adjust the settings of the quick access menu, tap the quick access menu

3.10.2 Function elements





Function elements are operating elements that you can add to the function bar and configure individually.





The following function elements are available:

Basic functions




Function element	Short description
	<p>Presets</p> <p>Displays the current preset; tapping opens the preset table</p>
	<p>Calculator</p> <p>Tapping opens a calculator with basic mathematical functions; the last result is shown in the calculator and on the function bar</p>
	<p>Reference mark search (REF)</p> <p>Tapping starts the reference mark search</p>

Functions for measurements




Function element	Short description
	<p>Part</p> <p>Groups all relevant functions; tapping hides all functions that are irrelevant to the measurement</p>
	<p>Mastering</p> <p>Saves the measured values of a reference part as master or adopts the position values of the position display as master; corresponding axes can be selected</p>
	<p>dial gage</p> <p>Displays the nominal values, warning thresholds, and tolerance limits via a dial gage; tapping opens the views of the dial gage function</p>
	<p>MinMax</p> <p>Acquires the minimum, maximum, and range; tapping starts the acquisition of measured values according to the configuration</p>

Function element	Short description
	<p>Formula</p> <p>Offsetting of axis values; tap to activate the formula according to the configuration</p>
	<p>Relative</p> <p>Tapping activates Relative measurement; the zeroing of axes or the overwriting of a position value has no effect on the selected preset when the Relative function is activated</p>
	<p>D/R</p> <p>Displays the position values of radial axes; tapping switches from radius to diameter; the product displays the doubled position value</p>
	<p>Series</p> <p>Displays the measured values in a measurement series; evaluates the measured values in a diagram</p>

Functions for measured value output

Function element	Short description
	<p>Manual output of measured values</p> <p>Sends the measured values to a computer; tapping starts the data transfer according to the configuration</p>
	<p>Measured value output triggered by touch probe</p> <p>Sends the measured values to a computer; tapping activates the automatic output of measured values according to the configuration; the data is transferred when the stylus is deflected</p>
	<p>Continuous output of measured values</p> <p>Sends the measured values to a computer; tapping activates the automatic output of measured values according to the configuration; the data is transferred continuously at intervals of approx. 200 ms</p>

Functions for probing

Function element	Short description
	<p>Edge probing (probing)</p> <p>Tapping starts the wizard for probing an object of measurement</p>
	<p>Determining the center line (probing)</p> <p>Tapping starts the wizard for probing an object of measurement</p>
	<p>Determining the circle center (probing)</p> <p>Tapping starts the wizard for probing an object of measurement</p>

Adding a function element to the function bar

- ▶ Drag an empty function bar field to the left into the workspace
- > A dialog box with all of the available function elements opens.
- ▶ Tap the desired function element
- > The function element is now available.

Removing a function element from the function bar



- ▶ Drag the function element to the right
- ▶ Tap **Delete**
- > The function element is removed.

Configuring function elements

You can configure the functions that you have assigned to the function bar.



- ▶ Drag the function element to the left and into the workspace
- > A dialog box for configuration appears.
- ▶ Configure the function element
- ▶ Tap **Close**
- > The selection is saved.

Saving the configuration of function elements



The function elements **dial gage**, **Mastering**, **Measured value output** and **MinMax** allow you to save your configuration and open a configuration that has been saved.



- ▶ Drag the function element to the right
- ▶ Tap **Save**
- > The **Save configuration** dialog box appears.
- ▶ Select the folder in which the configuration should be saved
- ▶ Enter a name for the file
- ▶ Confirm entry with **RET**
- ▶ Tap **Save**
- > The file has been saved.



You can export or import saved configurations from or to your device via a USB mass storage product.

Opening the configuration of function elements



- ▶ Drag the function element to the right
- ▶ Tap **Open**
- > The **Open configuration** dialog is opened.
- ▶ Navigate to the folder in which the file is saved
- ▶ Tap the desired file
- ▶ Tap **Open**
- > The file is opened.

4

Software Configuration

4.1 Overview



Make sure that you have read and understood the "Basic Operation" chapter before carrying out the actions described below.

Further information: "Basic Operation", Page 15

Before you can use GAGE-CHEK 2000 Demo correctly after successful installation, you need to configure GAGE-CHEK 2000 Demo. This chapter describes how to perform the following settings:

- Setting the language
- Activating software options
- Selecting the product version (optional)
- Copying the configuration file
- Uploading the configuration data

4.2 Setting the language

The user interface language is English. You can change to another language, if desired.



- ▶ Tap **Settings** in the main menu



- ▶ Tap **User**
 - > The logged-in user is indicated by a check mark.
 - ▶ Select the logged-in user
 - > The language selected for the user is indicated by a national flag in the **Language** drop-down list.
 - ▶ Select the flag for the desired language from the **Language** drop-down list
 - > The user interface is displayed in the selected language.

4.3 Activating software options

With GAGE-CHEK 2000 Demo, you can also simulate characteristics and functions that are dependent on a software option. To do so, you must enable the software option with a license key. The required license key is stored in a license file in the GAGE-CHEK 2000 Demo folder structure.

You must read in the license file in order to enable the available software options.



- ▶ Tap **Settings** in the main menu
- > The product settings are displayed.

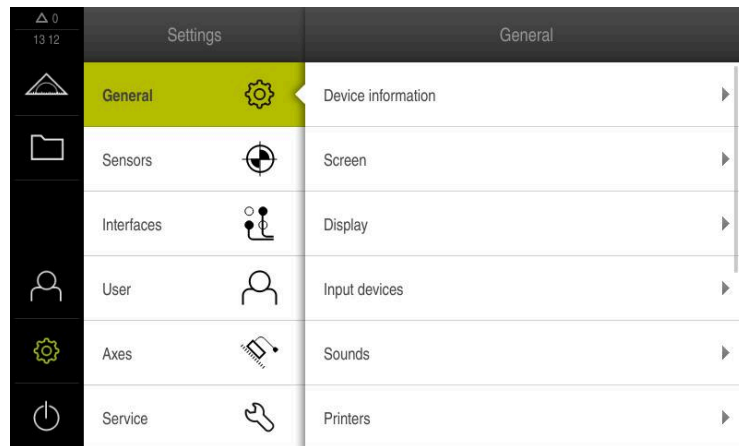 


Figure 9: **Settings** menu



- ▶ Tap **Service**
- ▶ Open in sequence:
 - **Software options**
 - **Activate options**
 - Tap **Read license file**
- ▶ In the dialog box, select the storage location:
 - Select **Internal**
 - Select **User**
- ▶ Select the **PcDemoLicense.xml** license file
- ▶ Confirm your selection with **Select**
- ▶ Tap **OK**
- > The license key is activated.
- ▶ Tap **OK**
- > You are prompted to perform a restart.
- ▶ Perform a restart
- > The functions depending on the software options are available.

4.4 Selecting the product version (optional)

GAGE-CHEK 2000 is available in different versions. These versions differ in their interfaces for connectible encoders:

- GAGE-CHEK 2013 version for encoders with the 1 V_{pp}, 11 μA_{pp} or EnDat 2.2 interfaces
- GAGE-CHEK 2013 I/O version for encoders with 1 V_{pp}, 11 μA_{pp} or EnDat 2.2 interface with additional inputs and outputs for switching functions
- GAGE-CHEK 2023 version for encoders with TTL interface
- GAGE-CHEK 2093 version for encoders with various interfaces (1 V_{pp}, 11 μA_{pp}, or EnDat 2.2 and TTL)

In the **Settings** menu, you can select the version that is to be simulated with GAGE-CHEK 2000 Demo



- ▶ Tap **Settings** in the main menu



- ▶ Tap **Service**
- ▶ Tap **Product designation**
- ▶ Select the desired version
- ▶ You are prompted to perform a restart.
- ▶ GAGE-CHEK 2000 Demo is ready for use in the desired version.

4.5 Copying the configuration file

Before you can load the configuration data in GAGE-CHEK 2000 Demo, you must first copy the downloaded configuration file **DemoBackup.mcc** to an area that can be accessed by GAGE-CHEK 2000 Demo.

- ▶ Move to the temporary storage folder
- ▶ For example, copy the configuration file **DemoBackup.mcc** to the following folder: **C: ▶ HEIDENHAIN ▶ [product name] ▶ ProductsMGE5 ▶ Metrology ▶ [product abbreviation] ▶ user ▶ User**



In order for GAGE-CHEK 2000 Demo to access the configuration file **DemoBackup.mcc**, you must retain the following part of the path when you save the file: **▶ [product name] ▶ ProductsMGE5 ▶ Metrology ▶ [product abbreviation] ▶ user ▶ User.**

- ▶ The configuration file can be accessed by GAGE-CHEK 2000 Demo.

4.6 Uploading the configuration data

i Before you can upload the configuration data, you must first activate the license key.
Further information: "Activating software options", Page 37

In order to configure GAGE-CHEK 2000 Demo for use on the computer, you must upload the **DemoBackup.mcc** configuration file.



- ▶ Tap **Settings** in the main menu
- > The product settings are displayed.

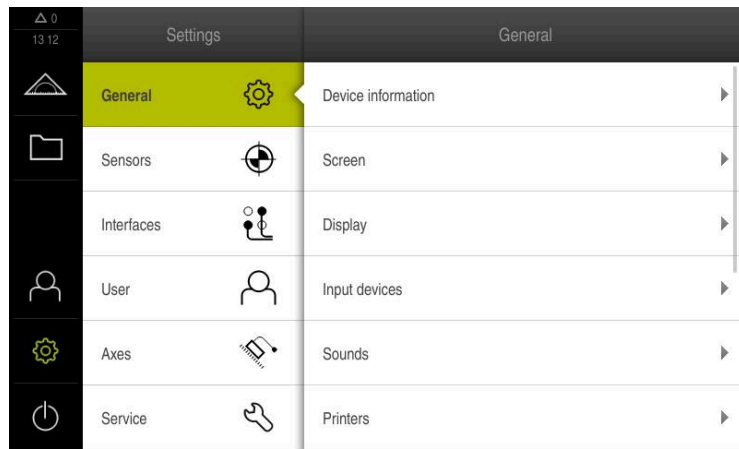 


Figure 10: **Settings** menu



- ▶ Tap **Service**
- ▶ Open in succession:
 - **Back up and restore**
 - **Restoring settings**
 - **Complete restoration**
- ▶ In the dialog box, select the storage location:
 - **Internal**
 - **User**
- ▶ Select the **DemoBackup.mcc** configuration file
- ▶ Confirm your selection with **Select**
- > The settings are applied.
- > You are prompted to close the application.
- ▶ Tap **OK**
- > GAGE-CHEK 2000 Demo is closed, and the Microsoft Windows window is closed.
- ▶ Restart GAGE-CHEK 2000 Demo
- > GAGE-CHEK 2000 Demo is now ready for use.

5

ScreenshotClient

5.1 Overview

The standard installation of GAGE-CHEK 2000 Demo also contains the ScreenshotClient program. With ScreenshotClient, you can take screenshots of the demo software or the unit.

This chapter describes how ScreenshotClient is configured and used.

5.2 Information about ScreenshotClient

With ScreenshotClient, you can take screenshots of the active screen of the demo software or the unit from a computer. Before taking a screenshot, select the desired user interface language, as well as the file name and the location where you want to store the screenshots.

ScreenshotClient creates image files of the desired screen:

- In .PNG format
- With the configured name
- With the appropriate language code
- With the time information of year, month, day, hour, minute, and second

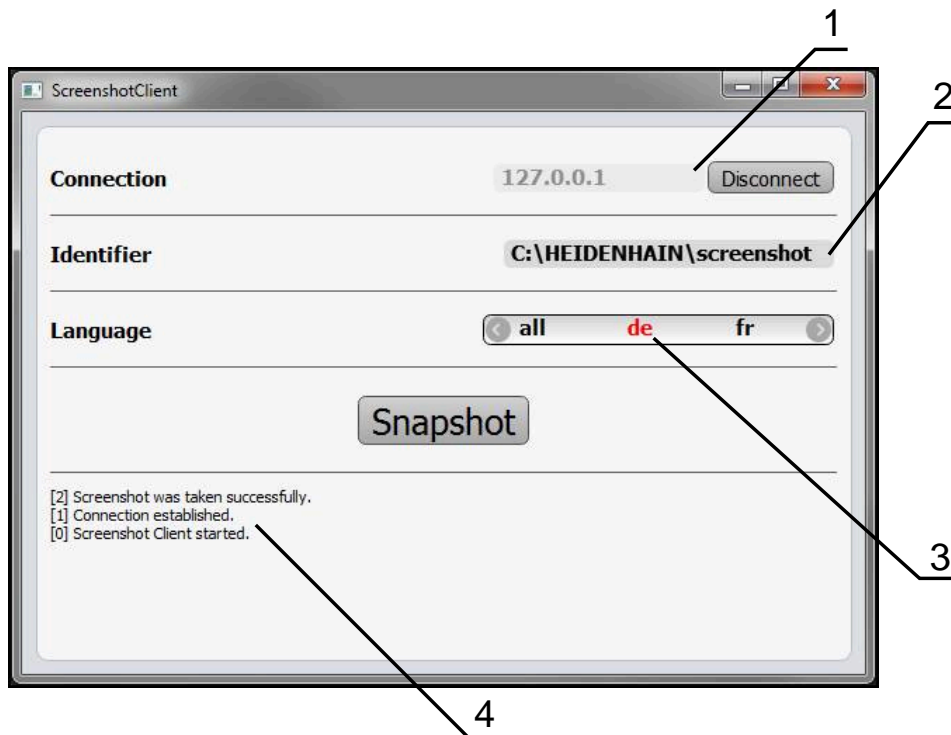 


Figure 11: ScreenshotClient user interface

- 1 Connection status
- 2 File path and file name
- 3 Language selection
- 4 Status messages

5.3 Starting ScreenshotClient

- ▶ Select in succession in Microsoft Windows:
 - **Start**
 - **All programs**
 - **HEIDENHAIN**
 - **GAGE-CHEK 2000 Demo**
 - **ScreenshotClient**
- > ScreenshotClient is started:

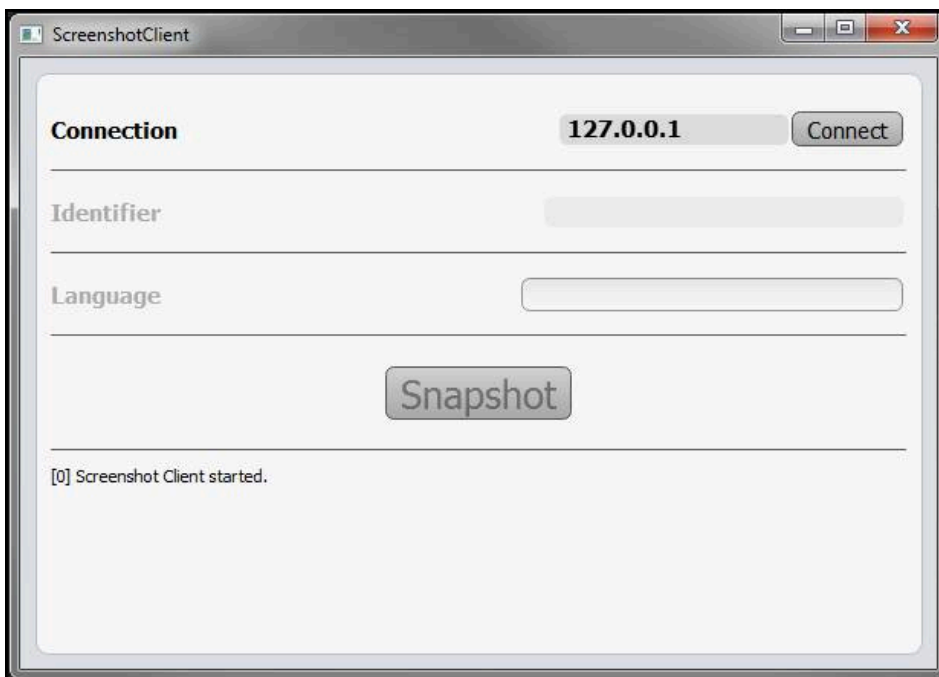 


Figure 12: ScreenshotClient has been started (not connected yet)

- > You can now connect ScreenshotClient with the demo software or with the unit.

5.4 Connecting ScreenshotClient with the demo software

i Before establishing a connection with ScreenshotClient, first start the demo software or switch on the unit. Otherwise ScreenshotClient will show the status message **Connection close.** when trying to connect.

- ▶ Start the demo software if you have not already done so
Further information: "Starting GAGE-CHEK 2000 Demo", Page 20
- ▶ Tap **Connect**
- > A connection with the demo software is established.
- > The status message is updated.
- > The **Identifier** and **Language** input fields become active.

5.5 Connecting ScreenshotClient with the unit

Prerequisite: The network must be configured on the device.



For detailed information on configuring the network at the unit, please refer to the "Setup" chapter in the operating instructions of GAGE-CHEK 2000.



Before establishing a connection with ScreenshotClient, first start the demo software or switch on the unit. Otherwise ScreenshotClient will show the status message **Connection close**. when trying to connect.

- ▶ Switch on the unit if you have not already done so
- ▶ Enter the **IPv4 address** of the interface in the **Connection** input field. You will find the address in the device settings under:
Interfaces ▶ Network ▶ X116
- ▶ Tap **Connect**
- > A connection with the unit is established.
- > The status message is updated.
- > The **Identifier** and **Language** input fields become active.

5.6 Configuring ScreenshotClient for taking screenshots

Once you have started ScreenshotClient, you can make the following configurations:

- Location at which screenshots are stored, and what the file names are
- User interface language in which the screenshots are created

5.6.1 Configuring the storage location and file name for screenshots

By default, ScreenshotClient saves screenshots to the following storage location:

C: ▶ HEIDENHAIN ▶ [product designation] ▶ ProductsMGE5 ▶ Metrology ▶ [product code] ▶ sources ▶ [file name]

You can define a different storage location, if necessary.

- ▶ Tap the **Identifier** input field
- ▶ Enter the path to the storage location and the name for the screenshots into the **Identifier** input field



Use the following syntax to enter the path and file name for screenshots:

[drive]:\[folder]\[file name]

- > ScreenshotClient will save all screenshots to the storage location entered.

5.6.2 Configuring the user interface language of screenshots

The **Language** input field shows all of the user interface languages available for the demo software or the unit. Once you have selected a language code, ScreenshotClient will take screenshots in the corresponding language.



The user interface language you are using in the demo software or on the unit does not have any effect on the screenshots. Screenshots are always created in the language that you have selected in ScreenshotClient.

Screenshots in the desired user interface language

To take screenshots in a desired user interface language



- ▶ Use the arrow keys to select the desired language code in the **Language** input field



- The selected language code is shown in red.
- ScreenshotClient creates the screenshots in the desired user interface language.

Screenshots of all available user interface languages

To create screenshots in all available user interface languages



- ▶ Use the arrow keys to select **all** in the **Language** input field
- The **all** language code is shown in red.



- ScreenshotClient creates the screenshots in all available user interface languages.

5.7 Creating screenshots

- ▶ In the demo software or on the unit, call the view from which you would like to take a screenshot
- ▶ Switch to **ScreenshotClient**
- ▶ Tap **Snapshot**
- The screenshot is created and saved to the configured storage location.



The screenshot is saved in the format [file name]_[language code]_[YYYYMMDDhhmmss] (e.g. **screenshot_en_20170125114100**)

- The status message is updated:

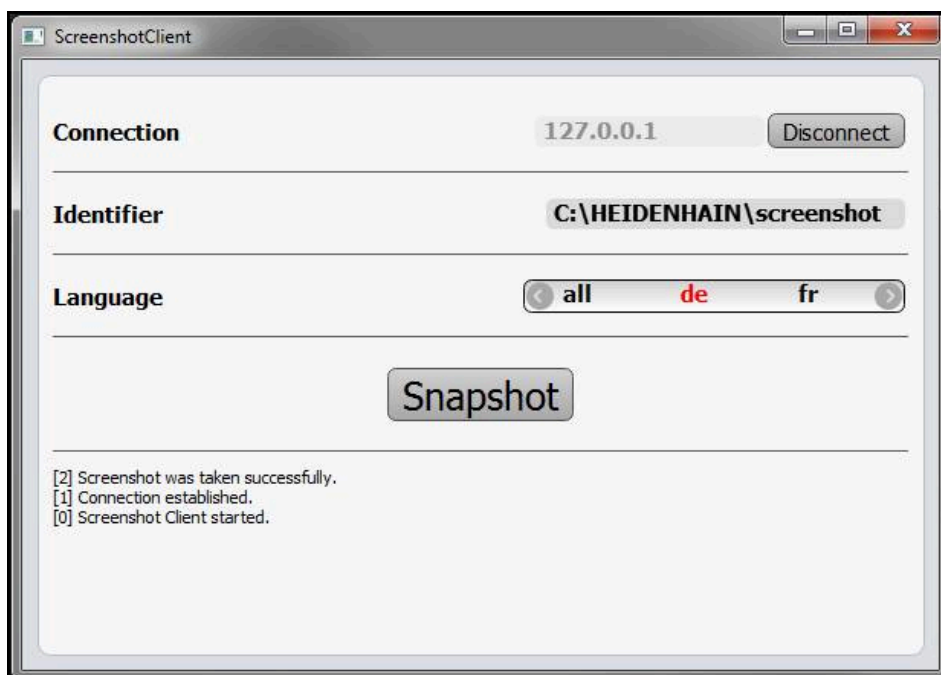 


Figure 13: ScreenshotClient after screenshot has been created successfully

5.8 Exiting ScreenshotClient

- ▶ Tap **Disconnect**
- > The connection to the demo software or the unit is terminated.
- ▶ Tap **Close**
- > ScreenshotClient is exited.

6 Index

C

Configuration data	
Copying the file.....	38
Uploading the file.....	39
Configuring	
File name for screenshots.....	44
Function elements.....	34
ScreenshotClient.....	44
Software.....	36
Storage location for screenshots.	
44	
User interface language of	
screenshots.....	44

D

Demo software	
Features.....	6
Intended use.....	6
Documentation	
Notes on reading.....	6
Dragging.....	17

E

Exiting	
ScreenshotClient.....	46

F

File management	
Menu.....	26
function bar.....	32
Function elements.....	32
Add.....	34
Open.....	34
Save.....	34

G

Gestures	
Dragging.....	17
Holding.....	17
Operation.....	16
Swiping.....	17
Tapping.....	16

H

Holding.....	17
--------------	----

I

Input devices	
Operation.....	16
Installation file	
Downloading.....	10

L

Language	
setting.....	22, 36

M

Main menu.....	23
Measure	
Menu.....	25
Menu	
File management.....	26
Measure.....	25
Settings.....	28
Switch-off.....	29
User login.....	27
Mouse actions	
Dragging.....	17
Holding.....	17
Operation.....	16
Swiping.....	17
Tapping.....	16
Moving functions on the function	
bar.....	31

O

Operating elements	
Add.....	19
Back.....	19
Close.....	19
Confirm.....	19
Drop-down list.....	19
Function elements.....	32
Main menu.....	23
Plusminus button.....	18
Screen keyboard.....	18
Slider.....	18
Slide switch.....	18
Toggle switch.....	18
Undo.....	19
Operation	
Function elements.....	32
General operation.....	16
Gestures and mouse actions...	16
Operating elements.....	18
Touchscreen and input	
devices.....	16

P

Password.....	22
Product version.....	38

S

ScreenshotClient.....	42
Configuring.....	44
Connecting.....	43
Creating screenshots.....	45
Exiting.....	46
Information.....	42
Starting.....	43
Screenshots	
Configuring the file name.....	44
Configuring the storage	
location.....	44

Configuring the user interface	
language.....	44
Creating.....	45
Scrolling the function bar.....	31
Settings	
menu.....	28
Shut-down	
Software.....	21
Software	
Configuration data.....	38, 39
Downloading the installation	
file.....	10
Enabling functions.....	37
installation.....	11
Shut-down.....	21
Starting.....	20
System requirements.....	10
Uninstallation.....	14
Software options	
Activating.....	37
Starting	
ScreenshotClient.....	43
Software.....	20
Swiping.....	17
Switch-off	
Menu.....	29
Symbols and fonts used for	
marking text.....	7

T

Tapping.....	16
Touchscreen	
Operation.....	16

U

Use	
Improper.....	6
Intended.....	6
User	
Default password.....	22
Login.....	22
Logout.....	22
User login.....	22
User interface	
After start-up.....	23
File management menu.....	26
Main menu.....	23
Measure menu.....	25
Settings menu.....	28
Switch-off menu.....	29
User login menu.....	27
User login.....	22, 27

W

Workspace	
customize.....	31

7 List of figures

Image 1:	Installation wizard	11
Image 2:	Installation wizard with activated options Demo software and Screenshot Utility	13
Image 3:	User login menu.....	20
Image 4:	User interface.....	23
Image 5:	Measure menu.....	25
Image 6:	File management menu.....	26
Image 7:	User login menu.....	27
Image 8:	Settings menu.....	28
Image 9:	Settings menu.....	37
Image 10:	Settings menu.....	39
Image 11:	ScreenshotClient user interface.....	42
Image 12:	ScreenshotClient has been started (not connected yet).....	43
Image 13:	ScreenshotClient after screenshot has been created successfully.....	45

HEIDENHAIN

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 8669 31-0

☎ +49 8669 32-5061

info@heidenhain.de

Technical support ☎ +49 8669 32-1000

Measuring systems ☎ +49 8669 31-3104

service.ms-support@heidenhain.de

NC support ☎ +49 8669 31-3101

service.nc-support@heidenhain.de

NC programming ☎ +49 8669 31-3103

service.nc-pgm@heidenhain.de

PLC programming ☎ +49 8669 31-3102

service.plc@heidenhain.de

APP programming ☎ +49 8669 31-3106

service.app@heidenhain.de

www.heidenhain.com

