



HEIDENHAIN

Austauschanleitung
Replacing Instructions

EXE 808B
EXE 924

10/2008

Bitte folgende Schritte beachten:

1. Netzkabel entfernen.
2. Messgerätekabel markieren (Y - X).



EXE 808B

3. Messgerätekabel von der EXE 808B entfernen.
4. Ausgangskabel (Harting) entfernen.
5. Bei Bedarf eines zweiten TTL-Ausganges muss an die EXE 924 ein Anbauehäuse (Harting, ID 284477-01) angebaut werden.




6. Messgerätekabel Y an X3; X an X1 der EXE 924 wieder anstecken.



EXE 924

7. Ausgangskabel wieder anstecken.
8. DIP-Schalter-Einstellungen:
Die Schalter S1 und S11 müssen geschlossen werden, und die Schalter S5 und S15 müssen geöffnet werden.

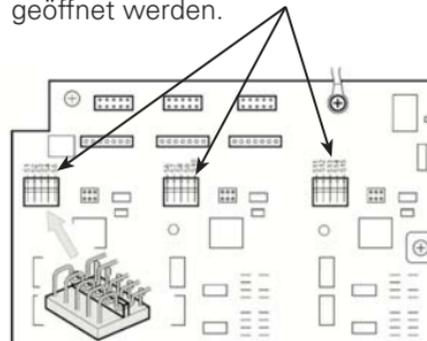

Please observe the steps below:

1. Remove the power cord.
2. Label the encoder cables (Y - X).



EXE 808B

3. Disconnect the encoder cables from EXE 808B.
4. Remove the output cable (Harting).
5. If a second TTL output is required, an external mounting housing (Harting, ID 284477-01) must be mounted to EXE 924.



6. Reconnect the encoder cables to EXE 924: Y to X3; X to X1.



EXE 924

7. Reconnect the output cable.
8. Settings of the DIP switches:
Close the switches S1 and S11;
open the switches S5 and S15.

