




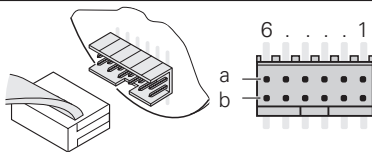

62S12-30

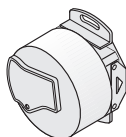


6b	6a	5b	5a	4b	4a	2a	1a	2b	1b	3a	3b
A		B		R		5V U _P	0V U _N	5V sensor	0V sensor	/	/
+	-	+	-	+	-						

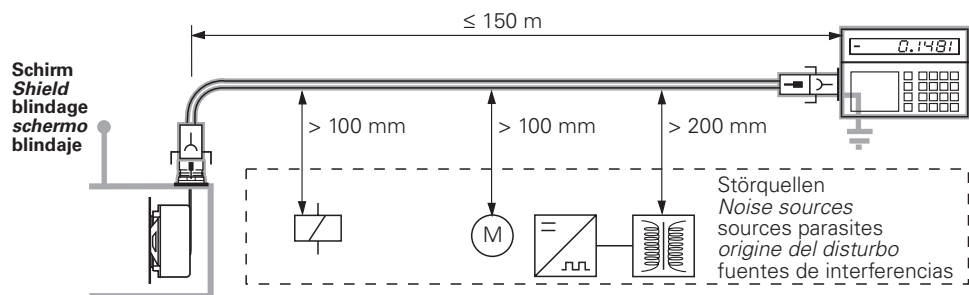


U_P = 5 V ± 10 %
(max. 120 mA)



EN 50 178/4.98; 5.2.9.5
IEC 364-4-41: 1992; 411(PELV/SELV)
(siehe, see, voir, vedi, véase
HEIDENHAIN D 231 929-01-A-01)

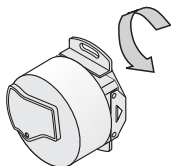

A, B, R

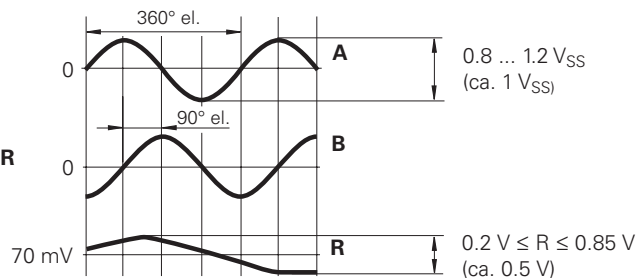


ERN 1380



350 272-xx

Montageanleitung Mounting Instructions Instructions de montage Istruzioni di montaggio Instrucciones de montaje

2/2003

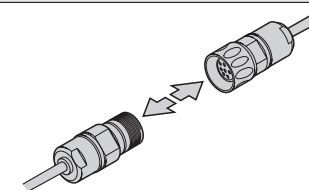**HEIDENHAIN**

DIN EN 100 015 - 1
CECC 00015 - 1

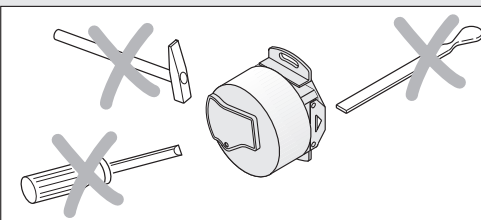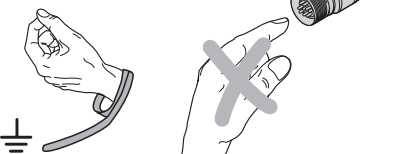**DR. JOHANNES HEIDENHAIN GmbH**

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 (86 69) 31-0

☎ +49 (86 69) 50 61

E-Mail: info@heidenhain.de**Technical support** ☎ +49 (86 69) 32-10 00**Measuring systems** ☎ +49 (86 69) 31-31 04E-Mail: service.ms-support@heidenhain.de**TNC support** ☎ +49 (86 69) 31-31 01E-Mail: service.nc-support@heidenhain.de**NC programming** ☎ +49 (86 69) 31-31 03E-Mail: service.nc-pgm@heidenhain.de**PLC programming** ☎ +49 (86 69) 31-31 02E-Mail: service.plc@heidenhain.de**Lathe controls** ☎ +49 (86 69) 31-31 05E-Mail: service.lathe-support@heidenhain.dewww.heidenhain.de

Ve 00


374 860-91 · 5/2007 · Printed in Germany · Änderungen vorbehalten

Subject to change without notice · Sous réserve de modifications · Con riserva di modifiche · Sujeto a modificaciones

ERN 1380

Maße in mm
Dimensions in mm
cotes en mm
dimensioni in mm
dimensiones en mm

Ⓚ = Kundenseitige Anschlussmaße
Required mating dimensions
conditions requises pour le montage
dimensioni di collegamento lato cliente
cotas de montaje requeridas

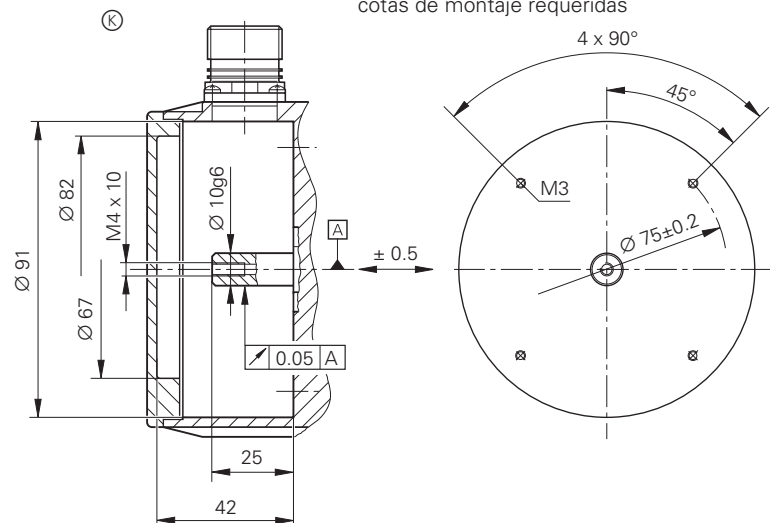

A = Lagerung
Bearing
roulement
cuscinetto
rodamiento

