

| 5 V<br>U <sub>P</sub> | 5 V<br>sensor | 0 V<br>U <sub>N</sub> | 0 V<br>sensor | A+        | <b>A</b> – | B+        | В-        | R+        | R- | /     | /         | /  |
|-----------------------|---------------|-----------------------|---------------|-----------|------------|-----------|-----------|-----------|----|-------|-----------|----|
| brgn                  | bl            | wsgn                  | ws            | br        | gn         | gr        | rs        | rt        | sw | wsbr  | vio       | ge |
| BN/GN                 | <i>BL</i>     | WH/GN                 | WH            | <i>BN</i> | <i>GN</i>  | <i>GY</i> | <i>PK</i> | <i>RD</i> | BK | WS/BN | <i>VI</i> | YL |


Die Sensorleitung ist intern mit der Versorgungsleitung verbunden. The sensor line is connected internally with the power supply.


La ligne de palpeur est reliée de manière interne à la ligne d'alimentation.


La linea del sensore è collegata internamente con la linea di alimentazione.

La línea de sensor está unida internamente con la línea de alimentación.

Schirm auf Gehäuse Shield on housing Blindage sur boîtier Schermo sulla carcassa Blindaje a carcasa

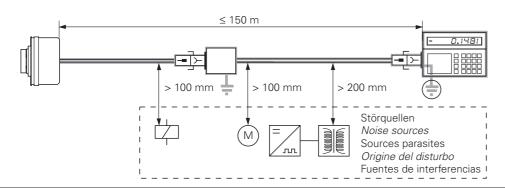

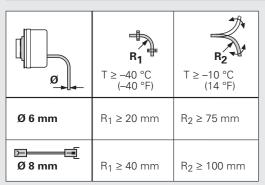

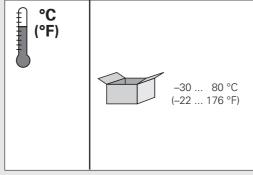




## **HEIDENHAIN**



Montageanleitung
Mounting Instructions
Instructions de montage
Istruzioni di montaggio
Instrucciones de montaje

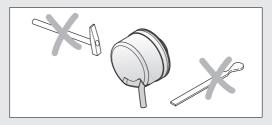

**ERN 480** 

11/2005

## DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

## 83301 Traunreut, Germany

② +49 (8669) 31-0

FAX +49 (8669) 5061

E-Mail: info@heidenhain.de

**Technical support** FAX +49 (86 69) 31-10 00 **Measuring systems ②** +49 (86 69) 31-31 04

www.heidenhain.de



Ve 00

572 990-91  $\cdot$  6  $\cdot$  2/2006  $\cdot$  E  $\cdot$  Printed in Germany  $\cdot$  Änderungen vorbehalten

Subject to change without notice · Sous réserve de modifications · Con riserva di modifiche · Sujeto a modificaciones





Toleranci

Tolerancing ISO 8015 ISO 2768 - m H < 6 mm: ±0.2 mm

- A = Lagerung
  Bearing
  Roulement
  Cuscinetto
  Rodamiento
- (f) = Klemmschraube M2.5 mit Innensechsrund X8

  Clamping screw M2.5 with hexalobular socket X8

  Vis torx M2.5 à six lobes internes X8

  Vite di fissaggio M2.5 con testa cil. ad esagono cavo X8

  Tornillo de fijación M2.5 con cabeza lobular hexagonal X8
- M = Messpunkt Arbeitstemperatur
   Measuring point for operating temperature
   Point de mesure température de travail
   Punto di misura temperatura di esercizio
   Punto de medición de la temperatura de trabajo
- (K) = Kundenseitige Anschlussmaße
  Required mating dimensions
  Conditions requises pour le montage
  Quote per il montaggio
  Cotas de montaie requeridas

