




Id.-Nr. 291 698-03

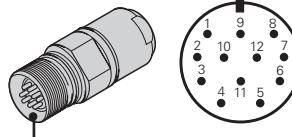


Id.-Nr. 291 698-08

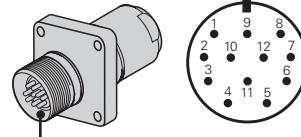


Id.-Nr. 292 275-02

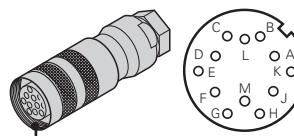

Id.-Nr. 298 541-01

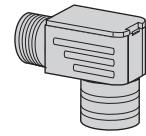



5	6	8	1	3	4	12	10		2	11	7
E	F	H	A	C	D	M	K		B	L	G
Ua1	Ua1	Ua2	Ua2	Ua0	Ua0	5V Up	0V Un	Schirm Shield blindage schermo blindaje	5V sensor	0V sensor	Uas
braun brown brun marrone marrón	grün green vert verde verde	grau gray gris grigio gris	rosa pink rose rosa rosa	rot red rouge rosso rojo	schwarz black noir nero negro	braun/grün brown/green brun/vert marrone/verde marrón/verde	weiß/grün white/green blanc/vert bianco/verde blanco/verde		blau blue bleu azzurro azul	weiß white blanc bianco blanco	violett violet violet viola violeta

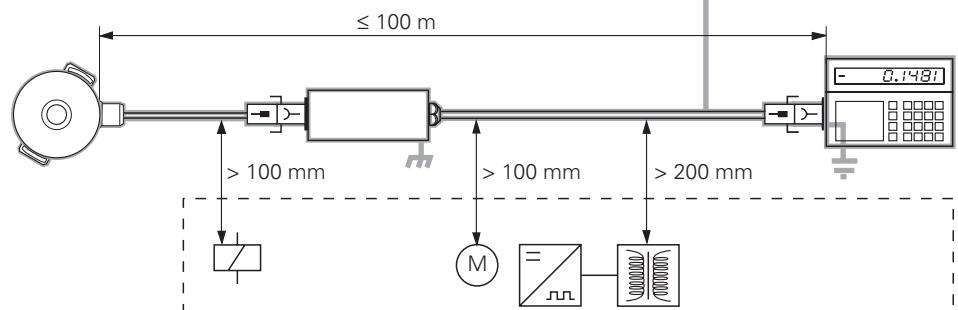

	$^{\circ}\text{C}$ $(^{\circ}\text{F})$	-10 ... 100 °C (14 ... 212 °F)
		-40 ... 100 °C (-40 ... 212 °F)
		-30 ... 80 °C (-22 ... 176 °F)

	$\varnothing 6 \text{ mm}$	$R_1 \geq 20 \text{ mm}$	$R_2 \geq 75 \text{ mm}$
	$\varnothing 8 \text{ mm}$	$R_1 \geq 40 \text{ mm}$	$R_2 \geq 100 \text{ mm}$

ERN 420

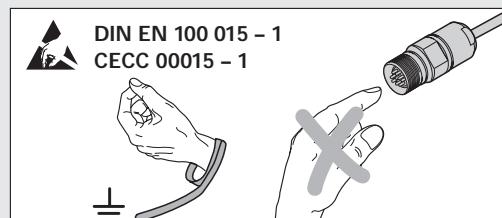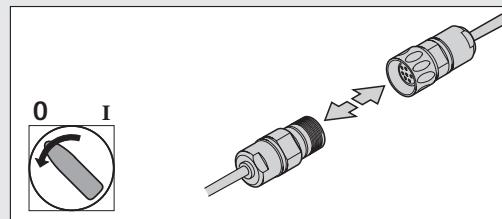

Montageanleitung
Mounting Instructions
Instructions de montage
Istruzioni di montaggio
Instrucciones de montaje

9/99

**HEIDENHAIN**

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49/8669/31-00

Fax +49/8669/50 61

e-mail: info@heidenhain.de

Technical support ☎ +49/8669/10 00

Measuring systems ☎ +49/8669/31-31 04

e-mail: service.ms-support@heidenhain.de

TNC support ☎ +49/8669/31-31 01

e-mail: service.nc-support@heidenhain.de

NC programming ☎ +49/8669/31-31 03

e-mail: service.nc-pgm@heidenhain.de

PLC programming ☎ +49/8669/31-31 02

e-mail: service.plc@heidenhain.de


Lathe controls ☎ +49/711 952803-0

e-mail: service.hsf@heidenhain.de

www.heidenhain.de






ERN 420

Maße in mm
Dimensions in mm
cotes en mm
dimensioni in mm
dimensiones en mm

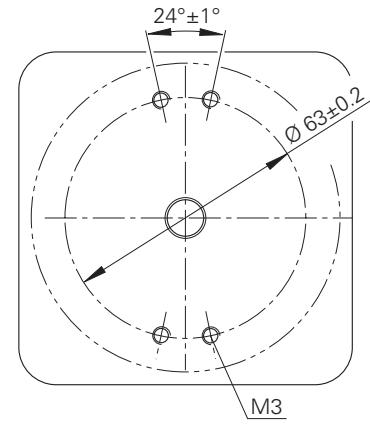

A = Lagerung
Bearing
roulement
cuscinetto
rodamiento

D
Ø 8g7
Ø 10g7
Ø 12g7

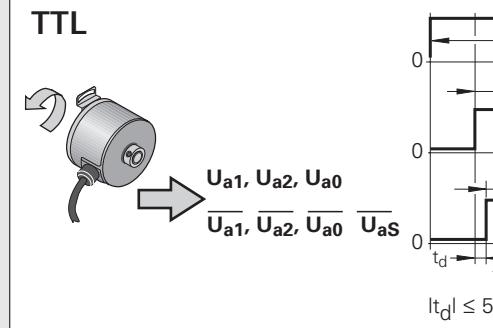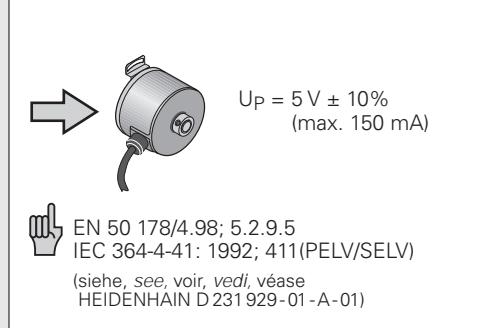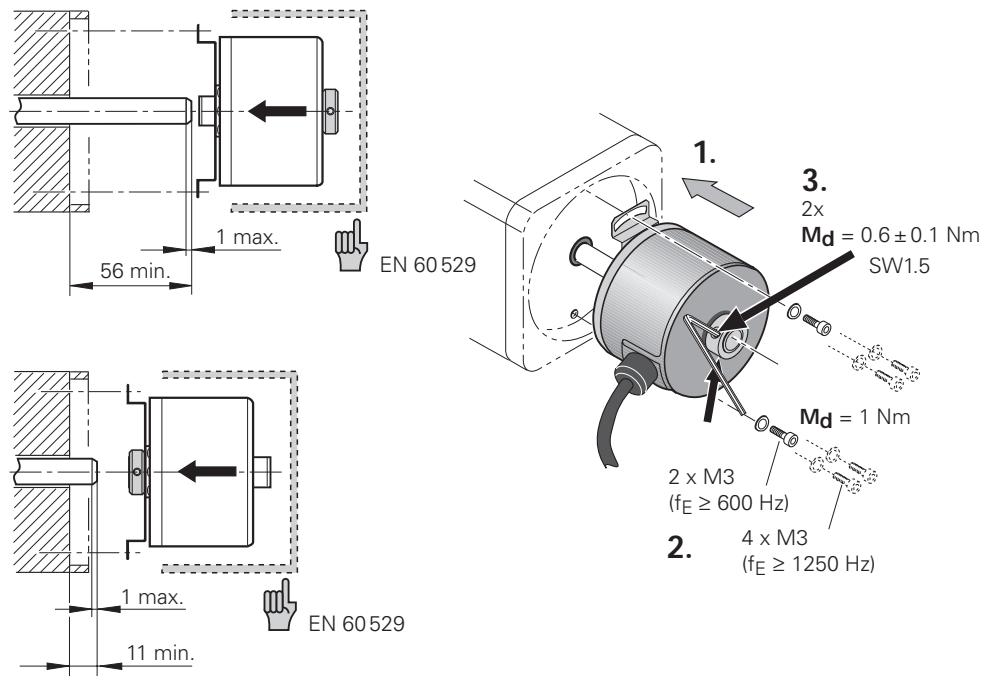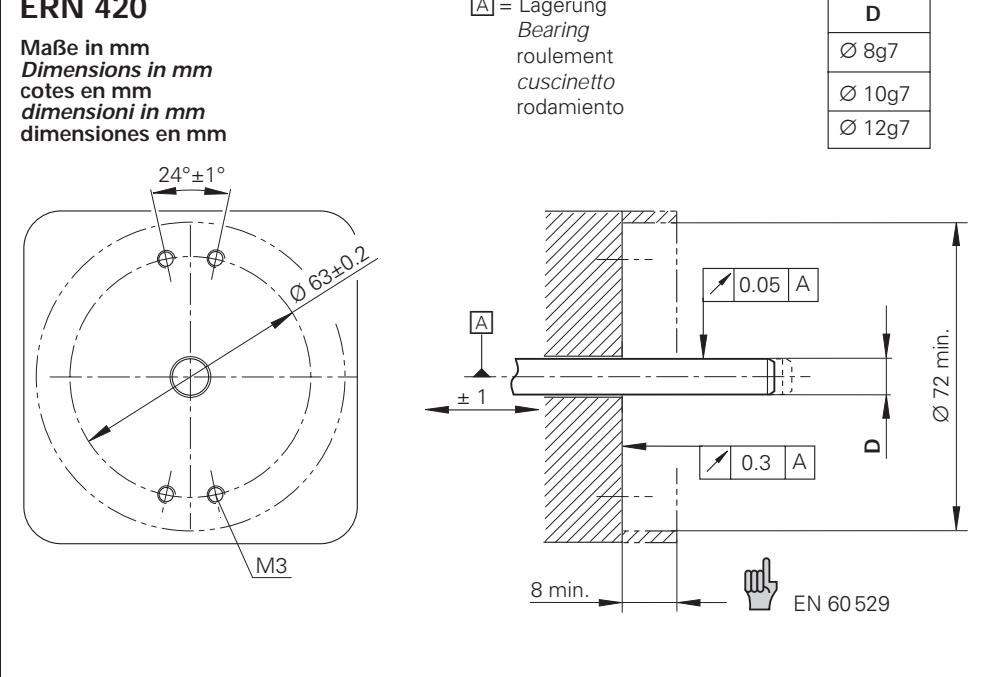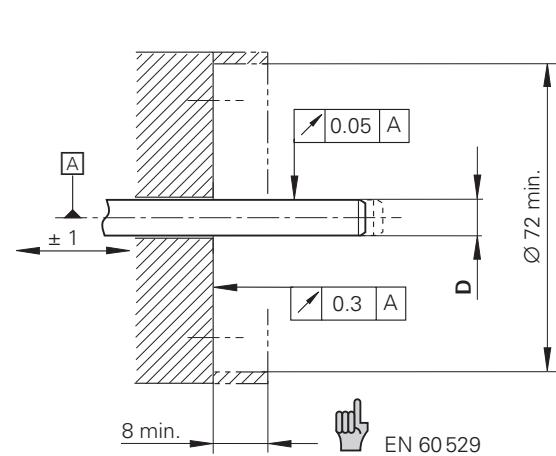

U_{aS}: Störungssignal
Fault detection signal
signal de perturbation
segnale di malfunzionamento
señal de avería

U_{aS} = High: ✓

U_{aS} = Low: !

