
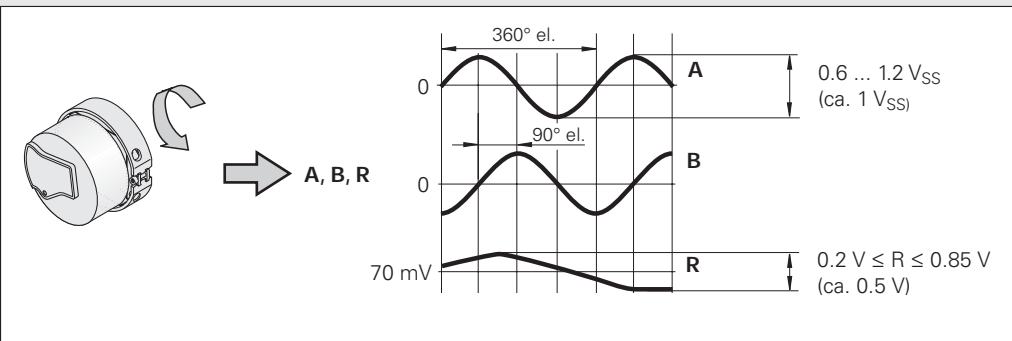
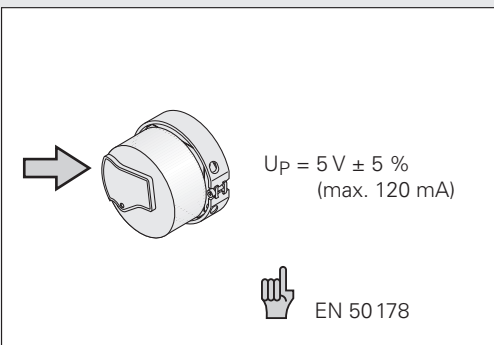
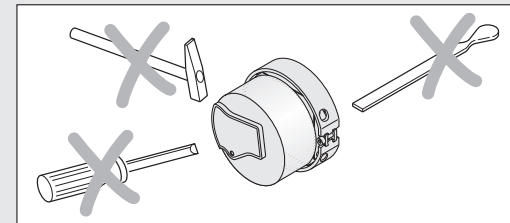
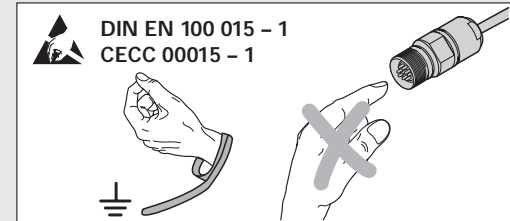


ERN 1381

369 483-xx

Montageanleitung Mounting Instructions Instructions de montage Istruzioni di montaggio Instrucciones de montaje

7/2002

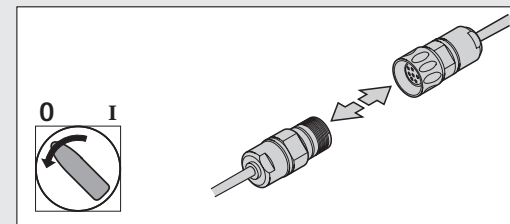

DR. JOHANNES HEIDENHAIN GmbH
Dr.-Johannes-Heidenhain-Straße 5
83301 Traunreut, Germany
☎ +49/86 69/31-0
FAX +49/86 69/50 61
e-mail: info@heidenhain.de

☎ **Service** +49/86 69/31-1272
☎ TNC-Service +49/86 69/31-1446
FAX +49/86 69/9899
e-mail: service@heidenhain.de

www.heidenhain.de





ERN 1381

Maße in mm
Dimensions in mm
cotes en mm
dimensioni in mm
dimensiones en mm

A = Lagerung
Bearing
roulement
cuscinetto
rodamiento

K = Kundenseitige Anschlussmaße
Required mating dimensions
conditions requises pour le montage
dimensioni di collegamento lato cliente
cotas de montaje requeridas

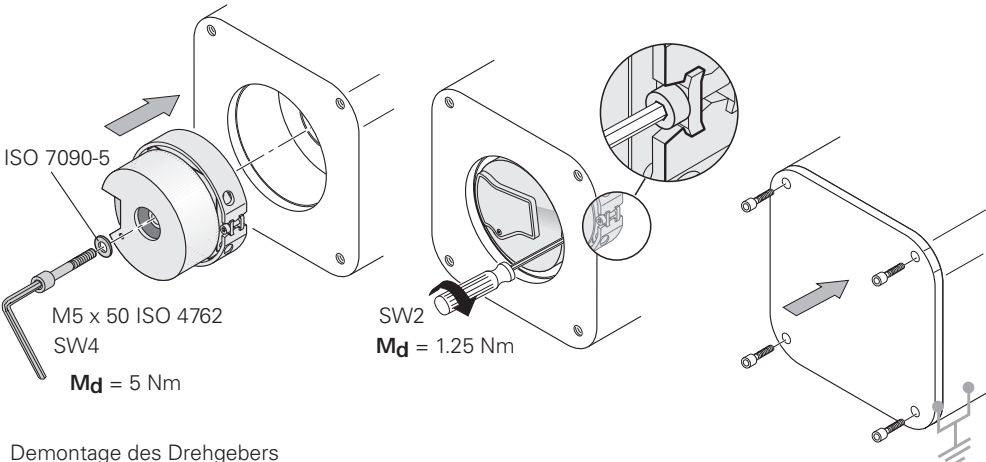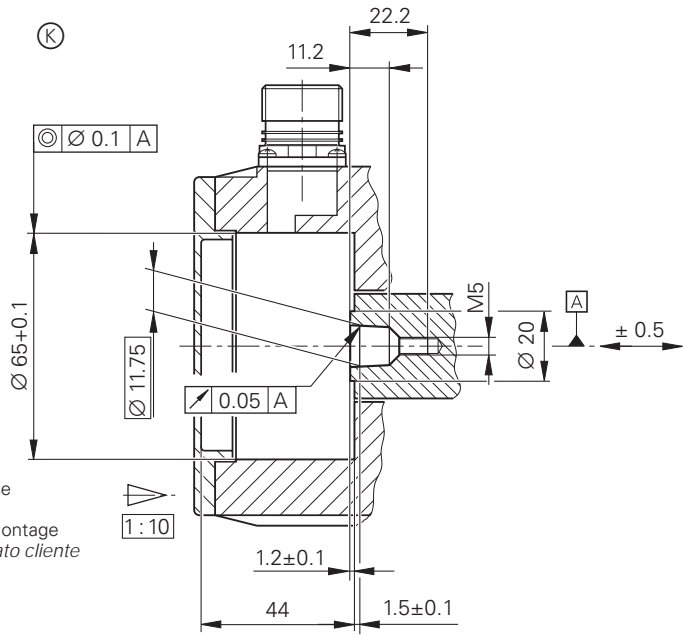

Demontage des Drehgebers
Removing the encoder
démontage du capteur rotatif
smontaggio dell'encoder
desmontaje del encoder

