


$U_P = 5V \pm 5\%$
(I max. 130 mA)




EN 50 178/4.98; 5.2.9.5
IEC 364-4-41: 1992; 411(PELV/SELV)



(siehe, see, voir, vedi, véase
HEIDENHAIN D 231 929)

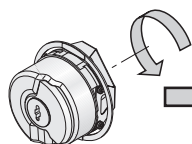



A, B, R
C, D

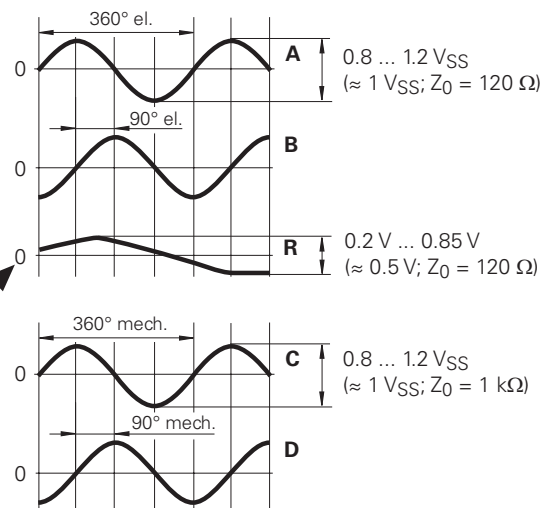


HEIDENHAIN

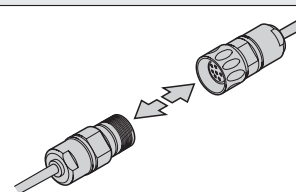

DIN EN 100 015 - 1
CECC 00015 - 1

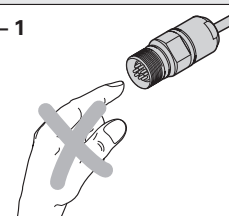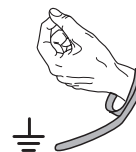


Montageanleitung
Mounting Instructions
Instructions de montage
Istruzioni di montaggio
Instrucciones de montaje

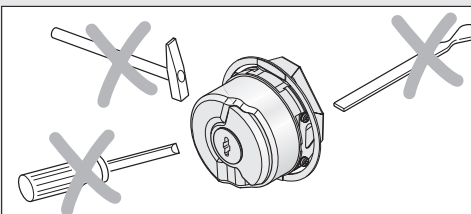

ERN 1387


2/2006

ERN 1387 ← 62S14-70

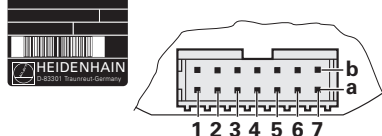


1 2 3 4 5 6 7

1b	7a	5b	3a	6b	2a	3b	5a	4b	4a	7b	1a	2b	6a
Up	Sensor Up	0V	Sensor 0V	A+	A-	B+	B-	R+	R-	C+	C-	D+	D-

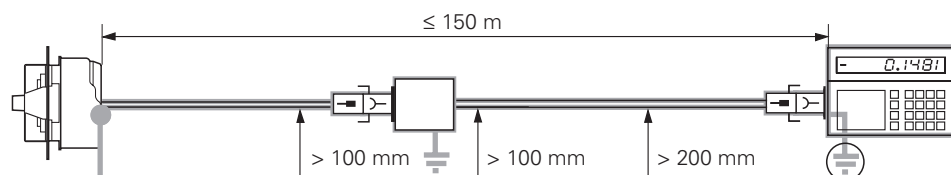

Schirm auf Gehäuse
Shield on housing
Blindage sur boîtier
Schermo sulla carcassa
Blindaje a carcasa

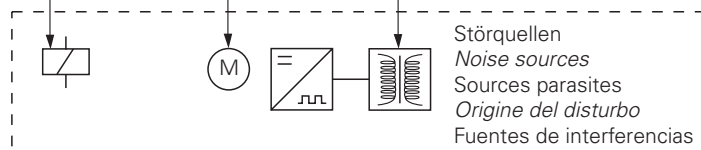

DR. JOHANNES HEIDENHAIN GmbH

Dr.-Johannes-Heidenhain-Straße 5

83301 Traunreut, Germany

☎ +49 (8669) 31-0

FAX +49 (8669) 5061

E-Mail: info@heidenhain.de

Technical support FAX +49 (8669) 31-1000

Measuring systems ☎ +49 (8669) 31-31 04

E-Mail: service.ms-support@heidenhain.de

TNC support ☎ +49 (8669) 31-31 01

E-Mail: service.nc-support@heidenhain.de

NC programming ☎ +49 (8669) 31-31 03

E-Mail: service.nc-pgm@heidenhain.de

PLC programming ☎ +49 (8669) 31-31 02

E-Mail: service.plc@heidenhain.de

Lathe controls ☎ +49 (7 11) 95 28 03-0

E-Mail: service.hsf@heidenhain.de

www.heidenhain.de

KUPPA1:12








Ve 00

560 300-91 · 10 · 11/2006 · H · Printed in Germany · Änderungen vorbehalten



Subject to change without notice · Sous réserve de modifications · Con riserva di modifiche · Sujeto a modificaciones



Maße in mm
Dimensions in mm
Cotes en mm
Dimensioni in mm
Dimensiones en mm

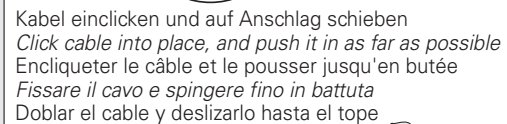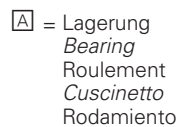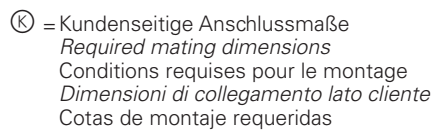

–30 ... 80 °C
(–22 ... 176 °F)



$$T \geq -40^{\circ}\text{C}$$
$$(-40^{\circ}\text{F})$$


/

Ø 8 mm

 $R_1 \geq 40 \text{ mm}$
$$R_2 \geq 100 \text{ mm}$$

a)

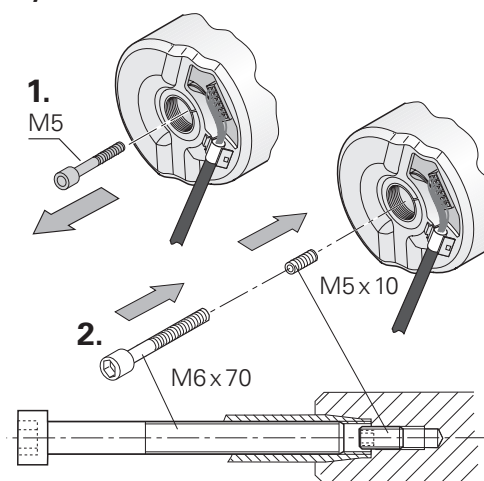

b)

