

**R50i Static Alignment  
Mounting instructions**


**Verify the following items were received:**

- R50i Encoder**
- Mounting Screws – 2 each**
- Cover**
- Setscrew wrench (1 per shipping tray)**

**Additional Items needed to complete installation:**

- Cable Assembly (Purchased separately)**
- Mounting screw wrench (Not included)**
- Servo cleats (not included)**


**Step 1:**

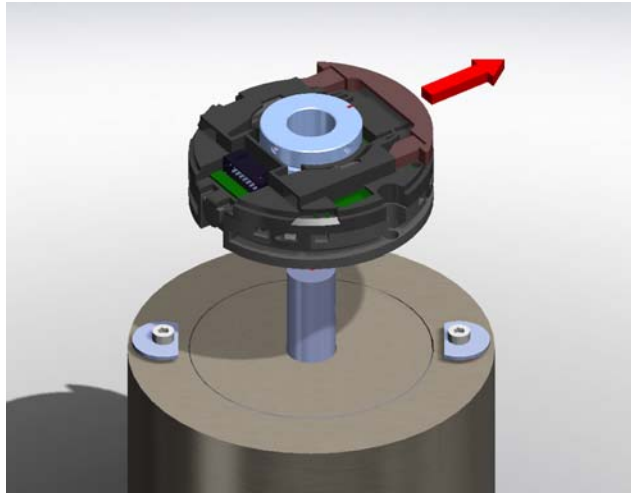

**Figure 1**

**Energize appropriate motor windings to lock shaft. Verify slide is fully extended. If needed, apply threadlocker to mounting holes. Loosely install servo cleats with flat side facing shaft. Rotate hub so line on hub is 180° from connector. Slide encoder over motor shaft as shown in Figure 1.**

**Step 2:**

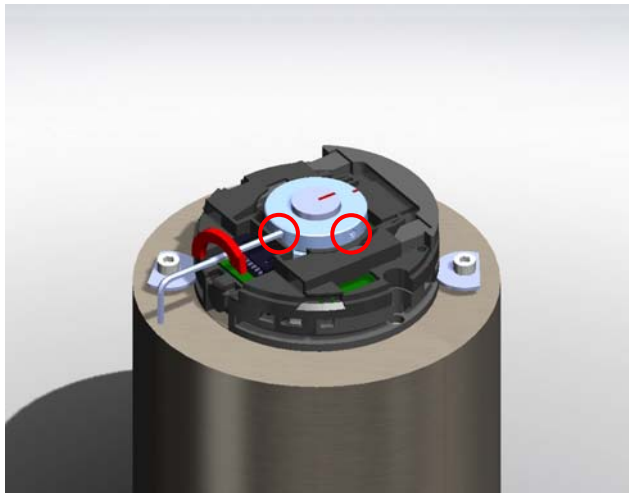

**Figure 2**

**Rotate servo cleats to position shown in figure 2. Housing should be allowed to rotate, but not lift up. Torque both set screws to 20 oz-in.**


This document is the property of RENCO Encoders and is submitted in confidence. Disclosure, reproduction or publication without written authorization is prohibited.

542543

Change:

Release-no.	Created	Responsible	Released	Version	Rev.	Sheet	Page
<b>04740</b>	Rhodes	Rhodes	Rhodes	<b>D655977 - 00 - B - 01</b>			1/
	05.06.2009	31.07.2009	31.07.2009	Document no.			2


**Step 3:**

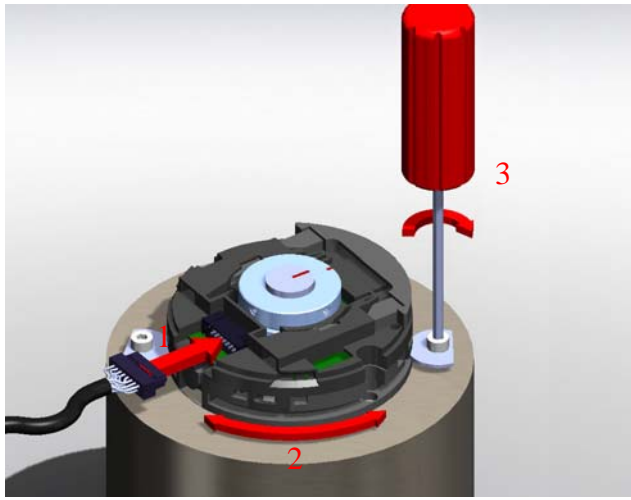

**Figure 3**

Install the encoder cable (1). Rotate encoder body until a transition on U. Rotate the opposite direction until the opposite transition. Find the midpoint (2), then torque the mounting screws to 40 oz-in (3).


**Step 4:**

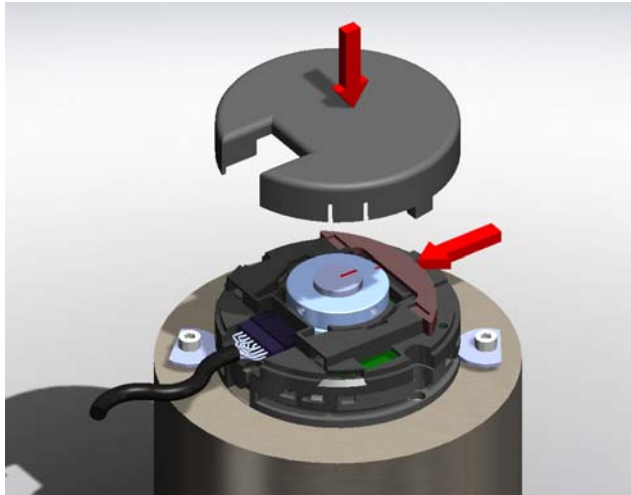

**Figure 4**

Push in slide and install cover.

**Step 5:**

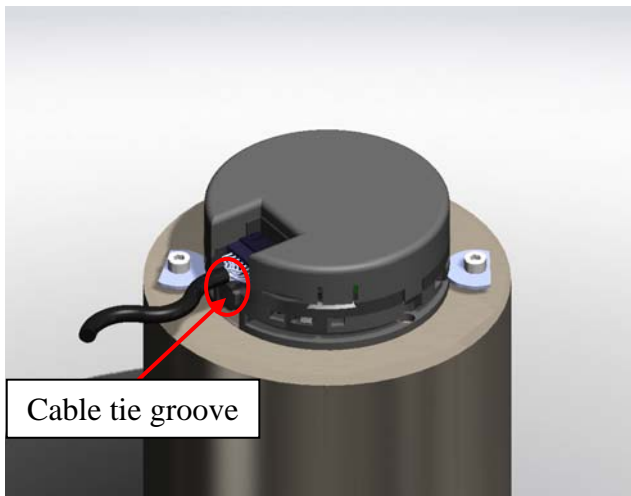

**Figure 5**

Add cable tie for strain relief if desired.

	Release-no.		Created	Responsible	Released		Version	Rev.	Sheet	Page
	<b>04740</b>	Name	Rhodes	Rhodes	Rhodes	<b>D655977</b>	<b>- 00 - B - 01</b>			2/
		Date	05.06.2009	31.07.2009	31.07.2009		Document no.			2

